

DL06 Micro PLC User Manual



Please include the Manual Number and the Manual Issue, both shown below, when communicating with Technical Support regarding this publication.

Manual Number: D0-06USER-M
Issue: 3rd Edition, Rev. I
Issue Date: 10/24

Publication History		
Issue	Date	Description of Changes
First Edition	7/02	Original
Rev. A	10/02	Updated drawing images and made minor corrections.
Rev. B	6/03	Added new PLC and made numerous corrections.
2nd Edition	3/04	Added two appendices, removed discrete module data and made numerous corrections.
3rd Edition	3/07	Corrected all tables, many corrections to Chapters 2, 3, 4, 5, 6, and 7; Chapter 3 (HSIO) was moved to the Appendices and Chapter 4 was divided into Chapters 3 & 4; added DS5 Intelligent Boxes to Chapter 5; added Ramp/Soak example to Chapter 8; Numbering Systems and Serial Communications were added to Appendices; many minor corrections were made throughout manual.
Rev. A	5/07	Minor corrections and updates.
Rev. B	6/11	Updated Chapter 5 with current <i>DirectSOFT</i> dialog views, corrected number of registers needed to use the print message instruction, removed fuses and corrected I/O wiring drawings, and other minor corrections and updates.
Rev. C	2/13	Added H0-CTRIO2 references. Minor corrections and updates. Added transient suppression for inductive loads.
Rev. D	6/16	Corrections and updates.
Rev. E	8/18	Corrections, updates, removed mention of the DA-EU-M from Appendix J.
Rev. F	3/19	Corrections and updates
Rev. G	3/20	Corrections and updates.
Rev. H	5/22	Corrected image text ch2-22, 2-23
Rev. I	10/24	Removed Type 1 fonts. Added footer hyperlinks.