


TABLE OF CONTENTS

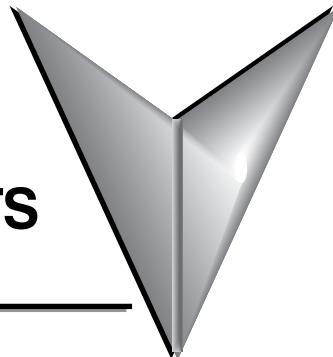

Chapter 1 - Getting Started

Introduction.....	1-2
The Purpose of this Manual.....	1-2
Supplemental Manuals	1-2
Technical Support.....	1-2
Conventions Used.....	1-2
Key Topics for Each Chapter	1-2
Selecting the Proper Module.....	1-3
DL05.....	1-3
DL06.....	1-3
Module Choices.....	1-3
Module Choices, continued.....	1-4
Installing the Option Modules	1-5
Remove the Slot Cover.....	1-5
Insert the Module.....	1-5
Module LED Indicator	1-6
Power Budgeting.....	1-6
Power supplied	1-6
Power required by base unit	1-6
Power required by option cards	1-6

Chapter 2 - Discrete I/O Guidelines

Safety Guidelines.....	2-2
Plan for Safety.....	2-2
Three Levels of Protection.....	2-3
Emergency Stops	2-3
Emergency Power Disconnect	2-4

Table of Contents

Orderly System Shutdown	2-4
Class 1, Division 2 Approval (Applies ONLY to modules used with a DL06 PLC.)	2-4
System Wiring Strategies	2-5
PLC Isolation Boundaries.....	2-5
I/O "Common" Terminal Concepts	2-8
Connecting DC I/O to Solid State Field Devices.....	2-9
Solid State Input Sensors.....	2-9
Solid State Output Loads	2-9
Relay Output Guidelines.....	2-11
Prolonging Relay Contact Life	2-11
Surge Suppression For Inductive Loads	2-12
Prolonging Relay Contact Life	2-13
DC Input Wiring Methods	2-14
DC Output Wiring Methods.....	2-14
Firmware and Software.....	2-14
I/O Addressing	2-15
Module I/O Points and Addressing for the DL05 and DL06	2-15
All Discrete Modules Installed I/O Addressing Example:.....	2-16
Discrete and Analog Modules Installed I/O Addressing Example:.....	2-16
Discrete and Analog Modules Installed I/O Addressing Example:.....	2-16
Discrete I/O General Specifications	2-17
Glossary of Specification Terms	2-18
F0-08SIM 8-Point Simulator Input Module	2-19
D0-10ND3 10-Point DC Input Module.....	2-20
D0-10ND3F 10-Point DC Fast Input Module	2-21
D0-16ND3 16-Point DC Input Module.....	2-22
F0-08NA-1 8-Point AC Input Module.....	2-23
D0-10TD1 10-Point DC Output Module.....	2-24
D0-16TD1 16-Point DC Output Module.....	2-25
D0-10TD2 10-Point DC Output Module.....	2-26
D0-16TD2 16-Point DC Output Module.....	2-27
D0-07CDR 4-Point DC Input, 3-Point Relay Output Module	2-28
D0-08TR 8-Point Relay Output Module	2-29

D0-08CDD1 4-Point DC Input, 4-Point DC Output Module.....	2-30
F0-04TRS 4-Point Relay Output Module	2-31

Chapter 3 - F0-04AD-1, 4-Channel Analog Current Input

Module Specifications.....	3-2
Setting the Module Jumper	3-4
Connecting and Disconnecting the Field Wiring	3-4
Wiring Guidelines	3-4
Wiring Diagram.....	3-5
Current Loop Transmitter Impedance	3-5
Module Operation.....	3-6
Channel Scanning Sequence.....	3-6
Analog Module Updates.....	3-6
Special V-memory Locations	3-7
Formatting the Module Data.....	3-7
DL05 Data Formatting.....	3-7
Structure of V7700	3-7
Structure of V7701	3-7
DL06 Data Formatting.....	3-8
Setup Data Type and Number of Channels	3-8
Storage Pointer Setup	3-8
Using the Pointer in Your Control Program	3-9
DL05 Pointer Method.....	3-9
DL06 Pointer Method	3-10
Detecting Input Signal Loss.....	3-11
Analog Signal Loss.....	3-11
Scale Conversions	3-11
Scaling the Input Data.....	3-11
The Conversion Program.....	3-12
Analog and Digital Value Conversions	3-12
Special Relays.....	3-13
DL05 Special Relays	3-13
DL06 Special Relays	3-13

Table of Contents

Module Resolution.....	3-15
Analog Data Bits.....	3-15
Resolution Details.....	3-15
Analog Input Ladder Logic Filter	3-16
PID Loops / Filtering:.....	3-16
Smoothing the Input Signal (DL06 only):	3-16
Using Binary Data Format.....	3-16
Using BCD Data Format	3-17

Chapter 4 - F0-08ADH-1, 8-Channel Analog Current Input

Module Specifications.....	4-2
Connecting and Disconnecting the Field Wiring	4-4
Wiring Guidelines	4-4
Wiring Diagram	4-5
Current Loop Transmitter Impedance	4-5
Module Operation	4-6
Channel Scanning Sequence.....	4-6
Analog Module Updates.....	4-6
Special V-memory Locations	4-7
Formatting the Analog Module Data	4-7
DL05 Data Formatting.....	4-7
Setup Data Type and Number of Active Channels	4-7
Storage Pointer Setup	4-7
DL06 Data Formatting.....	4-8
Setup Data Type and Number of Active Channels	4-8
Storage Pointer Setup	4-8
Using the Pointer in Your Control Program	4-9
DL05 Pointer Method Using Conventional Ladder Logic	4-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT5	4-9
DL06 Pointer Method Using Conventional Ladder Logic	4-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT6	4-11

Scale Conversions	4-11
Scaling the Input Data.....	4-11
The Conversion Program in Standard Ladder Logic.....	4-12
Analog and Digital Value Conversions.....	4-13
Module Resolution	4-14
Analog Data Bits.....	4-14
Resolution Details.....	4-14
Analog Input Ladder Logic Filter	4-15
PID Loops / Filtering.....	4-15
Smoothing the Input Signal (DL06 only)	4-15
Binary Data Format Filter Using Ladder Logic	4-15
BCD Data Format Filter Using Ladder Logic	4-16
Example Code to Scale a 4-20 mA Signal to 0-1000 BCD	4-17
Example Code to Scale a 4-20 mA Signal to 0-1000 Binary	4-18

Chapter 5 - F0-04AD-2, 4-Channel Analog Voltage Input

Module Specifications.....	5-2
Setting the Module Jumpers.....	5-4
Connecting and Disconnecting the Field Wiring	5-5
Wiring Guidelines	5-5
Wiring Diagram	5-5
Module Operation	5-6
Input Channel Update Sequence	5-6
Analog Module Updates.....	5-6
Special V-memory Locations	5-7
Formatting the Module Data.....	5-7
DL05 Data Formatting.....	5-7
Structure of V7700	5-7
Structure of V7701	5-7
DL06 Data Formatting.....	5-8
Setup Data Type and Number of Channels	5-8
Storage Pointer Setup	5-8

Table of Contents

Using the Pointer in Your Control Program	5-9
DL05 Pointer Method	5-9
DL06 Pointer Method	5-10
Scale Conversions.....	5-11
Scaling the Input Data.....	5-11
The Conversion Program.....	5-12
Analog and Digital Value Conversions.....	5-13
Module Resolution.....	5-14
Analog Data Bits.....	5-14
Resolution Details.....	5-14
Analog Input Ladder Logic Filter	5-15
PID Loops / Filtering:.....	5-15
Smoothing the Input Signal (DL06 only):	5-15
Using Binary Data Format.....	5-15
Using BCD Data Format	5-16

Chapter 6 - F0-08ADH-2, 8-Channel Analog Voltage Input

Module Specifications.....	6-2
Setting the Module Jumpers.....	6-4
Locating the jumpers	6-4
Setting the appropriate jumper	6-4
Connecting and Disconnecting the Field Wiring	6-5
Wiring Guidelines	6-5
Wiring Diagram	6-6
Module Operation	6-7
Channel Scanning Sequence.....	6-7
Analog Module Updates.....	6-7
Special V-memory Locations	6-8
Formatting the Analog Module Data	6-8
DL05 Data Formatting.....	6-8
Setup Data Type and Number of Active Channels	6-8
Storage Pointer Setup	6-8
DL06 Data Formatting.....	6-9
Setup Data Type and Number of Active Channels	6-9
Storage Pointer Setup	6-9

Using the Pointer in Your Control Program	6-10
DL05 Pointer Method Using Conventional Ladder Logic	6-10
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT5	6-10
DL06 Pointer Method Using Conventional Ladder Logic	6-11
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT5	6-12
Scale Conversions.....	6-12
Scaling the Input Data.....	6-12
The Conversion Program in Standard Ladder Logic.....	6-13
Analog and Digital Value Conversions.....	6-14
Module Resolution.....	6-15
Analog Data Bits.....	6-15
Resolution Details.....	6-15
Analog Input Ladder Logic Filter.....	6-16
PID Loops / Filtering.....	6-16
Smoothing the Input Signal (DL06 only)	6-16
Binary Data Format Filter Using Ladder Logic	6-16
Using BCD Data Format	6-17

Chapter 7 - F0-04DAH-1, 4-Channel Analog Current Output

Module Specifications.....	7-2
Connecting and Disconnecting the Field Wiring	7-4
Wiring Guidelines	7-4
Wiring Diagram.....	7-5
Module Operation	7-6
Channel Scanning Sequence	7-6
Special V-memory Locations	7-7
Formatting the Analog Module Data	7-7
DL05 Data Formatting.....	7-7
Data Type and Number of Active Channels Setup	7-7
Storage Pointer Setup	7-7
DL06 Data Formatting.....	7-8
Data Type and Number of Active Channels Setup	7-8
Storage Pointer Setup	7-8

Table of Contents

Using the Pointer in Your Control Program	7-9
DL05 Pointer Method Using Conventional Ladder Logic	7-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT5	7-9
DL06 Pointer Method Using Conventional Ladder Logic	7-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT5	7-11
Output Scale Conversion	7-11
Calculating the Digital Output Value.....	7-11
The Conversion Program in Standard Ladder Logic.....	7-12
Analog and Digital Value Conversions.....	7-13
Module Resolution.....	7-14
Analog Data Bits.....	7-14
Resolution Details.....	7-14

Chapter 8 - F0-08DAH-1, 8-Channel Analog Current Output

Module Specifications.....	8-2
Connecting and Disconnecting the Field Wiring	8-4
Wiring Guidelines	8-4
Wiring Diagram	8-5
Module Operation	8-6
Channel Scanning Sequence.....	8-6
Special System V-memory Locations.....	8-7
Formatting the Analog Module Data	8-7
DL05 Data Formatting.....	8-7
Data Type and Number of Active Channels Setup	8-7
Storage Pointer Setup	8-7
DL06 Data Formatting.....	8-8
Data Type and Number of Active Channels Setup	8-8
Storage Pointer Setup	8-8
Using the Pointer in Your Control Program	8-9
DL05 Pointer Method Using Conventional Ladder Logic	8-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT6	8-9
DL06 Pointer Method Using Conventional Ladder Logic	8-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT5	8-11

Output Scale Conversion	8-11
Calculating the Digital Output Value.....	8-11
The Conversion Program in Standard Ladder Logic.....	8-12
Analog and Digital Value Conversions.....	8-13
Module Resolution	8-14
Analog Data Bits.....	8-14
Resolution Details.....	8-14

Chapter 9 - F0-04DAH-2, 4-Channel Analog Voltage Output

Module Specifications.....	9-2
Connecting and Disconnecting the Field Wiring	9-4
Wiring Guidelines	9-4
Wiring Diagram.....	9-5
Module Operation	9-6
Channel Scanning Sequence.....	9-6
Special V-memory Locations	9-7
Formatting the Analog Module Data	9-7
DL05 Data Formatting.....	9-7
Data Type and Number of Active Channels Setup	9-7
Storage Pointer Setup	9-7
DL06 Data Formatting.....	9-8
Data Type and Number of Active Channels Setup	9-8
Storage Pointer Setup	9-8
Using the Pointer in Your Control Program	9-9
DL05 Pointer Method Using Conventional Ladder Logic	9-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT6	9-9
DL06 Pointer Method Using Conventional Ladder Logic	9-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT6	9-11
Output Scale Conversion	9-11
Calculating the Digital Output Value.....	9-11
The Conversion Program in Standard Ladder Logic.....	9-12
Analog and Digital Value Conversions.....	9-13

Table of Contents

Module Resolution.....	9-14
Analog Data Bits.....	9-14
Resolution Details.....	9-14
 Chapter 10 - F0-08DAH-2, 8-Channel Analog Voltage Output	
Module Specifications.....	10-2
Connecting and Disconnecting the Field Wiring	10-4
Wiring Guidelines	10-4
Wiring Diagram.....	10-5
Module Operation.....	10-6
Channel Scanning Sequence.....	10-6
Special V-memory Locations	10-7
Formatting the Analog Module Data	10-7
DL05 Data Formatting.....	10-7
Data Type and Number of Active Channels Setup	10-7
Storage Pointer Setup	10-7
DL06 Data Formatting.....	10-8
Data Type and Number of Active Channels Setup	10-8
Storage Pointer Setup	10-8
Using the Pointer in Your Control Program	10-9
DL05 Pointer Method Using Conventional Ladder Logic	10-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT6	10-9
DL06 Pointer Method Using Conventional Ladder Logic	10-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT6	10-11
Output Scale Conversion	10-11
Calculating the Digital Output Value.....	10-11
The Conversion Program in Standard Ladder Logic.....	10-12
Analog and Digital Value Conversions.....	10-13
Module Resolution.....	10-14
Analog Data Bits.....	10-14
Resolution Details.....	10-14

Chapter 11 - F0-4AD2DA-1, 4-Channel In/2-Ch. Out Analog Current Combination

Module Specifications.....	11-2
Setting the Module Jumper	11-4
Connecting and Disconnecting the Field Wiring	11-5
Wiring Guidelines	11-5
Wiring Diagram.....	11-6
Current Loop Transmitter Impedance	11-6
Module Operation	11-7
Input/Output Channel Update Sequence.....	11-7
Analog Module Updates.....	11-7
Special V-memory Locations	11-8
Formatting the Module Data.....	11-8
DL05 Data Formatting.....	11-8
Structure of V7700	11-8
Structure of V7701	11-8
Structure of V7702	11-9
DL06 Data Formatting.....	11-10
Setup Data Type and Number of Channels	11-10
Input Storage Pointer Setup	11-10
Output Storage Pointer Setup	11-10
Using the Pointer in Your Control Program	11-11
DL05 Pointer Method.....	11-11
DL06 Pointer Method.....	11-12
Scale Conversions	11-13
Scaling the Input Data.....	11-13
The Conversion Program.....	11-14
Output Conversion Program	11-14
Analog and Digital Value Conversions.....	11-15
Special Relays.....	11-16
DL05 Special Relays	11-16
DL06 Special Relays	11-16

Table of Contents

Module Resolution.....	11-18
Analog Data Bits.....	11-18
Resolution Details.....	11-18
Analog Input Ladder Logic Filter.....	11-19
PID Loops / Filtering.....	11-19
Smoothing the Input Signal (DL06 only)	11-19
Using Binary Data Format.....	11-19
Using BCD Data Format	11-20

Chapter 12 - F0-2AD2DA-2, 2-Channel In/2-Ch. Out Analog Voltage Combination

Module Specifications.....	12-2
Setting the Module Jumpers.....	12-4
Connecting and Disconnecting the Field Wiring	12-5
Wiring Guidelines	12-5
Wiring Diagram	12-5
Module Operation.....	12-6
Input/Output Channel Scanning Sequence.....	12-6
Analog Module Updates.....	12-6
Special V-memory Locations	12-7
Formatting the Module Data.....	12-7
DL05 Data Formatting.....	12-7
Structure of V7700	12-7
Structure of V7701	12-7
Structure of V7702	12-8
DL06 Data Formatting.....	12-9
Setup Data Type and Number of Channels	12-9
Input Storage Pointer	12-9
Output Storage Pointer	12-9
Using the Pointer in Your Control Program	12-10
DL05 Pointer Method	12-10
DL06 Pointer Method	12-11
Scale Conversions.....	12-12
Scaling the Input Data.....	12-12

The Conversion Program.....	12-13
Output Conversion Program	12-13
Analog and Digital Value Conversions.....	12-14
Module Resolution	12-15
Analog Data Bits.....	12-15
Analog Input Ladder Logic Filter	12-16
PID Loops / Filtering.....	12-16
Smoothing the Input Signal (DL06 only)	12-16
Using Binary Data Format.....	12-16
Using BCD Data Format	12-17

Chapter 13 - F0-4AD2DA-2, 4-Channel In/2-Ch. Out Analog Voltage Combination

Module Specifications.....	13-2
Setting the Module Jumpers	13-4
Connecting and Disconnecting the Field Wiring	13-5
Wiring Guidelines	13-5
Wiring Diagram	13-5
Module Operation	13-6
Input/Output Channel Update Sequence.....	13-6
Analog Module Updates.....	13-6
Special V-memory Locations	13-7
Formatting the Module Data.....	13-7
DL05 Data Formatting.....	13-7
Structure of V7700	13-7
Structure of V7701	13-7
Structure of V7702	13-8
DL06 Data Formatting.....	13-9
Setup Data Type and Number of Channels	13-9
Input Storage Pointer Setup	13-9
Output Storage Pointer Setup	13-9
Using the Pointer in Your Control Program	13-10
DL05 Pointer Method.....	13-10
DL06 Pointer Method.....	13-11

Table of Contents

Scale Conversions.....	13-12
Scaling the Input Data.....	13-12
The Conversion Program.....	13-13
Output Conversion Program	13-13
Analog and Digital Value Conversions.....	13-14
Module Resolution.....	13-15
Analog Data Bits.....	13-15
Resolution Details.....	13-15
Analog Input Ladder Logic Filter	13-16
PID Loops / Filtering.....	13-16
Smoothing the Input Signal (DL06 only)	13-16
Using Binary Data Format.....	13-16
Using BCD Data Format	13-17

Chapter 14 - F0-04RTD, 4-Channel RTC Input

Module Specifications.....	14-2
Module Calibration	14-3
Input Specifications.....	14-3
Connecting and Disconnecting the Field Wiring	14-4
Wiring Guidelines	14-4
RTD - Resistance Temperature Detector.....	14-4
Ambient Variations in Temperature.....	14-5
Wiring Diagram	14-5
Module Operation.....	14-6
Channel Scanning Sequence.....	14-6
Analog Module Update	14-6
Special V-memory Locations	14-7
Module Configuration Registers	14-7
A: Number of Channels Enabled/Data Format Register	14-7
B: Input Pointer Register.....	14-8
C: RTD Type Selection Register	14-8
D: Units Code Register.....	14-9
E: RTD Burnout Data Value Register	14-10
F: Diagnostics Error Register.....	14-10

Configuring the Module in Your Control Program	14-11
DL05 Example 1	14-11
DL05 Example 2	14-12
DL06 Example 1	14-13
DL06 Example 2	14-14
Negative Temperature Readings with Magnitude Plus Sign	14-15
Magnitude Plus Sign (Binary).....	14-15
Magnitude Plus Sign (BCD)	14-16
Negative Temperatures 2's Complement (Binary/Pointer Method).....	14-17
Analog Input Ladder Logic Filter	14-18
PID Loops / Filtering.....	14-18
Smoothing the Input Signal (DL06 only)	14-18
Using Binary Data Format.....	14-18
Using BCD Data Format	14-19
RTD Burnout Detection Bits.....	14-20
Special Relays Corresponding to RTD Burnouts.....	14-20

Chapter 15 - F0-04THM, 4-Channel Thermocouple Input

Module Specifications.....	15-2
Connecting and Disconnecting the Field Wiring	15-4
Wiring Guidelines	15-4
Thermocouple Input Wiring Diagram	15-4
Thermocouples	15-5
Ambient Variations in Temperature.....	15-5
Voltage Input Wiring Diagram	15-6
Module Operation	15-7
Channel Scanning Sequence	15-7
Analog Module Update	15-7
Special V-memory Locations	15-8
Module Configuration Registers	15-8
A: Number of Channels Enabled/Data Format Register	15-8
B: Input Pointer Register.....	15-9
C: Input Type Selection Register.....	15-9
D: Units Code Register.....	15-10

Table of Contents

E: Thermocouple Burnout Detection Enable Register.....	15-11
F: Thermocouple Burnout Data Value Register	15-11
G: Diagnostics Error Register.....	15-11
Configuring the Module in Your Control Program.....	15-12
DL05 Example 1	15-12
DL05 Example 2	15-13
DL06 Example 1	15-14
DL06 Example 2	15-15
Negative Temperature Readings with Magnitude Plus Sign	15-16
Magnitude Plus Sign (Binary).....	15-16
Magnitude Plus Sign (BCD)	15-17
Module Resolution.....	15-18
Module Resolution 16-Bit (Unipolar Voltage Input).....	15-18
Module Resolution 15-Bit Plus Sign (Bipolar Voltage Input).....	15-18
Analog Input Ladder Logic Filter	15-19
PID Loops / Filtering.....	15-19
Smoothing the Input Signal (DL06 only)	15-19
Using Binary Data Format.....	15-19
Using BCD Data Format	15-20
Thermocouple Burnout Detection Bits.....	15-21
Special Relays Corresponding to Thermocouple Burnouts.....	15-21