

Table of Contents

Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Chapters	1-3
DirectVIEW 1000 Data Access Unit Overview	1-3
DirectVIEW™ 1000 Features	1-4
Getting Acquainted	1-4
Display	1-5
Keypad	1-5
Cables	1-5
Software Examples on Disk	1-5
<i>DirectSOFT</i> Support	1-5
Display and Keypad Basics	1-6
Clear V-Memory First!	1-6
Keypad	1-6
Keypad Conventions Used in this Manual	1-6
CHG PRE Key (Change Preset)	1-7
MSG Key (Message)	1-7
STAT Key (Status)	1-7
CURSOR and +/- Keys	1-7
OPT Key (Optional Modes)	1-8
CLEAR and ENTER Keys	1-8
Setup Parameters, the Key to DV-1000 Success!	1-9
Purpose of Setup Parameters	1-9
Programming Setup Parameters	1-9
Quick Tour of DV-1000 Operation	1-10
Status Display Mode	1-10
Message Display Mode	1-11
Change Preset Mode	1-12
Bit Control Mode	1-13
Operator Interface Design Basics	1-14
Man-Machine Interface	1-14
Monitor and Control	1-15
Purposes of Monitoring	1-15
Purposes of Control	1-15
Frequently Asked Questions	1-16
Specifications	1-18

Chapter 2: Installation Guide

Introduction	2-2
Step 1: Choosing Single or Dual DV-1000s	2-2
Dual DV-1000 Operating Characteristics	2-3
DL130, DL230 Connection	2-3
DL240 Connection	2-3
DL250, DL350, DL430, DL440, DL450 Connection	2-3
Step 2: PLC Selection	2-4
Step 3: Selecting a Mounting Location	2-5
Step 4: Panel Mounting	2-6
Step 5: Cable Selection	2-7
DL105, DL205, DL350, DL450 Connection	2-7
DL430, DL440 Connection	2-7
Custom Cables	2-8
Step 6: Connecting the DV-1000 to the CPU	2-9
Step 7: Installing the Example Programs	2-9
Step 8: Starting DirectSOFT	2-11
Initialize the CPU	2-11
Loading an Example Program	2-11

Chapter 3: DV-1000 Setup Parameters

Overview	3-2
Purpose of Setup Parameters	3-2
Location of Setup Parameters	3-2
Types of Setup Parameters	3-2
How the DV-1000 Uses Setup Parameters	3-3
Setup Parameter Ladder Rung	3-3
Parameter Definitions	3-4
V-Memory Maps	3-6
Entering Setup Parameters	3-7
Methods for Entering the Setup Parameters	3-7
Parameter Setup By Ladder Program	3-7
Using the LDA Instruction for Pointer Setup Parameters	3-8
Powerup Default Operational Mode	3-9
Powerup Default Setup Parameter	3-9
Powerup Sequence	3-10
Powerup Default Example Program	3-11
Chapter Summary	3-12
Summary of Key Points	3-12

Chapter 4: Message Display Mode

Overview	4-2
Feature List	4-2
Message Priority	4-2
System Requirements for Example Programs	4-3
DL405 Requirements	4-3
DL350 Requirements	4-3
DL205 Requirements	4-4
DL105 Requirements	4-4
System Messages	4-5
Selecting Message Mode	4-5
Fault Instruction Message	4-5
System Error Display	4-6
Viewing Message Logs (DL240, DL250, DL350, DL440 and DL450 Only)	4-6
Fault Message Log (DL240, DL250, DL350, DL440 and DL450 Only)	4-7
System Error Log (DL240, DL250, DL350, DL440 and DL450 Only)	4-8
User Messages	4-9
Setup Parameters for User Messages	4-10
Message Data Parameters	4-10
Choosing Data Block Locations	4-10
Ladder Example for Message Setup Parameters	4-11
Parameter Setup Program #1	4-11
Displaying Numbers	4-13
Displaying Changing Values	4-14
Displaying Text	4-15
ASCII Codes	4-15
Using LDD and OUTD Instructions	4-17
Turning Data into Messages	4-19
Numbering of Display Positions	4-19
Display Maps	4-19
How Message Data Gets to the Display	4-20
Combined Numeric and Text Displays	4-21
Parameter Setup Program #2	4-22
Unmasking Numeric Positions	4-23
Placing Numbers and Text Together	4-24
Using the ASCII Constant (ACON) Instruction	4-25
ACON Example Program #1	4-26
Choosing ACON Box Text Length	4-27
ACON Example Program #2	4-29

Continued, next page

Chapter 4, continued

Message Display Applications and Techniques	4-32
Multiple Message Displays	4-32
Dynamic Text	4-36
Blinking Text	4-38
Polarity Sign for Numeric Output	4-41
Embedded Time and Date (DL240, DL250, DL350, DL440 and DL450 Only)	4-44
Bar Graph Example, (DL240, DL250, DL350, DL440 and DL450 Only)	4-49
Bar Graph Example, DL240 Analog Potentiometers	4-53
Automatic Scrolling Display, (DL240, DL250, DL350, DL440 and DL450 Only)	4-57
Embedded Decimal Point	4-62
Chapter Summary	4-65
Summary of Key Points	4-65

Chapter 5: Status Display Mode

Overview	5-2
Status Display Format	5-2
Selecting Byte or Word Displays	5-3
Selecting the Address	5-4
Selecting the Data Type	5-5
Using the Bookmark	5-6
Chapter Summary	5-7
Summary of Key Points	5-7

Chapter 6: Change Preset Mode

Overview	6-2
“Change Preset” Defined	6-2
How Change Preset Works	6-2
Title and Data Fields	6-3
Preset Title Types Available	6-3
Setup Parameters for Change Preset Mode	6-4
Location of Preset Variable Lists	6-4
Pointer and Block Sizes	6-4
Change Preset Setup Program	6-5
Establishing the Lists	6-6
Accessing Change Preset Variables	6-8
Selecting the List to Display	6-8
Cursor Positioning On Title or Data	6-9
Changing the Preset Value	6-9
Pre-labeled Timer and Counter Presets	6-10
Scrolling Through Change Preset Lists	6-12
Using Presets With Timer Box Instructions	6-13
Using Presets With Counter Box Instructions	6-13
User-titled Presets	6-14
User-Titled Text Labels	6-14
Default User Title List	6-17
User-titled Text Example	6-19
Individual Default User Titles	6-22
Combination Titles Example	6-25
Change Preset Password	6-28
Unlocking Access to Change Presets	6-28
Locking Access to Change Presets	6-29
Forgot the Password?	6-29
Special Topics for Change Presets	6-30
Timer and Counter Presets with Custom Titles	6-30
Buffered Preset Values	6-31
Operator’s Guide to Change Preset Mode	6-32
Selecting the List to Display	6-32
Cursor Positioning On Title or Data	6-32
Scrolling Through Change Preset Lists	6-33
Changing the Preset Value	6-33
Entering a Password	6-33
Locking Access to Change Presets	6-33
Chapter Summary	6-34
Summary of Key Points	6-34

Chapter 7: Bit Control Mode

Overview	7-2
Keypad Function in Bit Control	7-3
Accessing Bit Control	7-3
Setup Parameters for Bit Control	7-4
Using the Keypad To Do Bit Control	7-6
Selecting Bit Control and Status Modes	7-6
Keypad Bit Mapping	7-7
Exiting Bit Control Mode	7-8
Bit Control Applications	7-9
I/O Debug	7-9
Bit Control With Message Display Mode	7-11
Multiplexed Bit Control	7-15
Bit Control Toggle Function	7-17
Chapter Summary	7-18
Summary of Key Points	7-18

Appendix A: Troubleshooting Guide

Troubleshooting Guide	A-2
------------------------------------	------------

Appendix B: Reference Data

Setup Parameter Tables	B-2
ASCII Table	B-4

Appendix C: DV-1000 Worksheets

Message Display Worksheets	C-2
Fault Messages	C-2
Message Display Output Maps	C-3
Display Output Grids	C-4
Change Preset Worksheet	C-5
Create Title Lists	C-5
Timer and Counter Numbering Conversion Chart	C-6

Index