



TABLE OF CONTENTS

Chapter 1 - Introduction

Introduction	1-2
The Purpose of this Manual	1-2
Who Can and Should Use Direct SOFT6.....	1-2
Only One Direct SOFT6 Version.....	1-3
Supplemental Manuals	1-4
Technical Support.....	1-4
Conventions Used.....	1-5
Menu Selections and Keystrokes.....	1-5
Key Topics for Each Chapter	1-5

Chapter 2 - Quick Start

Getting to Know Windows.....	2-2
System Requirements.....	2-2
Power Supply.....	2-2
Direct SOFT6 Package Contents.....	2-2
Installation of DirectSOFT6	2-3
Step 1: Load the CD	2-3
Step 2: Exit all other Windows Applications.....	2-3
Step 3: Enter the Product Key Code	2-4
Step 4: Installing an Upgrade	2-4
Step 5: License Agreement	2-5
Step 6: Enter the Customer Information.....	2-5
Step 7: Select the Type of Installation.....	2-6
Step 8: Ready to Install.....	2-6

Table of Contents

Step 9: Installation is Complete	2-7
If an Upgrade	2-7
Getting Started.....	2-8
Welcome to DirectSOFT100.....	2-11
What is Direct SOFT100?.....	2-11
Using Direct SOFT100?	2-12
Begin Editing a Program	2-13
Step 1: Start a New Project	2-13
Step 2: Select Edit Mode	2-16
Step 3: Enter an Input Element.....	2-18
Step 4: Enter an Output Element	2-19
Step 5: Enter the End Rung.....	2-20
Establish the Communication Link	2-23
Connect the PC to the PLC	2-23
Step 1: Select the Port.....	2-23
Step 2: Select the PLC	2-24
Step 3: Choose the Protocol and Node Address	2-24
Step 4: Name the Link.....	2-25
Monitor the Program.....	2-29

Chapter 3 - Managing Projects

Get Started Using DirectSOFT6	3-2
Understanding the Launch Window	3-2
Create a New Project	3-4
New Program	3-4
Enter the New Project Information.....	3-4
Importing Projects.....	3-5
Program Documentation Mapping from TISOFT and Logicmaster	3-6
Copy or Save Existing DirectSOFT Files.....	3-7

Chapter 4 - Programming Environment

Offline Toolbar Components	4-2
Offline Toolbar	4-2

Table of Contents

Online Toolbar Components.....	4-5
Online Toolbar	4-5
Additional Toolbars	4-6
The File Toolbar	4-7
The Edit Toolbar.....	4-8
The Search Toolbar	4-9
The View Toolbar.....	4-10
The Tools Toolbar.....	4-11
The PLC Toolbar	4-12
The PLC Diagnostics Toolbar.....	4-13
The PLC Setup Toolbar	4-13
The Debug Toolbar	4-15
The Window Toolbar	4-16
The Help Toolbar	4-17
The Custom Toolbar	4-17
PLC System Information	4-19
Communication/Link Information.....	4-20
PLC Mode	4-20
Program Memory Usage.....	4-20
PLC Type	4-20
Program Cursor Location.....	4-20
The Options Dialog.....	4-21
Ladder Options.....	4-22
Global Options	4-23
Colors in DirectSOFT6	4-24
Select New Colors.....	4-24
Color Selections.....	4-25
The Default Settings.....	4-25
Monochrome	4-25
Colors Conveying Information.....	4-26
Select a Theme.....	4-27
The Ladder Palette	4-28
Be Familiar with the Ladder Palette	4-28
The Split Screen Feature	4-30

Table of Contents

Split Screen Bar	4-30
The New Window Feature.....	4-31
Chapter 5 - Edit a Program	
I/O Configuration	5-2
Referencing Program Elements.....	5-4
Data Types.....	5-4
Aliases.....	5-5
Timer/Counter Current Values	5-5
Accessing I/O Points as Memory Locations	5-5
Entering Program Instructions.....	5-6
The Instruction Editor.....	5-6
Using the Ladder Palette	5-8
Opening the Instruction Browser.....	5-8
Shortcuts for Entering Instructions	5-11
Entering NO and NC Contacts	5-12
Entering Instructions in Parallel.....	5-13
Entering Power Flow Instructions.....	5-14
Entering Special Case Elements.....	5-16
End Coil.....	5-17
Setting and Resetting a Bit.....	5-18
Using Floating Point Math.....	5-18
Drawing/Deleting Connecting Lines	5-19
Drawing the Lines	5-19
Create Midline Outputs.....	5-20
Deleting Connecting Lines.....	5-20
Selecting Rungs for Deleting, Cutting or Copying	5-21
Deleting Rungs	5-22
Copying Rungs.....	5-23
Cut and Paste Rungs.....	5-25
Merge (Combine) Rungs.....	5-26
Inserting Columns, Rows and Rungs.....	5-27
Insert a Column to Add an Instruction.....	5-27

Table of Contents

Insert a Row or Rung.....	5-28
Using Search and Replace.....	5-29
Using the Object Section.....	5-29
The Search Range Section	5-30
The Document Section.....	5-30
The Object Table Section	5-30
Common Mistakes.....	5-31
Failure to Enter the Edit Mode.....	5-31
AND above a Join	5-31
Forgetting to Select Rungs.....	5-31

Chapter 6 - Documentation

Turn Documentation On and Off	6-2
The Options Dialog	6-2
Documentation Selections	6-3
General Documentation	6-3
Using the Documentation Editor	6-4
Using the Scroll Buttons.....	6-4
Copying Documentation Between Elements.....	6-5
Documenting and Assigning Nicknames	6-6
Create an Unassigned Nickname	6-6
Assign the Nickname to an Element	6-6
Entering Rung Comments	6-9
Comments are Free-form.....	6-9
Selecting Rungs for Comments.....	6-9
Using the Scroll Buttons.....	6-10
Use the Editing Keys.....	6-10
Move Rung Comments	6-11
Entering Stage Comments.....	6-12
Use Stage View.....	6-12
Comments are Free-form.....	6-13
Selecting Stages to Comment	6-13
Editing the Comments	6-13

Table of Contents

Importing and Exporting	6-14
Exporting Program Documentation.....	6-14
Export Element Documentation.....	6-16
Export Rung Comments.....	6-18
Importing a Program.....	6-19
Importing Element Documentation	6-22
Importing Program Comments.....	6-24
Insert Instructions	6-24
Restore.....	6-27
Prevent Documentation Loss.....	6-28
Save Project.....	6-28
Backup Project.....	6-29

Chapter 7 - Other Views

Tabbed Views	7-2
The Primary Views.....	7-2
Stage (RLL^{PLUS}) View.....	7-4
Troubleshooting RLLplus vs. RLL	7-4
Stage Components.....	7-4
Mnemonic View	7-5
Handheld Programmer Aid.....	7-5
Cross Reference (XRef) View	7-6
XRef Mode	7-6
Change the XRef Query.....	7-7
XRef Toolbar.....	7-8
Usage Mode.....	7-9
Usage Mode Toolbar.....	7-9
XRef DB.....	7-10
PID View.....	7-11
PID Setup	7-11
Trend View	7-13
Creating a new Trend View.....	7-13

Table of Contents

Output Window	7-15
Bookmark	7-17
View Terminology	7-18

Chapter 8 - Printing

Print the Current View	8-2
Print the Ladder View	8-2
Other Print Views	8-3
Print Multiple Views.....	8-5
Print View Common Setup	8-7
Using Print Preview	8-8
Print Preview Setup.....	8-8
Print Preview	8-9
Print Troubleshooting	8-10
Parts of Program not Printed	8-10
Program Prints "Garbage"	8-10
DirectSOFT6 Crashes	8-10
Print Setup Dialog.....	8-11

Chapter 9 - Setup and Manage Communication Links

Establish the Communications Link	9-2
Setup a Serial Link.....	9-2
Link Status.....	9-6
Setup an Ethernet Link.....	9-7
NetEdit3 Troubleshooting Tips.....	9-12
Setup a Modem Link.....	9-14
Modem Setup.....	9-14
Configuring the Link	9-18
Comm Link Options.....	9-22
Going Online 9-24	
Connect the PLC	9-24
Use the Project Folder	9-24

Table of Contents

Use the Link	9-24
Chapter 10 - Debugging and Monitoring	
Monitor with Data View	10-2
Using Data View.....	10-2
Open a New Data View Window	10-2
A Closer Look.....	10-3
Data View Options.....	10-4
Select Bits for Display.....	10-5
Data View Documentation Options	10-7
Apply Options.....	10-7
Data View Mode Options	10-8
Make Data View Entries.....	10-8
Data Format and Size	10-10
Write the Edits.....	10-11
Auto-increment	10-12
Editing Entries	10-12
Save the Data View Window.....	10-13
Using Pause Bits.....	10-14
Use Override Bits to Control I/O (DL05, DL06, D2-240, D2-250-1, D2-260, D2-262, D3-350, D4-450, D4-454)....	10-15
Change Value Dialog	10-16
Use the Change Value Dialog.....	10-16
Specify an Element Reference or Nickname	10-17
Enter a New Value	10-18
Using the Memory Editor	10-20
Select the Locations to View	10-20
Test Mode Operations for Debugging	10-22
Select Test Mode	10-22
Test Program Operations.....	10-23
The Test Operations Window	10-24
Trap Monitor 10-25	
Access the Trap Monitor	10-25
Use with Data View.....	10-27

Table of Contents

Stack Monitor (D4-440 Only)	10-28
Access the Stack Monitor	10-28
Trend View	10-29
Using the Trend View	10-29
The Crosshair Cursor	10-30
Check <i>DirectSOFT6</i> File Revision	10-33

Appendix A - Protocols and Cable Diagrams

Protocols and Cables.....	A-2
Programming Cable Diagrams	A-6

Appendix B - Communications Troubleshooting

Communications Resources.....	B-2
Startup	B-2
USB-TO-SERIAL Devices	B-9
DUMP (used to troubleshoot SERIAL and MODEM links).....	B-10
Editing the DSxxx.ini file	B-10
Windows XP and Windows 7/8/10	B-10
Windows Vista	B-11
UAC = ON	B-11
UAC = OFF.	B-12
Other Editable Parameters	B-12
Other Possible Issues	B-15
How to Change USB-Serial Port Assignment	B-15
“PORT UNAVAILABLE OR IN USE”	B-15
Laptop AC Adapter Issue	B-15

Appendix C - Hardware - Software Compatibility Table

Hardware – Software Compatibility Table	C-2
---	-----