## DURAPULSE AC DRIVES REPLACEMENT FAN INSTALLATION



- Please read this instruction sheet thoroughly before installing these AC drive cooling fans.
- Tools required: Phillips screwdriver, needle-nose pliers (optional).
- The contents of this instruction sheet may be changed without prior notice. Please check the AutomationDirect website for the latest version: <a href="https://www.automationdirect.com">www.automationdirect.com</a>

#### **CAUTION**



Repairs to be performed only by a qualified industrial electrical technician.



Disconnect all power to the motor and lock out the power source before performing any repairs.

#### INSTALLATION INSTRUCTIONS FOR GS-FAN-1

FOR DURAPULSE DRIVES: GS3-43P0



- (1) Fan is located underneath drive, at the heatsink.
- ② Remove the two screws holding the fan and cover to the heatsink.
- ③ Using a small pair of long needle-nosed pliers, unplug the electrical connector located between the heatsink fins.
- 4 Reverse this procedure to install the new fan.

## **INSTALLATION INSTRUCTIONS FOR GS-FAN-2**

FOR DURAPULSE DRIVES: GS3-23P0, -25P0, -45P0




- (1) Fan is located underneath drive, at the heatsink.
- ② Remove the four screws holding the fan and cover to the heatsink.
- (3) Unplug the electrical connector.
- 4) Reverse this procedure to install the new fan.

#### Installation Instructions for GS-FAN-3

FOR DURAPULSE DRIVES: GS3-27P5, -2010, -2015, -47P5, -4010, -4015




- 1) The two fans are located on the top side of the drive.
- (2) Remove the drive keypad and front cover.
- (3) Remove the eight screws holding the fans and cover to the heatsink. (The four screws toward the front of the drive are self-threading, and they seat into the fan plastic. The four screws toward the rear of the drive are machine screws that seat into the drive.)

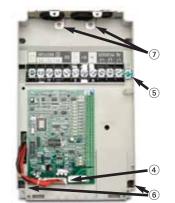

- (4) Unplug the electrical connector.
- (5) Remove the ground bolt.
- (6) Remove the two screws at the top of the plastic case.
- (7) Remove the two screws holding the cable entry plate.
- (8) Remove the plastic case (with front circuit board attached).

Remove the two screws holding the metal fan bracket to the drive heatsink.



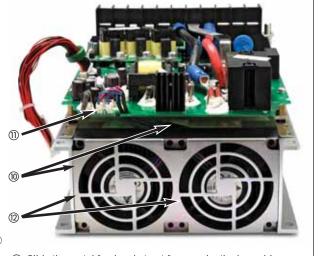

- Slide the metal fan bracket out from under the base driver board. (There may be tape attaching the bracket to the drive.)
- ① Unplug the fan electrical connectors.
- Replace the fans in the metal fan bracket.
- (3) Reverse this procedure to reassemble the drive.

#### INSTALLATION INSTRUCTIONS FOR GS-FAN-4

FOR DURAPULSE DRIVES: GS3-2020, -2025, -2030, -4020, -4025, -4030



- 1) The two fans are located on the top side of the drive.
- ② Remove the eight screws holding the fans and cover. (The two middle screws toward the back of the drive are selfthreading, and they seat into the fan plastic. The other six screws are machine screws that seat into the drive heatsink.)
- ③ Unplug the fan connectors, and replace the fans.
- (4) Reverse this procedure to reinstall the fan assembly. (Make sure to fasten the two bracket screws first.)

## **INSTALLATION INSTRUCTIONS FOR GS-FAN-5**

FOR DURAPULSE DRIVES: GS3-2040, -2050, -4040, -4050, -4060, -4075, -4100



- 1) The two fans are mounted inside the drive, on the bottom side.
- ② Remove the drive front cover.
- (3) For <u>GS3-4075 & GS3-4100</u> only, remove the only external screw that holds the fan assembly.



GS3-4075 & GS3-4100



holding the fan tray. (GS3-4075 & -4100 have only 3 screws.)



- (5) Carefully slide out the fan trav.
- ⑥ Unplug the electrical connectors and replace the fans.
- Reverse this procedure to reassemble the drive.



# DURAPULSE AC DRIVES REPLACEMENT FAN INSTALLATION

## FASTENER INFORMATION FOR GS3/DURAPULSE DRIVES FANS

