




### Two-Way, Two Position, Normally Closed

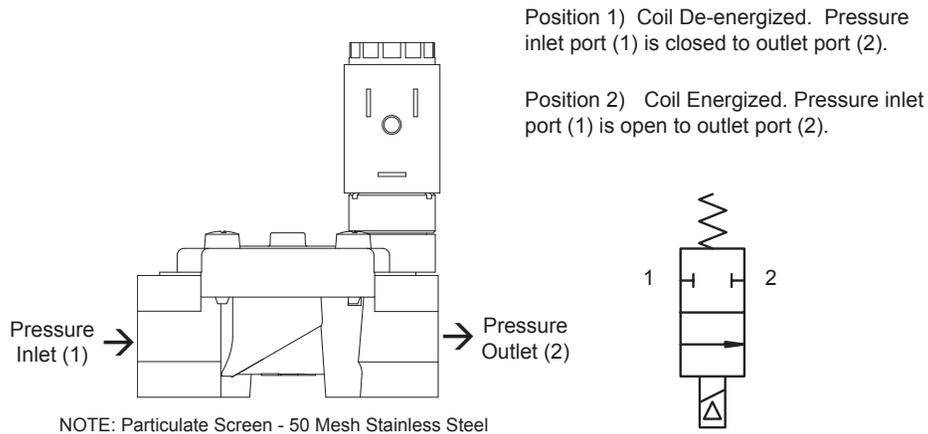


### Two-Way, Two Position, Normally Closed

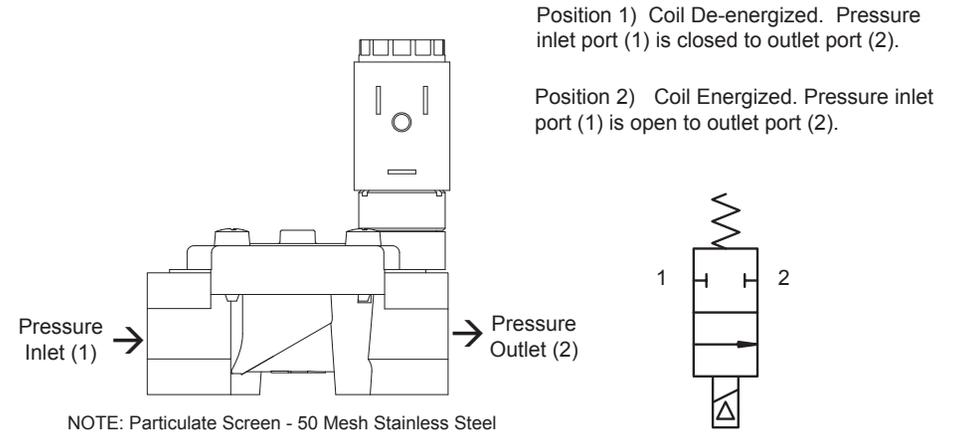

### Electrical Hook-up

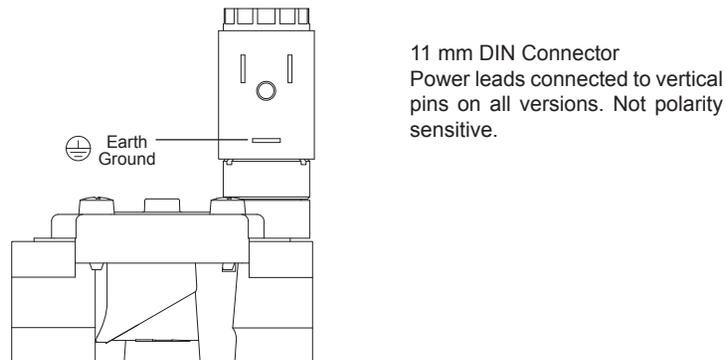


### Electrical Hook-up

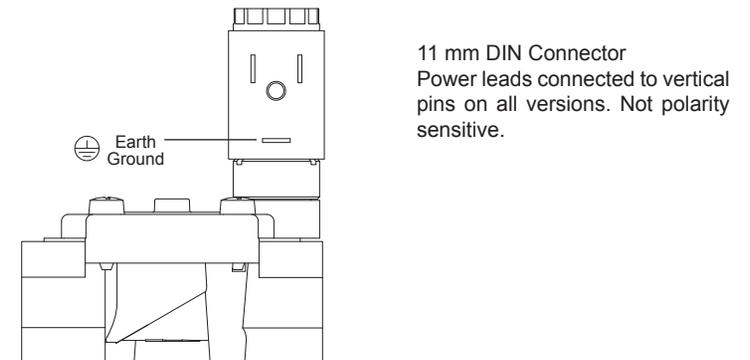

### Mounting Diagram

#### Dimensions Inch [mm]

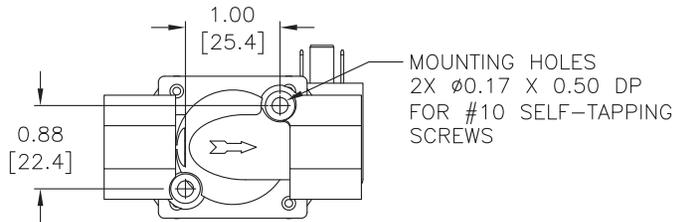


#### Caution

Excessive use of pipe sealant can cause clogging and leakage. Please follow ASME standards for applying pipe sealant and tape. Do not use media, voltage or pressures other than that listed in specifications as valve malfunction could result. Misuse or misapplication of NITRA solenoid valves could cause serious bodily injury or property damage.

### Mounting Diagram

#### Dimensions Inch [mm]

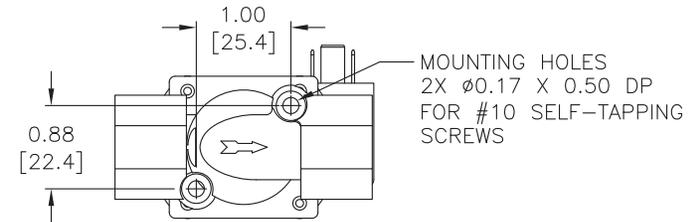

#### Caution

Excessive use of pipe sealant can cause clogging and leakage. Please follow ASME standards for applying pipe sealant and tape. Do not use media, voltage or pressures other than that listed in specifications as valve malfunction could result. Misuse or misapplication of NITRA solenoid valves could cause serious bodily injury or property damage.