



Errata Sheet

This Errata Sheet contains corrections or changes made after the publication of this manual.

Product Family:	OptiMate	Date:	May 22, 2012
Manual Number	OP-609-M		
Revision and Date	Rev. A; May 1998		

On later models the overlay is glued to the faceplate. If you have one of these newer panels, replacing the light bars using the procedure shown on page 11 of the user manual may damage the overlay. Use this procedure instead.

Changes to Setup and Interconnect

Page 11. Legending the Lamps and Buttons

Replace the **text in the second column of page 11** with the following (the graphic showing the front panel is okay):

- Cut along the outline. Place into overlay pocket. The legend transparency should be placed between the overlay and the faceplate. The faceplate and overlay are keyed on both ends to ensure proper alignment when reassembled.
- Reattach bezel. Push bezel into box until it snaps together.

Lamp Colors

OP-609 comes with either all red LED light bars or with one row each of red, yellow and green light bars (the “-1” option). All light bars are socketed. Light bars are available from AutomationDirect in packets of four.

The light bars can be accessed as follows:

- Remove the bezel.
- Remove the panel circuit board assembly from the housing.
- Remove the 4 nuts holding the circuit boards on the threaded stand offs, and lift the circuit boards off the stand offs.
- Remove the light bars using a needle nose pliers.
- Insert the new light bar into its socket by carefully aligning the pins on the back of the light bar with the socket openings, and gently pushing the light bar into the socket (light bars are symmetrical so orientation is not important).
- Reassemble the panel.

Changes to Appendix A. Example Programs

Pages A-5 and A-6. Choosing Your Connecting Cables and Connecting Cable Details

Cable OP-4CBL-2 is no longer available. Consider using AutomationDirect cable EA-4CBL-2 for a comparable replacement.