

Table of Contents

1.0 Introduction	1
2.0 Installation of DataLynx	2
3.0 Registration.....	9
4.0 Modem Connectivity	12
4.1 Testing Modem Configuration	12
4.2 Example Setup for AutomationDirect PLCs.....	13
5.0 DataLynx PLC.....	14
5.1 Server.....	14
5.1.1 Installing Service	14
5.1.2 Running Service	16
5.1.3 Pausing	17
5.1.4 Stopping	18
5.1.5 Diagnosing	19
5.1.6 Uninstalling	21
5.2 Monitor	22
5.2.1 Configuring	23
5.2.2 Modifying a Modem.....	27
5.2.3 Deleting	29
5.2.4 Duplicating	30
5.2.5 Connecting	31
5.2.6 Hiding	32
5.2.7 Backing Up and Restoring	33
5.2.8 Polling	34
5.2.9 Locking / Unlocking	35
5.2.10 Reporting	36
6.0 Troubleshooting / Miscellaneous	38