




**P/N: INS-SFP44-IMP**  
**P4043 FACEPLATE KIT, STEEL**  
**Installation Instructions:**

The kit consists of the following components

- Item A) Faceplate, Stl, 4x4x3 – QTY (1)
- Item B) Support, Faceplate, – QTY (4)
- Item C) Screw, #8-18 x 3/8" PH, Phil, Thread Cutter – QTY (8)

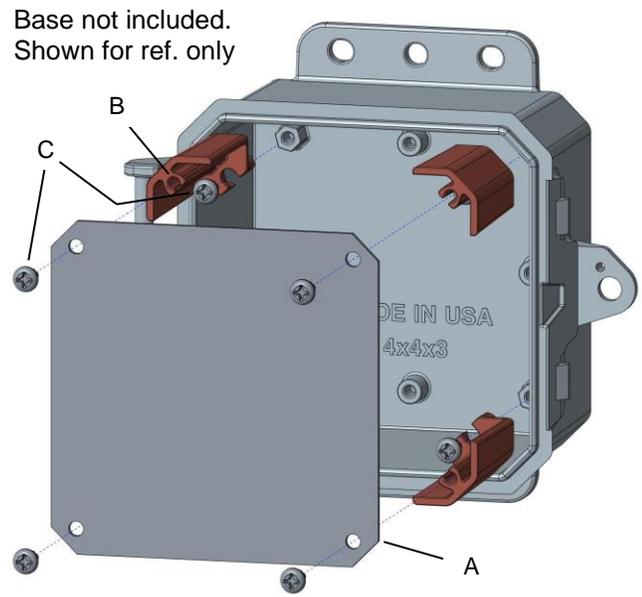

Position the Faceplate supports (B) (x4) flush against the inside wall of the Base and secure with #8-18 X 3/8" Pan Head Screws (C) (x4) into the hexagonal boss, as shown. Position the Faceplate panel (A) over the supports and secure with #8-18 X 3/8" Pan Head Screws (C) (x4) into the supports (B). Torque to 8-10 in-lbs., using Philips head #2 screwdriver.


**Integra Enclosures, Inc.** 7750 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-8166 / [www.integraenclosures.com](http://www.integraenclosures.com) (INS-SFP44-IMP\_REV\_A1)



**P/N: INS-SFP44-IMP**  
**P4043 FACEPLATE KIT, STEEL**  
**Installation Instructions:**

The kit consists of the following components

- Item A) Faceplate, Stl, 4x4x3 – QTY (1)
- Item B) Support, Faceplate, – QTY (4)
- Item C) Screw, #8-18 x 3/8" PH, Phil, Thread Cutter – QTY (8)

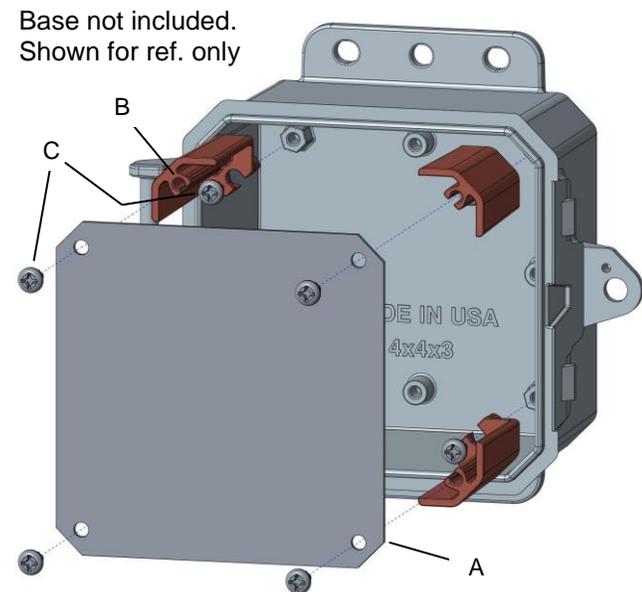

Position the Faceplate supports (B) (x4) flush against the inside wall of the Base and secure with #8-18 X 3/8" Pan Head Screws (C) (x4) into the hexagonal boss, as shown. Position the Faceplate panel (A) over the supports and secure with #8-18 X 3/8" Pan Head Screws (C) (x4) into the supports (B). Torque to 8-10 in-lbs., using Philips head #2 screwdriver.

**Integra Enclosures, Inc.** 7750 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-8166 / [www.integraenclosures.com](http://www.integraenclosures.com) (INS-SFP44-IMP\_REV\_A1)