
Table of Contents

Safety Messages

Hazardous High Voltage	i
General Precautions - Read These First!	ii
Index to Warnings and Cautions in This Manual	iv
General Warnings and Cautions	ix
UL® Cautions, Warnings, and Instructions	xii

Table of Contents

Revisions	xvii
Contact Information	xviii

Chapter 1: Getting Started

Introduction	1–2
SJ100 Inverter Specifications	1–5
Introduction to Variable-Frequency Drives	1–17
Frequently Asked Questions	1–22

Chapter 2: Inverter Mounting and Installation

Orientation to Inverter Features	2–2
Basic System Description	2–5
Step-by-Step Basic Installation	2–6
Powerup Test	2–19
Using the Front Panel Keypad	2–21

Chapter 3: Configuring Drive Parameters

Choosing a Programming Device	3–2
Using Keypad Devices	3–3
“D” Group: Monitoring Functions	3–6
“F” Group: Main Profile Parameters	3–8
“A” Group: Standard Functions	3–9
“B” Group: Fine Tuning Functions	3–24
“C” Group: Intelligent Terminal Functions	3–34
“H” Group: Motor Constants Functions	3–43

Chapter 4: Operations and Monitoring

Introduction	4-2
Connecting to PLCs and Other Devices	4-4
Example Wiring Diagram	4-5
Using Intelligent Input Terminals	4-8
Using Intelligent Output Terminals	4-24
Analog Input Operation	4-32
Analog and Digital Monitor Output	4-33
Auto-tuning for Sensorless Vector Control	4-35
PID Loop Operation	4-39
Configuring the Inverter for Multiple Motors	4-40

Chapter 5: Inverter System Accessories

Introduction	5-2
Component Descriptions	5-3
Dynamic Braking	5-5

Chapter 6: Troubleshooting and Maintenance

Troubleshooting	6-2
Monitoring Trip Events, History, & Conditions	6-5
Restoring Factory Default Settings	6-8
Maintenance and Inspection	6-9
Warranty	6-16

Appendix A: Glossary and Bibliography

Glossary	A-2
Bibliography	A-8

Appendix B: Drive Parameter Settings Tables

Introduction	B-2
Parameter Settings for Keypad Entry	B-2

Appendix C: CE–EMC Installation Guidelines

CE–EMC Installation Guidelines	C-2
Hitachi EMC Recommendations	C-6

Index
