

# TABLE OF CONTENTS

---



## Chapter 1: Getting Started

|  |            |
|--|------------|
| <b>Manual Overview .....</b>                           | <b>1-2</b> |
| Overview of this Publication.....                      | 1-2        |
| Who Should Read This Manual.....                       | 1-2        |
| Technical Support.....                                 | 1-2        |
| Supplemental Manuals.....                              | 1-2        |
| Special Symbols.....                                   | 1-2        |
| <b>SOLO Temperature Controller Introduction.....</b>   | <b>1-3</b> |
| General Description .....                              | 1-3        |
| Unpacking.....   | 1-3        |
| Serial Number Label Information:.....                  | 1-4        |
| Model Number Explanation.....                          | 1-4        |
| <b>SOLO Temperature Controller Specifications.....</b> | <b>1-5</b> |

## Chapter 2: Installation and Wiring

|   |            |
|---|------------|
| <b>Ambient Conditions .....</b>                     | <b>2-2</b> |
| <b>Installation Considerations.....</b>             | <b>2-2</b> |
| <b>Mounting Instructions .....</b>                  | <b>2-3</b> |
| <b>Controller and Panel Cutout Dimensions .....</b> | <b>2-4</b> |
| <b>Safety Information .....</b>                     | <b>2-6</b> |
| <b>Terminal Identification.....</b>                 | <b>2-8</b> |

|                            |      |
|----------------------------|------|
| SL4824 Series Inputs ..... | 2-8  |
| SL4824 Series Wiring.....  | 2-9  |
| SL4848 Series Inputs ..... | 2-10 |
| SL4848 Series Wiring.....  | 2-11 |
| SL4896 Series Inputs ..... | 2-12 |
| SL4896 Series Wiring.....  | 2-13 |
| SL9696 Series Inputs ..... | 2-14 |
| SL9696 Series Wiring.....  | 2-15 |

### Chapter 3: Keypad Operation and Setup Parameters

|                                  |      |
|----------------------------------|------|
| Display, LED and Keypad .....    | 3-2  |
| Keypad Operation .....           | 3-3  |
| Setup Parameter Listing .....    | 3-4  |
| Regulation Mode Parameters ..... | 3-7  |
| Operation Mode Parameters.....   | 3-17 |
| Initial Setting Parameters.....  | 3-19 |
| Reset to Factory Default .....   | 3-24 |

### Chapter 4: Controller Inputs and Outputs

|                            |     |
|----------------------------|-----|
| Control Input Types.....   | 4-2 |
| Event Inputs .....         | 4-3 |
| Control Output Types ..... | 4-4 |
| Alarm Outputs.....         | 4-8 |

### Chapter 5: Control Modes

|                          |     |
|--------------------------|-----|
| PID Control.....         | 5-2 |
| On / Off Control .....   | 5-4 |
| Ramp / Soak Control..... | 5-5 |

Manual Control.....5-5  
 Error Display Information .....5-6

**Chapter 6: Configuration Software**

PC Connection.....6-2  
 Software Installation .....6-3  
 Starting SL-SOFT .....6-6  
 SL-SOFT Online Help .....6-6

**Chapter 7: Modbus Communication**

Modbus Protocol .....7-2  
 Registers .....7-2  
 Connection with the DirectLOGIC PLC.....7-8

**Appendix: Modbus Address Map for Ramp / Soak Control**

Last Step Number..... A-2  
 Additional Cycles..... A-2  
 Next Pattern Number ..... A-2  
 Ramp / Soak SV ..... A-3  
 Ramp / Soak Time ..... A-4