

# TABLE OF CONTENTS

---



## Chapter 1 - Getting Started

<b>Introduction</b> .....	1-2
The Purpose of this Manual.....	1-2
Supplemental Manuals.....	1-2
Technical Support.....	1-2
<b>Conventions Used</b> .....	1-2
Key Topics for Each Chapter.....	1-2
<b>Selecting the Proper Module</b> .....	1-3
DL05.....	1-3
DL06.....	1-3
Module Choices.....	1-3
Module Choices, continued.....	1-4
<b>Installing the Option Modules</b> .....	1-5
Remove the Slot Cover.....	1-5
Insert the Module.....	1-5
<b>Module LED Indicator</b> .....	1-6
<b>Power Budgeting</b> .....	1-6
Power supplied.....	1-6
Power required by base unit.....	1-6
Power required by option cards.....	1-6

## Chapter 2 - Discrete I/O Guidelines

<b>Safety Guidelines</b> .....	2-2
Plan for Safety.....	2-2
Three Levels of Protection.....	2-3
Emergency Stops.....	2-3

## Table of Contents

---

Emergency Power Disconnect .....	2-4
Orderly System Shutdown.....	2-4
Class 1, Division 2 Approval (Applies ONLY to modules used with a DL06 PLC.).....	2-4
<b>System Wiring Strategies .....</b>	<b>2-5</b>
PLC Isolation Boundaries .....	2-5
I/O “Common” Terminal Concepts .....	2-8
Connecting DC I/O to Solid State Field Devices .....	2-9
Solid State Input Sensors .....	2-9
Solid State Output Loads .....	2-9
Relay Output Guidelines.....	2-11
Prolonging Relay Contact Life .....	2-11
Surge Suppression For Inductive Loads.....	2-12
Prolonging Relay Contact Life .....	2-13
DC Input Wiring Methods .....	2-14
DC Output Wiring Methods.....	2-14
Firmware and Software .....	2-14
<b>I/O Addressing.....</b>	<b>2-15</b>
Module I/O Points and Addressing for the DL05 and DL06.....	2-15
All Discrete Modules Installed I/O Addressing Example: .....	2-16
Discrete and Analog Modules Installed I/O Addressing Example: .....	2-16
Discrete and Analog Modules Installed I/O Addressing Example: .....	2-16
<b>Discrete I/O General Specifications .....</b>	<b>2-17</b>
<b>Glossary of Specification Terms .....</b>	<b>2-18</b>
<b>F0-08SIM 8-Point Simulator Input Module.....</b>	<b>2-19</b>
<b>D0-10ND3 10-Point DC Input Module.....</b>	<b>2-20</b>
<b>D0-10ND3F 10-Point DC Fast Input Module .....</b>	<b>2-21</b>
<b>D0-16ND3 16-Point DC Input Module.....</b>	<b>2-22</b>
<b>F0-08NA-1 8-Point AC Input Module .....</b>	<b>2-23</b>
<b>D0-10TD1 10-Point DC Output Module.....</b>	<b>2-24</b>
<b>D0-16TD1 16-Point DC Output Module.....</b>	<b>2-25</b>
<b>D0-10TD2 10-Point DC Output Module.....</b>	<b>2-26</b>
<b>D0-16TD2 16-Point DC Output Module.....</b>	<b>2-27</b>
<b>D0-07CDR 4-Point DC Input, 3-Point Relay Output Module.....</b>	<b>2-28</b>

D0-08TR 8-Point Relay Output Module .....	2-29
D0-08CDD1 4-Point DC Input, 4-Point DC Output Module.....	2-30
F0-04TRS 4-Point Relay Output Module .....	2-31

## Chapter 3 - F0-04AD-1, 4-Channel Analog Current Input

Module Specifications .....	3-2
Setting the Module Jumper.....	3-4
Connecting and Disconnecting the Field Wiring .....	3-4
Wiring Guidelines.....	3-4
Wiring Diagram .....	3-5
Current Loop Transmitter Impedance.....	3-5
Module Operation .....	3-6
Channel Scanning Sequence .....	3-6
Analog Module Updates.....	3-6
Special V-memory Locations .....	3-7
Formatting the Module Data.....	3-7
DL05 Data Formatting .....	3-7
Structure of V7700.....	3-7
Structure of V7701 .....	3-7
DL06 Data Formatting .....	3-8
Setup Data Type and Number of Channels .....	3-8
Storage Pointer Setup .....	3-8
Using the Pointer in Your Control Program .....	3-9
DL05 Pointer Method.....	3-9
DL06 Pointer Method.....	3-10
Detecting Input Signal Loss .....	3-11
Analog Signal Loss.....	3-11
Scale Conversions .....	3-11
Scaling the Input Data .....	3-11
The Conversion Program.....	3-12
Analog and Digital Value Conversions .....	3-12
Special Relays.....	3-13
DL05 Special Relays.....	3-13

DL06 Special Relays.....	3-13
<b>Module Resolution.....</b>	<b>3-15</b>
Analog Data Bits.....	3-15
Resolution Details.....	3-15
<b>Analog Input Ladder Logic Filter .....</b>	<b>3-16</b>
PID Loops / Filtering:.....	3-16
Smoothing the Input Signal (DL06 only):.....	3-16
Using Binary Data Format .....	3-16
Using BCD Data Format.....	3-17

## Chapter 4 - F0-08ADH-1, 8-Channel Analog Current Input

<b>Module Specifications .....</b>	<b>4-2</b>
<b>Connecting and Disconnecting the Field Wiring .....</b>	<b>4-4</b>
Wiring Guidelines.....	4-4
<b>Wiring Diagram .....</b>	<b>4-5</b>
Current Loop Transmitter Impedance.....	4-5
<b>Module Operation .....</b>	<b>4-6</b>
Channel Scanning Sequence .....	4-6
Analog Module Updates.....	4-6
<b>Special V-memory Locations .....</b>	<b>4-7</b>
Formatting the Analog Module Data.....	4-7
DL05 Data Formatting .....	4-7
Setup Data Type and Number of Active Channels.....	4-7
Storage Pointer Setup .....	4-7
DL06 Data Formatting .....	4-8
Setup Data Type and Number of Active Channels.....	4-8
Storage Pointer Setup .....	4-8
<b>Using the Pointer in Your Control Program.....</b>	<b>4-9</b>
DL05 Pointer Method Using Conventional Ladder Logic .....	4-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT5 .....	4-9
DL06 Pointer Method Using Conventional Ladder Logic.....	4-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT6 .....	4-11

<b>Scale Conversions</b> .....	<b>4-11</b>
Scaling the Input Data .....	4-11
The Conversion Program in Standard Ladder Logic.....	4-12
Analog and Digital Value Conversions .....	4-13
<b>Module Resolution</b> .....	<b>4-14</b>
Analog Data Bits.....	4-14
Resolution Details .....	4-14
<b>Analog Input Ladder Logic Filter</b> .....	<b>4-15</b>
PID Loops / Filtering.....	4-15
Smoothing the Input Signal (DL06 only).....	4-15
Binary Data Format Filter Using Ladder Logic .....	4-15
BCD Data Format Filter Using Ladder Logic.....	4-16
Example Code to Scale a 4–20 mA Signal to 0–1000 BCD .....	4-17
Example Code to Scale a 4–20 mA Signal to 0–1000 Binary .....	4-18

## Chapter 5 - F0-04AD-2, 4-Channel Analog Voltage Input

<b>Module Specifications</b> .....	<b>5-2</b>
<b>Setting the Module Jumpers</b> .....	<b>5-4</b>
<b>Connecting and Disconnecting the Field Wiring</b> .....	<b>5-5</b>
Wiring Guidelines .....	5-5
<b>Wiring Diagram</b> .....	<b>5-5</b>
<b>Module Operation</b> .....	<b>5-6</b>
Input Channel Update Sequence.....	5-6
Analog Module Updates.....	5-6
<b>Special V-memory Locations</b> .....	<b>5-7</b>
Formatting the Module Data.....	5-7
DL05 Data Formatting .....	5-7
Structure of V7700 .....	5-7
Structure of V7701 .....	5-7
DL06 Data Formatting .....	5-8
Setup Data Type and Number of Channels .....	5-8
Storage Pointer Setup .....	5-8

## Table of Contents

---

<b>Using the Pointer in Your Control Program</b> .....	<b>5-9</b>
DL05 Pointer Method.....	5-9
DL06 Pointer Method.....	5-10
<b>Scale Conversions</b> .....	<b>5-11</b>
Scaling the Input Data .....	5-11
The Conversion Program.....	5-12
Analog and Digital Value Conversions .....	5-13
<b>Module Resolution</b> .....	<b>5-14</b>
Analog Data Bits.....	5-14
Resolution Details .....	5-14
<b>Analog Input Ladder Logic Filter</b> .....	<b>5-15</b>
PID Loops / Filtering:.....	5-15
Smoothing the Input Signal (DL06 only):.....	5-15
Using Binary Data Format .....	5-15
Using BCD Data Format .....	5-16

## Chapter 6 - F0-08ADH-2, 8-Channel Analog Voltage Input

<b>Module Specifications</b> .....	<b>6-2</b>
<b>Setting the Module Jumpers</b> .....	<b>6-4</b>
Locating the jumpers .....	6-4
Setting the appropriate jumper .....	6-4
<b>Connecting and Disconnecting the Field Wiring</b> .....	<b>6-5</b>
Wiring Guidelines .....	6-5
<b>Wiring Diagram</b> .....	<b>6-6</b>
<b>Module Operation</b> .....	<b>6-7</b>
Channel Scanning Sequence .....	6-7
Analog Module Updates.....	6-7
<b>Special V-memory Locations</b> .....	<b>6-8</b>
Formatting the Analog Module Data.....	6-8
DL05 Data Formatting .....	6-8
Setup Data Type and Number of Active Channels.....	6-8
Storage Pointer Setup .....	6-8
DL06 Data Formatting .....	6-9
Setup Data Type and Number of Active Channels.....	6-9
Storage Pointer Setup .....	6-9

<b>Using the Pointer in Your Control Program</b> .....	6-10
DL05 Pointer Method Using Conventional Ladder Logic .....	6-10
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT5 .....	6-10
DL06 Pointer Method Using Conventional Ladder Logic .....	6-11
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT5 .....	6-12
<b>Scale Conversions</b> .....	6-12
Scaling the Input Data .....	6-12
The Conversion Program in Standard Ladder Logic .....	6-13
Analog and Digital Value Conversions .....	6-14
<b>Module Resolution</b> .....	6-15
Analog Data Bits .....	6-15
Resolution Details .....	6-15
<b>Analog Input Ladder Logic Filter</b> .....	6-16
PID Loops / Filtering .....	6-16
Smoothing the Input Signal (DL06 only) .....	6-16
Binary Data Format Filter Using Ladder Logic .....	6-16
Using BCD Data Format .....	6-17

## Chapter 7 - F0-04DAH-1, 4-Channel Analog Current Output

<b>Module Specifications</b> .....	7-2
<b>Connecting and Disconnecting the Field Wiring</b> .....	7-4
Wiring Guidelines .....	7-4
<b>Wiring Diagram</b> .....	7-5
<b>Module Operation</b> .....	7-6
Channel Scanning Sequence .....	7-6
<b>Special V-memory Locations</b> .....	7-7
Formatting the Analog Module Data .....	7-7
DL05 Data Formatting .....	7-7
Data Type and Number of Active Channels Setup .....	7-7
Storage Pointer Setup .....	7-7
DL06 Data Formatting .....	7-8
Data Type and Number of Active Channels Setup .....	7-8
Storage Pointer Setup .....	7-8

<b>Using the Pointer in Your Control Program</b> .....	7-9
DL05 Pointer Method Using Conventional Ladder Logic .....	7-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT5 .....	7-9
DL06 Pointer Method Using Conventional Ladder Logic .....	7-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT5 .....	7-11
<b>Output Scale Conversion</b> .....	7-11
Calculating the Digital Output Value .....	7-11
The Conversion Program in Standard Ladder Logic .....	7-12
Analog and Digital Value Conversions .....	7-13
<b>Module Resolution</b> .....	7-14
Analog Data Bits .....	7-14
Resolution Details .....	7-14

## Chapter 8 - F0-08DAH-1, 8-Channel Analog Current Output

<b>Module Specifications</b> .....	8-2
<b>Connecting and Disconnecting the Field Wiring</b> .....	8-4
Wiring Guidelines .....	8-4
<b>Wiring Diagram</b> .....	8-5
<b>Module Operation</b> .....	8-6
Channel Scanning Sequence .....	8-6
<b>Special System V-memory Locations</b> .....	8-7
Formatting the Analog Module Data .....	8-7
DL05 Data Formatting .....	8-7
Data Type and Number of Active Channels Setup .....	8-7
Storage Pointer Setup .....	8-7
DL06 Data Formatting .....	8-8
Data Type and Number of Active Channels Setup .....	8-8
Storage Pointer Setup .....	8-8
<b>Using the Pointer in Your Control Program</b> .....	8-9
DL05 Pointer Method Using Conventional Ladder Logic .....	8-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT6 .....	8-9
DL06 Pointer Method Using Conventional Ladder Logic .....	8-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT5 .....	8-11



**Output Scale Conversion**..... 8-11  
 Calculating the Digital Output Value ..... 8-11  
 The Conversion Program in Standard Ladder Logic..... 8-12  
 Analog and Digital Value Conversions ..... 8-13  
**Module Resolution**..... 8-14  
 Analog Data Bits..... 8-14  
 Resolution Details ..... 8-14

**Chapter 9 - F0-04DAH-2, 4-Channel Analog Voltage Output**

**Module Specifications** ..... 9-2  
**Connecting and Disconnecting the Field Wiring** ..... 9-4  
 Wiring Guidelines ..... 9-4  
**Wiring Diagram** ..... 9-5  
**Module Operation** ..... 9-6  
 Channel Scanning Sequence ..... 9-6  
**Special V-memory Locations** ..... 9-7  
 Formatting the Analog Module Data..... 9-7  
 DL05 Data Formatting ..... 9-7  
 Data Type and Number of Active Channels Setup..... 9-7  
 Storage Pointer Setup ..... 9-7  
 DL06 Data Formatting ..... 9-8  
 Data Type and Number of Active Channels Setup..... 9-8  
 Storage Pointer Setup ..... 9-8  
**Using the Pointer in Your Control Program** ..... 9-9  
 DL05 Pointer Method Using Conventional Ladder Logic ..... 9-9  
 DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT6 ..... 9-9  
 DL06 Pointer Method Using Conventional Ladder Logic ..... 9-10  
 DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT6 ..... 9-11  
**Output Scale Conversion**..... 9-11  
 Calculating the Digital Output Value ..... 9-11  
 The Conversion Program in Standard Ladder Logic..... 9-12  
 Analog and Digital Value Conversions ..... 9-13

<b>Module Resolution</b> .....	<b>9-14</b>
Analog Data Bits.....	9-14
Resolution Details.....	9-14

## **Chapter 10 - F0-08DAH-2, 8-Channel Analog Voltage Output**

<b>Module Specifications</b> .....	<b>10-2</b>
<b>Connecting and Disconnecting the Field Wiring</b> .....	<b>10-4</b>
Wiring Guidelines .....	10-4
<b>Wiring Diagram</b> .....	<b>10-5</b>
<b>Module Operation</b> .....	<b>10-6</b>
Channel Scanning Sequence .....	10-6
<b>Special V-memory Locations</b> .....	<b>10-7</b>
Formatting the Analog Module Data.....	10-7
DL05 Data Formatting .....	10-7
Data Type and Number of Active Channels Setup.....	10-7
Storage Pointer Setup .....	10-7
DL06 Data Formatting .....	10-8
Data Type and Number of Active Channels Setup.....	10-8
Storage Pointer Setup .....	10-8
<b>Using the Pointer in Your Control Program</b> .....	<b>10-9</b>
DL05 Pointer Method Using Conventional Ladder Logic .....	10-9
DL05 Pointer Method Using the IBox Instruction Available in DirectSOFT6 .....	10-9
DL06 Pointer Method Using Conventional Ladder Logic .....	10-10
DL06 Pointer Method Using the IBox Instruction Available in DirectSOFT6 .....	10-11
<b>Output Scale Conversion</b> .....	<b>10-11</b>
Calculating the Digital Output Value .....	10-11
The Conversion Program in Standard Ladder Logic.....	10-12
Analog and Digital Value Conversions .....	10-13
<b>Module Resolution</b> .....	<b>10-14</b>
Analog Data Bits.....	10-14
Resolution Details.....	10-14

## Chapter 11 - F0-4AD2DA-1, 4-Channel In/2-Ch. Out Analog Current Combination

Module Specifications .....	11-2
Setting the Module Jumper.....	11-4
Connecting and Disconnecting the Field Wiring .....	11-5
Wiring Guidelines .....	11-5
Wiring Diagram .....	11-6
Current Loop Transmitter Impedance.....	11-6
Module Operation .....	11-7
Input/Output Channel Update Sequence .....	11-7
Analog Module Updates.....	11-7
Special V-memory Locations .....	11-8
Formatting the Module Data.....	11-8
DL05 Data Formatting .....	11-8
Structure of V7700 .....	11-8
Structure of V7701 .....	11-8
Structure of V7702.....	11-9
DL06 Data Formatting .....	11-10
Setup Data Type and Number of Channels .....	11-10
Input Storage Pointer Setup .....	11-10
Output Storage Pointer Setup .....	11-10
Using the Pointer in Your Control Program .....	11-11
DL05 Pointer Method.....	11-11
DL06 Pointer Method.....	11-12
Scale Conversions .....	11-13
Scaling the Input Data .....	11-13
The Conversion Program.....	11-14
Output Conversion Program .....	11-14
Analog and Digital Value Conversions .....	11-15
Special Relays.....	11-16
DL05 Special Relays.....	11-16
DL06 Special Relays.....	11-16

<b>Module Resolution</b> .....	<b>11-18</b>
Analog Data Bits.....	11-18
Resolution Details.....	11-18
<b>Analog Input Ladder Logic Filter</b> .....	<b>11-19</b>
PID Loops / Filtering.....	11-19
Smoothing the Input Signal (DL06 only).....	11-19
Using Binary Data Format .....	11-19
Using BCD Data Format .....	11-20

## Chapter 12 - F0-2AD2DA-2, 2-Channel In/2-Ch. Out Analog Voltage Combination

<b>Module Specifications</b> .....	<b>12-2</b>
<b>Setting the Module Jumpers</b> .....	<b>12-4</b>
<b>Connecting and Disconnecting the Field Wiring</b> .....	<b>12-5</b>
Wiring Guidelines .....	12-5
<b>Wiring Diagram</b> .....	<b>12-5</b>
<b>Module Operation</b> .....	<b>12-6</b>
Input/Output Channel Scanning Sequence .....	12-6
Analog Module Updates.....	12-6
<b>Special V-memory Locations</b> .....	<b>12-7</b>
Formatting the Module Data.....	12-7
DL05 Data Formatting .....	12-7
Structure of V7700.....	12-7
Structure of V7701 .....	12-7
Structure of V7702.....	12-8
DL06 Data Formatting .....	12-9
Setup Data Type and Number of Channels .....	12-9
Input Storage Pointer .....	12-9
Output Storage Pointer .....	12-9
<b>Using the Pointer in Your Control Program</b> .....	<b>12-10</b>
DL05 Pointer Method.....	12-10
DL06 Pointer Method.....	12-11
<b>Scale Conversions</b> .....	<b>12-12</b>
Scaling the Input Data .....	12-12

The Conversion Program.....	12-13
Output Conversion Program .....	12-13
Analog and Digital Value Conversions .....	12-14
<b>Module Resolution.....</b>	<b>12-15</b>
Analog Data Bits.....	12-15
<b>Analog Input Ladder Logic Filter .....</b>	<b>12-16</b>
PID Loops / Filtering.....	12-16
Smoothing the Input Signal (DL06 only).....	12-16
Using Binary Data Format .....	12-16
Using BCD Data Format .....	12-17

## Chapter 13 - F0-4AD2DA-2, 4-Channel In/2-Ch. Out Analog Voltage Combination

<b>Module Specifications .....</b>	<b>13-2</b>
<b>Setting the Module Jumpers .....</b>	<b>13-4</b>
<b>Connecting and Disconnecting the Field Wiring .....</b>	<b>13-5</b>
Wiring Guidelines .....	13-5
<b>Wiring Diagram .....</b>	<b>13-5</b>
<b>Module Operation .....</b>	<b>13-6</b>
Input/Output Channel Update Sequence .....	13-6
Analog Module Updates.....	13-6
<b>Special V-memory Locations .....</b>	<b>13-7</b>
Formatting the Module Data.....	13-7
DL05 Data Formatting .....	13-7
Structure of V7700 .....	13-7
Structure of V7701 .....	13-7
Structure of V7702 .....	13-8
DL06 Data Formatting .....	13-9
Setup Data Type and Number of Channels .....	13-9
Input Storage Pointer Setup .....	13-9
Output Storage Pointer Setup .....	13-9
<b>Using the Pointer in Your Control Program .....</b>	<b>13-10</b>
DL05 Pointer Method.....	13-10
DL06 Pointer Method.....	13-11

## Table of Contents

---

<b>Scale Conversions</b> .....	<b>13-12</b>
Scaling the Input Data .....	13-12
The Conversion Program .....	13-13
Output Conversion Program .....	13-13
Analog and Digital Value Conversions .....	13-14
<b>Module Resolution</b> .....	<b>13-15</b>
Analog Data Bits.....	13-15
Resolution Details .....	13-15
<b>Analog Input Ladder Logic Filter</b> .....	<b>13-16</b>
PID Loops / Filtering.....	13-16
Smoothing the Input Signal (DL06 only).....	13-16
Using Binary Data Format .....	13-16
Using BCD Data Format .....	13-17

## Chapter 14 - F0-04RTD, 4-Channel RTC Input

<b>Module Specifications</b> .....	<b>14-2</b>
Module Calibration .....	14-3
Input Specifications.....	14-3
<b>Connecting and Disconnecting the Field Wiring</b> .....	<b>14-4</b>
Wiring Guidelines .....	14-4
RTD - Resistance Temperature Detector.....	14-4
Ambient Variations in Temperature.....	14-5
Wiring Diagram.....	14-5
<b>Module Operation</b> .....	<b>14-6</b>
Channel Scanning Sequence .....	14-6
Analog Module Update .....	14-6
<b>Special V-memory Locations</b> .....	<b>14-7</b>
Module Configuration Registers .....	14-7
A: Number of Channels Enabled/Data Format Register .....	14-7
B: Input Pointer Register.....	14-8
C: RTD Type Selection Register.....	14-8
D: Units Code Register .....	14-9
E: RTD Burnout Data Value Register.....	14-10
F: Diagnostics Error Register .....	14-10

**Configuring the Module in Your Control Program** ..... 14-11

    DL05 Example 1 ..... 14-11

    DL05 Example 2 ..... 14-12

    DL06 Example 1 ..... 14-13

    DL06 Example 2 ..... 14-14

**Negative Temperature Readings with Magnitude Plus Sign** ..... 14-15

    Magnitude Plus Sign (Binary) ..... 14-15

    Magnitude Plus Sign (BCD) ..... 14-16

    Negative Temperatures 2's Complement (Binary/Pointer Method) ..... 14-17

**Analog Input Ladder Logic Filter** ..... 14-18

    PID Loops / Filtering ..... 14-18

    Smoothing the Input Signal (DL06 only) ..... 14-18

    Using Binary Data Format ..... 14-18

    Using BCD Data Format ..... 14-19

**RTD Burnout Detection Bits** ..... 14-20

    Special Relays Corresponding to RTD Burnouts ..... 14-20

## Chapter 15 - F0-04THM, 4-Channel Thermocouple Input

**Module Specifications** ..... 15-2

**Connecting and Disconnecting the Field Wiring** ..... 15-4

    Wiring Guidelines ..... 15-4

    Thermocouple Input Wiring Diagram ..... 15-4

    Thermocouples ..... 15-5

    Ambient Variations in Temperature ..... 15-5

    Voltage Input Wiring Diagram ..... 15-6

**Module Operation** ..... 15-7

    Channel Scanning Sequence ..... 15-7

    Analog Module Update ..... 15-7

**Special V-memory Locations** ..... 15-8

    Module Configuration Registers ..... 15-8

    A: Number of Channels Enabled/Data Format Register ..... 15-8

    B: Input Pointer Register ..... 15-9

    C: Input Type Selection Register ..... 15-9

    D: Units Code Register ..... 15-10

## Table of Contents

---

E: Thermocouple Burnout Detection Enable Register.....	15-11
F: Thermocouple Burnout Data Value Register.....	15-11
G: Diagnostics Error Register .....	15-11
<b>Configuring the Module in Your Control Program .....</b>	<b>15-12</b>
DL05 Example 1 .....	15-12
DL05 Example 2.....	15-13
DL06 Example 1 .....	15-14
DL06 Example 2.....	15-15
<b>Negative Temperature Readings with Magnitude Plus Sign .....</b>	<b>15-16</b>
Magnitude Plus Sign (Binary) .....	15-16
Magnitude Plus Sign (BCD).....	15-17
<b>Module Resolution.....</b>	<b>15-18</b>
Module Resolution 16-Bit (Unipolar Voltage Input) .....	15-18
Module Resolution 15-Bit Plus Sign (Bipolar Voltage Input).....	15-18
<b>Analog Input Ladder Logic Filter .....</b>	<b>15-19</b>
PID Loops / Filtering.....	15-19
Smoothing the Input Signal (DL06 only).....	15-19
Using Binary Data Format .....	15-19
Using BCD Data Format .....	15-20
<b>Thermocouple Burnout Detection Bits .....</b>	<b>15-21</b>
Special Relays Corresponding to Thermocouple Burnouts .....	15-21