

# DURAPULSE GS30 DRIVE USER MANUAL TABLE OF CONTENTS



## CONTENTS

### GS30 USER MANUAL TOC

WARNINGS AND TRADEMARKS . . . . .	W-1
~ WARNING ~ . . . . .	W-1
Trademarks. . . . .	W-1
~ AVERTISSEMENT ~ . . . . .	W-2
Marques de commerce . . . . .	W-2
Warnings. . . . .	W-3
DURAPULSE GS30 USER MANUAL REVISION HISTORY . . . . .	H-1
DURAPULSE GS30 DRIVE USER MANUAL TABLE OF CONTENTS . . . . .	TOC-1
CHAPTER 1: GETTING STARTED. . . . .	1-1
User Manual Overview . . . . .	1-2
Overview of This Publication . . . . .	1-2
Supplemental Publications . . . . .	1-2
Technical Support . . . . .	1-2
Produced By . . . . .	1-2
Special Symbols . . . . .	1-2
Purpose of AC Drives . . . . .	1-3
Selecting the Proper Drive Rating . . . . .	1-3
Determine Motor Full-Load Amperage (FLA) . . . . .	1-3
Determine Motor Overload Requirements . . . . .	1-3
Determine Application Type; Constant Torque or Variable Torque . . . . .	1-3
Installation Altitude . . . . .	1-4
Determine Maximum Enclosure Internal Temperature . . . . .	1-5
Derate Output Current Based on Carrier Frequency (if necessary) . . . . .	1-7
GS30 Variable Torque Carrier Frequency Derating . . . . .	1-7
<b>DURAPULSE</b> GS30 AC Drive Environmental Information. . . . .	1-11
Storage and Transportation. . . . .	1-11
GS30 Environmental Conditions . . . . .	1-11
GS30 General Specifications . . . . .	1-12
<b>DURAPULSE</b> GS30 AC Drive Specifications . . . . .	1-14
230V Class – 1-Phase Model-Specific Specifications . . . . .	1-14
230V Class – 3-Phase Model-Specific Specifications . . . . .	1-15
460V Class – 3-Phase Model-Specific Specifications . . . . .	1-18
Receiving and Inspection . . . . .	1-21
Drive Package Contents. . . . .	1-21
Model Number Explanation . . . . .	1-22
Nameplate Information. . . . .	1-22
CHAPTER 2: INSTALLATION AND WIRING. . . . .	2-1
Drive Models by Frame Size . . . . .	2-2

Installation . . . . .	2-2
Minimum Clearances and Air Flow. . . . .	2-3
GS30 Series Minimum Clearance Distances . . . . .	2-3
GS30 Airflow and Power Dissipation . . . . .	2-4
Dimensions . . . . .	2-5
Circuit Connections – RFI Jumper . . . . .	2-15
RFI Jumper Removal. . . . .	2-15
Isolating Main Power from Ground . . . . .	2-16
Floating Ground System (IT Systems) . . . . .	2-17
Asymmetric Ground System (Corner Grounded TN Systems) . . . . .	2-17
Circuit Connections – Warnings and Notes . . . . .	2-18
Danger!. . . . .	2-18
Wiring Terminal Access . . . . .	2-22
Control Terminal Access. . . . .	2-22
Main Circuit Wiring Terminals . . . . .	2-23
Main Terminal Specifications . . . . .	2-23
Wiring Terminal Connector Dimensions – Main-Circuit Terminals. . . . .	2-25
Main Terminal Diagrams . . . . .	2-26
Main Circuit Wiring Diagrams . . . . .	2-29
Control Circuit Wiring Terminals . . . . .	2-30
GS30 Control Terminal Specifications . . . . .	2-30
GS30 Control Terminal Block Diagram & Wiring Specifications . . . . .	2-33
Control Terminal Wiring Instructions. . . . .	2-34
Control Circuit Wiring Diagrams . . . . .	2-35
Digital Inputs. . . . .	2-35
System Wiring Diagram. . . . .	2-36
Full I/O Wiring Diagram (Frame A-G) . . . . .	2-37
Full I/O Wiring Diagram (Frame H-I) . . . . .	2-38
CHAPTER 3: KEYPAD OPERATION AND QUICKSTART . . . . .	3-1
The DURApulse GS30 Digital Keypad . . . . .	3-2
Keypad Indicator LEDs. . . . .	3-3
GS30 Keypad Operation . . . . .	3-4
GS30 Keypad Function Examples. . . . .	3-4
Main Page . . . . .	3-5
Frequency Command Settings . . . . .	3-5
Parameter Settings . . . . .	3-6
PLC Settings . . . . .	3-6
Setting Direction. . . . .	3-6
Application Settings. . . . .	3-7
Reference Table for Digital LED Character Display . . . . .	3-8
CHAPTER 4: AC DRIVE PARAMETERS . . . . .	4-1
<b>Introduction</b> . . . . .	<b>4-3</b>
Video Tutorials. . . . .	4-3
<b>DURAPULSE</b> GS30 Parameter Summary. . . . .	4-3
Drive Parameters Summary (P00.xx) . . . . .	4-3
Basic Parameters Summary (P01.xx) . . . . .	4-11
Digital Input/Output Parameters Summary (P02.xx) . . . . .	4-14
Analog Input/Output Parameters Summary (P03.xx) . . . . .	4-21
Multi-Step Speed Parameters Summary (P04.xx) . . . . .	4-24

Motor Parameters Summary (P05.xx) . . . . .	4-26
Protection Parameters Summary (P06.xx) . . . . .	4-29
Special Parameters Summary (P07.xx) . . . . .	4-36
High-Function PID Parameters Summary (P08.xx) . . . . .	4-39
Communication Parameters Summary (P09.xx) . . . . .	4-42
Speed Feedback Control Parameters Summary (P10.xx) . . . . .	4-45
Advanced Parameters Summary (P11.xx) . . . . .	4-48
Tension Control Parameters Summary (P12.xx) . . . . .	4-50
Macro / User Defined Macro Parameters Summary (P13.xx) . . . . .	4-54
Protection Parameters (2) Summary (P14.xx) . . . . .	4-56
<b>DURAPULSE</b> GS30 Parameter Details . . . . .	4-60
Explanation of Parameter Details Format . . . . .	4-60
Group P00.xx Details – Drive Parameters . . . . .	4-61
Group P01.xx Details – Basic Parameters . . . . .	4-89
Group P02.xx Details – Digital Input/Output Parameters. . . . .	4-100
Group P03.xx Details – Analog Input/Output Parameters . . . . .	4-120
Analog Input Parameter Examples . . . . .	4-131
Group P04.xx Details – Multi-Step Speed Parameters . . . . .	4-154
Group P05.xx Details – Motor Parameters. . . . .	4-156
Group P06.xx Details – Protection Parameters . . . . .	4-166
Group P07.xx Details – Special Parameters . . . . .	4-189
Group P08.xx Details – High-function PID Parameters . . . . .	4-202
Group P09.xx Details – Communication Parameters . . . . .	4-218
Group P10.xx Details – Speed Feedback Control Parameters . . . . .	4-234
Group P11.xx Details – Advanced Parameters. . . . .	4-247
Group 12.xx Details – Tension Control Parameters . . . . .	4-258
Group P13.xx Details – Macro / User Defined Parameters . . . . .	4-280
Group P14.xx Details – Protection Parameters (2). . . . .	4-293
Adjustments and Applications . . . . .	4-306
IMFOC Field oriented control Mode with Induction Motor (IM) Adjustment Procedure . . . . .	4-306
IMTQC Sensorless Torque Mode with Induction Motor (IM) Adjustment Procedure . . . . .	4-310
PMSVC Sensorless Vector mode with permanent magnet motor adjustment procedure. . . . .	4-312
PMFOCPG - Field-Oriented Control with PMAC motor with encoder. . . . .	4-316
IPM SVC Sensorless Field-Oriented Control with interior PMAC motor. . . . .	4-325
Torque Calculation and Torque Parameter Setup Reference. . . . .	4-332
Drive Motor Torque Calculation . . . . .	4-332
GS30 Drive - Torque Limit in Speed Mode Detailed Explanation . . . . .	4-333
Speed Mode with Torque Limits via Analog Input . . . . .	4-334
GS30 Drive Quick Reference- Alternating between Torque and Speed Mode . . . . .	4-335
<b>CHAPTER 5: SERIAL COMMUNICATIONS</b> . . . . .	5-1
Communications Parameters Summary . . . . .	5-2
Summary – Serial Communication Parameters . . . . .	5-2
Serial Modbus Status Addresses . . . . .	5-6
Status Addresses (Read Only). . . . .	5-6
Serial Communications Overview . . . . .	5-9
Serial Communications Connectivity. . . . .	5-9
Minimum AC Drive Parameter Settings For Serial Communication . . . . .	5-9
Common Third-Party Modbus RTU Masters. . . . .	5-10
AutomationDirect PLCs as Modbus Master . . . . .	5-10

Connecting Communication Cables . . . . .	5-11
Detailed Serial Modbus Communication Information . . . . .	5-13
Data Format . . . . .	5-13
Communication Protocol . . . . .	5-14
CMD (Command Code) and DATA (Data Characters). . . . .	5-15
<b>CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING . . . . .</b>	<b>6-1</b>
Maintenance and Inspections . . . . .	6-2
Monthly Inspection . . . . .	6-2
Annual Inspection . . . . .	6-2
Recharge Capacitors (for drives not in service) . . . . .	6-3
Recommended Inspection Schedules . . . . .	6-4
Troubleshooting . . . . .	6-8
Warning Codes. . . . .	6-8
Fault Codes. . . . .	6-26
Typical AC Drive Problems and Solutions . . . . .	6-53
Grease and Dirt Problems. . . . .	6-53
Fiber Dust Problem . . . . .	6-54
Corrosion Problem. . . . .	6-55
Industrial Dust Problem. . . . .	6-56
Wiring and Installation Problem . . . . .	6-57
Digital Input/Output Terminal Problems. . . . .	6-58
<b>CHAPTER 7: GSOFT2 – GETTING STARTED . . . . .</b>	<b>7-1</b>
GS30 Drive Configuration Software . . . . .	7-2
System Requirements . . . . .	7-2
Installation Guide . . . . .	7-3
System Requirement Configuration . . . . .	7-3
Software Installation. . . . .	7-4
Opening GSoft2 Software Program . . . . .	7-6
Software Functions . . . . .	7-7
Firmware Upgrade Notes. . . . .	7-12
GSoft2 Help File Note. . . . .	7-12
<b>CHAPTER 8: GSLOGIC INTRODUCTION . . . . .</b>	<b>8-1</b>
Purpose of This Chapter . . . . .	8-2
For More Detailed Information. . . . .	8-2
GSLogic Introduction . . . . .	8-2
GS30 PLC Summary . . . . .	8-3
Introduction . . . . .	8-3
Notes on Using GSLogic, the GS30 PLC, and the GS30 Drive . . . . .	8-4
Getting Started . . . . .	8-7
Connect to PLC. . . . .	8-7
Controlling Drive IO with the PLC . . . . .	8-9
Installation of GSLogic Programming Software. . . . .	8-11
System Requirements . . . . .	8-11
About Getting Started. . . . .	8-11
Technical Support . . . . .	8-11
Installing GSLogic Programming Software . . . . .	8-12
Program Writing. . . . .	8-14
Connecting GSLogic PC to GS30 PLC . . . . .	8-14

Basic Ladder Program Example. . . . .	8-19
Program Download . . . . .	8-21
Program Monitoring. . . . .	8-22
GS30 GSLogic Program Examples . . . . .	8-23
<b>APPENDIX A: ACCESSORIES. . . . .</b>	<b>A-1</b>
Fuses/Circuit Breakers. . . . .	A-2
Recommended Fuse Specifications for the DC Side of Common DC Bus. . . . .	A-3
Standard Footprint EMC Filter and Zero Phase Reactor . . . . .	A-5
High Performance EMI Input Filters . . . . .	A-7
EMI Filter Installation . . . . .	A-8
Recommended Motor Cable Length. . . . .	A-9
Line Reactors / Voltage Time Filters . . . . .	A-10
Line/Load Reactors Selection Charts. . . . .	A-12
Line Reactor Applications and Wiring Connections. . . . .	A-13
Recommended Cable Length. . . . .	A-15
Dynamic Braking . . . . .	A-17
Braking Units. . . . .	A-17
Choosing and Installing a Braking Resistor . . . . .	A-19
EMC Shield & Earthing Plates . . . . .	A-20
GS30 EMC Shield Plates. . . . .	A-20
Capacitive Filter (GS20A-CAPF). . . . .	A-26
Conduit Box . . . . .	A-28
Conduit Box Installation. . . . .	A-31
Replacement Fan Kit . . . . .	A-33
Remote Keypad Mounting . . . . .	A-37
DIN Rail Mounting . . . . .	A-38
GS30 DIN Rail Installation. . . . .	A-39
Mounting Adapter Plate . . . . .	A-40
Mounting Adapter Plate Dimensions . . . . .	A-41
Mounting Adapter Plate Installation. . . . .	A-43
Optional Advanced Keypad. . . . .	A-45
GS30 Display Screens for GS4-KPD . . . . .	A-48
Keypad Fault Codes . . . . .	A-56
Keypad Panel Mounting Kit GS4-BZL . . . . .	A-57
<b>APPENDIX B: OPTIONAL I/O AND COMMUNICATION CARDS. . . . .</b>	<b>B-1</b>
Introduction . . . . .	B-3
Option Card Installation. . . . .	B-3
Removing the Card Slot Cover . . . . .	B-5
Option Card Wiring . . . . .	B-5
GS30A-BPS. . . . .	B-17
GS30A-CM-EIP1 and GS30A-CM-EIP2. . . . .	B-18
Connecting Comm Card to PC . . . . .	B-19
GS30A-CM-EIPx LED Indicators and Troubleshooting . . . . .	B-20
GS30A-CM-EIPx IP Address and Network Configuration. . . . .	B-22
GS30A-CM-EIPx Common Parameters. . . . .	B-23
Modbus TCP or EtherNet/IP Protocol Selection. . . . .	B-24
Modbus TCP Protocol Configuration . . . . .	B-25
GS30A-CM-EIPx Control Words – Modbus Addressing . . . . .	B-25

GS30A-CM-EIPx Status Words – Modbus Addressing . . . . .	B-26
EtherNet/IP Protocol . . . . .	B-29
GS30A-CM-EIPx EtherNet/IP I/O Messaging (Implicit Messaging) . . . . .	B-29
GS30A-CM-EIPx Explicit Messaging . . . . .	B-35
GS30A-CM-EIPx EtherNet/IP Basic Registers . . . . .	B-39
GS30A-CM-EIPx EtherNet/IP Alarm Register . . . . .	B-40
EtherNet/IP Communication Card Register Settings . . . . .	B-41
Using Speed Mode as a Control Method . . . . .	B-41
GS30A-CM-ECAT . . . . .	B-42
Common Parameters . . . . .	B-43
LED Indicators and Troubleshooting . . . . .	B-43
EtherCAT Connection Setup . . . . .	B-44
Introduction to EtherCAT . . . . .	B-44
System Setup. . . . .	B-46
CiA402 Equipment Regulation . . . . .	B-48
Communication Warning / Fault Table. . . . .	B-51
Description of Object Specification . . . . .	B-52
Object Dictionary . . . . .	B-52
Detailed Information about Objects . . . . .	B-54
EtherCAT Firmware Update . . . . .	B-65
GS30A-06CDD . . . . .	B-68
GS30A-2AD2DA . . . . .	B-69
GS30A-02TRC . . . . .	B-70
GS30A-03TRA . . . . .	B-71
GS30A-FB-LD . . . . .	B-72
Wiring Diagrams. . . . .	B-73
GS30A-FB-OC . . . . .	B-75
Wiring Diagrams. . . . .	B-76
APPENDIX C: DIGITAL AND ANALOG I/O PARAMETER MAPS . . . . .	C-1
Introduction . . . . .	C-2
GS30 Digital Inputs . . . . .	C-3
GS30 Digital Outputs . . . . .	C-4
GS30 Analog Common Parameters . . . . .	C-5
GS30 Analog Input 1 Parameters . . . . .	C-5
GS30 Analog Input 2 Parameters . . . . .	C-6
GS30 Analog Output 1 Parameters . . . . .	C-8
GS30 Frequency Output Parameters. . . . .	C-8
APPENDIX D: USING GS30 AC DRIVES WITH AUTOMATIONDIRECT PLCs . . . . .	D-1
Appendix D Overview. . . . .	D-2
Sinking/Sourcing Basics. . . . .	D-2
GS30-to-PLC I/O Wiring Examples. . . . .	D-4
Drive Wired with DC Sinking Inputs (PLC output card is sourcing) . . . . .	D-4
Drive Wired with DC Sourcing Inputs (PLC output card is sinking) . . . . .	D-4
Drive Wired with DC Sinking Outputs (PLC input card is sourcing) . . . . .	D-5
Drive Wired with DC Sourcing Outputs (PLC input card is sinking) . . . . .	D-5
Drive Relay Outputs Wired with Sinking PLC Modules . . . . .	D-6
Drive Relay Outputs Wired with Sourcing PLC Modules . . . . .	D-6
Drive Analog Inputs . . . . .	D-7



Analog Input Wired for Voltage and Current . . . . .	D-7
Drive Analog Outputs . . . . .	D-8
Analog Output Wired for Voltage and Current . . . . .	D-8
Drive Frequency Output (High-speed Pulse Output) . . . . .	D-9
Communication with GS30 Drives . . . . .	D-10
Getting Started. . . . .	D-10
Serial Modbus Monitoring and Control . . . . .	D-12
Ethernet/IP and Modbus TCP Monitor and Control . . . . .	D-17
GS30A-CM-EIPx EtherNet/IP I/O Messaging (Implicit Messaging) . . . . .	D-18
Modbus Remote I/O Control Applications (use MODRW) . . . . .	D-19
Program Examples Using AutomationDirect PLCs . . . . .	D-20
<b>APPENDIX E: SAFE TORQUE OFF FUNCTION . . . . .</b>	<b>E-1</b>
Introduction . . . . .	E-2
Safe Function Failure Rate . . . . .	E-2
Safe Torque Off Terminal Function Description . . . . .	E-2
Internal STO Circuit Wiring Diagrams . . . . .	E-3
Control Loop Wiring. . . . .	E-4
STO Parameters . . . . .	E-5
Timing Diagram Description . . . . .	E-6
Error Code and Troubleshooting Instructions. . . . .	E-9
Test and Fault Confirmation. . . . .	E-11
<b>APPENDIX F: PID CONTROL . . . . .</b>	<b>F-1</b>
Function of PID Control. . . . .	F-2
What Does PID Control Accomplish? . . . . .	F-2
PID Control Analogy. . . . .	F-2
Common Applications for PID Control . . . . .	F-3
Definition of PID Loop "Directions" . . . . .	F-3
Forward-Acting PID Loop (Heating Loop) (Negative-Feedback Loop) . . . . .	F-3
Reverse-Acting PID Loop (Cooling Loop) (Positive-Feedback Loop) . . . . .	F-3
PID Control Overview . . . . .	F-4
Concept of GS30 PID Control & Tuning. . . . .	F-5
Proportional Gain (P) . . . . .	F-5
Integral Time (I) . . . . .	F-5
Derivative Value (D) . . . . .	F-6
Proportional Integral Control (PI) . . . . .	F-6
Proportional Derivative Control (PD). . . . .	F-6
Proportional Integral Derivative Control (PID) . . . . .	F-6
Tuning Example for PID Control . . . . .	F-7
<b>DURApulse</b> GS30 Parameters Involved in PID Control . . . . .	F-9
<b>DURApulse</b> GS30 Parameters Involved in Tension Control . . . . .	F-11

BLANK PAGE