

# USER MANUAL TABLE OF CONTENTS



## CONTENTS OF THIS USER MANUAL

<u>IRONHORSE GENERAL PURPOSE AC MOTORS USER MANUAL</u> .....	<u>CF-1</u>
<u>WARNINGS</u> .....	<u>W-1</u>
~ WARNING ~.....	W-1
Trademarks.....	W-1
~ AVERTISSEMENT ~.....	W-2
Marques de commerce.....	W-2
<u>USER MANUAL REVISION HISTORY</u> .....	<u>H-1</u>
<u>IRONHORSE GENERAL PURPOSE AC MOTORS USER MANUAL TABLE OF CONTENTS</u> .....	<u>TOC-1</u>
<u>CHAPTER 1: GETTING STARTED</u> .....	<u>1-1</u>
Manual Overview.....	1-2
Overview of this Publication.....	1-2
Who Should Read This Manual.....	1-2
Technical Support.....	1-2
Special Symbols.....	1-2
Available Models.....	1-3
MTF2 Conveyor/Farm-Duty T-Frame Single-Phase Motors – Features and Specifications.....	1-3
MTR2 Rolled-Steel 56C/56HC-Frame Single-Phase Motors – Features and Specifications.....	1-4
MTRJ Centrifugal Jet Pump One-Phase Motors – Features and Specifications.....	1-6
MTDP Open Drip-Proof AC Three-Phase Motors – Features and Specifications.....	1-7
MTR2 and MTRP Rolled-Steel 56C/56HC-Frame Three-Phase Motors – Features and Specifications.....	1-10
MTRJ Centrifugal Jet Pump Three-Phase Motors – Features and Specifications.....	1-12
MTCP2 Premium-Efficiency Cast-Iron Three-Phase Motors – Features and Specifications.....	1-13
Receiving and Inspection.....	1-26
Unpacking.....	1-26
IronHorse® Part Number Explanation.....	1-26
Reshipping.....	1-27
Long Term Storage.....	1-27
Warranty.....	1-27
<u>CHAPTER 2: MOUNTING AND INITIAL STARTUP</u> .....	<u>2-1</u>
Safety Information.....	2-2
Danger!.....	2-2
Wiring Notes: PLEASE READ PRIOR TO INSTALLATION.....	2-2
Applicable Codes.....	2-2
Motor Dimensions.....	2-3
(Dimensions = inches).....	2-3

<i>MTF2 T-Frame Single-phase Farm-Duty Motor Dimensions</i> .....	2-3
<i>MTR2 56(H)C-Frame Single-phase Rolled-steel Motor Dimensions</i> .....	2-3
<i>MTR2 56C-Frame Three-phase Rolled-steel Motor Dimensions</i> .....	2-4
<i>MTRP 56HC-Frame Three-phase Rolled-steel Motor Dimensions</i> .....	2-5
<i>MTDP Open Drip-Proof Three-phase Rolled-steel Motor Dimensions</i> .....	2-6
<i>MTCP2 Premium-Efficiency T-Frame Three-Phase Motor Dimensions</i> .....	2-7
<i>MTCP2 Premium-Efficiency TC-Frame Three-Phase Motor Dimensions</i> .....	2-11
<b>Terminal and Wiring Diagrams</b> .....	2-13
<i>IronHorse® Single-Phase Motors</i> .....	2-13
<i>IronHorse® Three-Phase Motors</i> .....	2-14
<i>Single-Phase Motors Reversing Diagrams</i> .....	2-16
<b>Motor Mounting</b> .....	2-18
<i>General Mounting Information</i> .....	2-18
<i>Motor Mounting Orientation</i> .....	2-18
<i>Proper Installation Conditions</i> .....	2-19
<i>Coupling Alignment</i> .....	2-19
<b>Motor Nameplate &amp; Starter Information</b> .....	2-20
<i>Typical IronHorse® Motor Nameplate</i> .....	2-20
<i>Motor Starter Information</i> .....	2-20
<i>Locked Rotor Amps</i> .....	2-20
<i>Inspection Before Startup</i> .....	2-21
<i>Initial Startup Inspection</i> .....	2-21
<b><u>CHAPTER 3: MAINTENANCE</u></b> .....	<b>3-1</b>
<i>Routine Maintenance</i> .....	3-2
<i>Bearing Size Information</i> .....	3-3
<b><u>CHAPTER 4: ACCESSORIES</u></b> .....	<b>4-1</b>
<b>Replacement Parts</b> .....	4-2
<i>Junction boxes, c-flanges, Drive Bells, and Current Diverter Rings for IronHorse® MTDP Drip-Proof Three-Phase Motors</i> .....	4-2
<i>Capacitors and Centrifugal Switches for IronHorse® Single-Phase Motors</i> .....	4-4
<i>Spare/Replacement Parts for MTF2 Single-Phase Farm-Duty Motors</i> .....	4-4
<i>Spare/Replacement Parts for MTR2/MTRJ Single-Phase Motors</i> .....	4-6
<i>Spare/Replacement Parts for MTR2/MTRP/MTRJ Three-Phase Motors</i> .....	4-7
<i>Spare/Replacement Parts for MTCP2 Premium-Efficiency Three-Phase Motors</i> .....	4-8
<b>C-Flange Kits</b> .....	4-10
<i>C-Flange Kits for MTCP2 Premium-Efficiency Three-Phase Motors</i> .....	4-10
<b>STABLE™ Slide Bases</b> .....	4-12
<i>Slide Base Selection</i> .....	4-13
<i>Slide Base Dimensions</i> .....	4-14
<b><u>CHAPTER 5: REFERENCE INFORMATION</u></b> .....	<b>5-1</b>
<i>Using IronHorse® Motors with AC Drives</i> .....	5-2
<i>Voltage Spike Considerations for AC Drive Control</i> .....	5-3
<i>Radial Overhung Load</i> .....	5-4
<i>F1 and F2 Mounting</i> .....	5-5
<i>Junction Box Dimensions</i> .....	5-6
<i>Minimum Sheave Diameters</i> .....	5-7
<i>Decibel Levels</i> .....	5-8

<i>Shipping Crate Dimensions</i> .....	5-10
<i>Performance Curves for MTF2 Motors</i> .....	5-11
<i>Performance Curves for MTR2 Motors</i> .....	5-16
<i>Performance Curves for MTDP Motors</i> .....	5-34
<i>Performance Curves for MTRP Motors</i> .....	5-50
<i>Speed/Torque Curves for MTCP2 Motors (1800 RPM)</i> .....	5-57
<i>Speed/Torque Curves for MTCP2 Motors (1200 RPM)</i> .....	5-64
<i>Speed/Torque Curves for MTCP2 Motors (3600 RPM)</i> .....	5-68
<b>CHAPTER 6: LEGACY MOTORS</b> .....	<b>6-1</b>
Chapter Overview.....	6-3
MTCP Series Motors.....	6-3
MTCP Features and Specifications.....	6-3
MTCP Specifications.....	6-4
MTCP Motor Performance Data.....	6-6
MTCP Motor Dimensions.....	6-10
MTCP Junction Box Dimensions.....	6-16
MTCP Decibel Levels.....	6-17
Spare/Replacement Parts for MTCP Premium-Efficiency Three-Phase Motors.....	6-18
MTCP Bearing Size Information.....	6-20
MTR Series Motors.....	6-21
MTR Features and Specifications (Single-Phase Motors).....	6-21
MTR Features and Specifications (Three-Phase Motors).....	6-22
MTR Motor Dimensions.....	6-24
MTR Junction Box Dimensions.....	6-25
MTR Terminal and Wiring Diagrams.....	6-25
MTR Motors Decibel Levels.....	6-25
Spare/Replacement Parts for MTR Single-Phase Motors.....	6-26
MTR Bearing Size Information.....	6-26
MTSS Series Motors.....	6-27
MTSS Features and Specifications.....	6-27
MTSS Motor Dimensions.....	6-29
MTSS Junction Box Dimensions.....	6-30
MTSS Decibel Levels.....	6-30
MTSS Motor Mounting.....	6-31
Spare/Replacement Parts for MTSS Stainless-Steel Three-Phase Motors.....	6-32
MTSS Bearing Size Information.....	6-32
MTC EAct Series Motors.....	6-33
MTC Features and Specifications.....	6-33
MTC Motor Dimensions.....	6-41
MTC Junction Box Dimensions.....	6-46
MTC Motors Decibel Levels.....	6-47
C-Flange Kits for MTC EAct Three-Phase Motors.....	6-47
MTC Motors Bearing Size Information.....	6-49
MTF Farm-Duty T-Frame Single-Phase Motors – Features and Specifications.....	6-50
Motor Dimensions.....	6-51
MTF T-Frame Single-phase Farm-Duty Motor Dimensions.....	6-51
Terminal and Wiring Diagrams.....	6-51
Replacement Parts.....	6-52

---

<i>Capacitors and Centrifugal Switches for IronHorse® Single-Phase Motors</i> .....	6-52
<i>Spare/Replacement Parts for MTF Single-Phase Farm-Duty Motors</i> .....	6-52
<i>Junction Box Dimensions</i> .....	6-53