


# TABLE OF CONTENTS

---

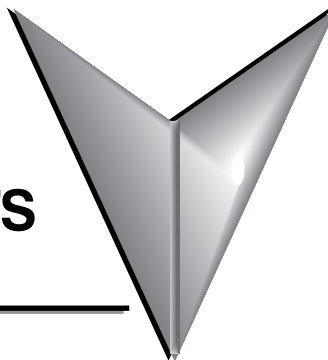

|                                                 |            |
|-------------------------------------------------|------------|
| User Caution .....                              | i          |
| Publication History.....                        | iv         |
| Table of Contents.....                          | vi         |
| <b>Chapter 1 - Getting Started.....</b>         | <b>1-1</b> |
| Introduction .....                              | 1-2        |
| Purpose of this Manual.....                     | 1-2        |
| About Getting Started .....                     | 1-2        |
| Online Help Files and Other Documentation.....  | 1-2        |
| Technical Support.....                          | 1-2        |
| Conventions Used.....                           | 1-3        |
| Key Topics for Each Chapter.....                | 1-3        |
| Before you begin... ..                          | 1-4        |
| Productivity Suite System Requirements.....     | 1-5        |
| Step 1: Install Programming Software .....      | 1-6        |
| Step 2: Launch Programming Software .....       | 1-10       |
| Online Help .....                               | 1-11       |
| Step 3: Install Hardware .....                  | 1-12       |
| Step 4: Apply Power to CPU .....                | 1-16       |
| Step 5: Establish PC to CPU Communications..... | 1-16       |
| Step 6: Open/Read Hardware Configuration.....   | 1-17       |
| Step 7: Create a Project.....                   | 1-19       |

## Table of Contents

---

|                                                            |             |
|------------------------------------------------------------|-------------|
| Step 8: Save Project.....                                  | 1-24        |
| Step 9: Write Project to CPU.....                          | 1-25        |
| Step 10: Place CPU in RUN Mode .....                       | 1-26        |
| Step 11: Test the Project Using Monitor Mode.....          | 1-27        |
| <br><b>Chapter 2 - Specifications .....</b>                | <b>2-1</b>  |
| Overview .....                                             | 2-4         |
| Hardware.....                                              | 2-4         |
| <b>P1000 Power Supplies.....</b>                           | <b>2-5</b>  |
| P1-01AC and P1-02AC Power Supplies .....                   | 2-5         |
| P1-01AC Power Supply.....                                  | 2-6         |
| P1-02AC Power Supply .....                                 | 2-7         |
| Power Connections .....                                    | 2-8         |
| Grounding .....                                            | 2-8         |
| P1-01DC Power Supply .....                                 | 2-9         |
| Power Connections .....                                    | 2-10        |
| Grounding .....                                            | 2-10        |
| Productivity® 1000 Alternate Power Supply Connection ..... | 2-11        |
| <b>Productivity® 1000 P1-540 CPU Module .....</b>          | <b>2-12</b> |
| P1-540 CPU Specifications.....                             | 2-12        |
| P1-540 CPU General Specifications.....                     | 2-13        |
| P1-540 Module Faceplate Layout .....                       | 2-14        |
| P1-540 Battery .....                                       | 2-15        |
| P1-540 Communication Ports.....                            | 2-16        |
| MicroUSB Programming Port .....                            | 2-16        |
| P1-540 Ethernet Port.....                                  | 2-17        |
| microSD Slot.....                                          | 2-18        |
| RS-232 Port.....                                           | 2-19        |
| P1-540 RS-485 Port .....                                   | 2-20        |
| RS-485 Port.....                                           | 2-20        |
| <b>Productivity1000 P1-550 CPU Module.....</b>             | <b>2-21</b> |
| P1-550 CPU Specifications.....                             | 2-21        |
| <b>Productivity1000 P1-550 CPU Module.....</b>             | <b>2-22</b> |
| P1-550 CPU Specifications.....                             | 2-22        |
| P1-550 Module Faceplate Layout .....                       | 2-23        |

## Table of Contents

---

|                                                    |             |
|----------------------------------------------------|-------------|
| P1-550 Battery .....                               | 2-24        |
| P1-550 Communication Ports.....                    | 2-25        |
| MicroUSB Programming Port .....                    | 2-25        |
| P1-550 Ethernet Port.....                          | 2-26        |
| microSD Slot.....                                  | 2-27        |
| RS-232 Port .....                                  | 2-28        |
| RS-485 Port .....                                  | 2-29        |
| <b>Remote Slave Module.....</b>                    | <b>2-30</b> |
| P1-RX Remote Slave Module.....                     | 2-30        |
| Status Indicators.....                             | 2-30        |
| P1-RX Power Terminal .....                         | 2-31        |
| P1-RX Remote I/O Example .....                     | 2-31        |
| P1-RX Setting Remote Slave Address .....           | 2-32        |
| P1-RX Remote I/O Port .....                        | 2-33        |
| <b>I/O Modules Overview .....</b>                  | <b>2-34</b> |
| <b>Discrete I/O Modules.....</b>                   | <b>2-35</b> |
| Discrete Input Modules.....                        | 2-35        |
| Discrete Output Modules.....                       | 2-35        |
| <b>Discrete Combo I/O Modules.....</b>             | <b>2-36</b> |
| Discrete Combo Input/Output Modules.....           | 2-36        |
| <b>I/O Modules Installation .....</b>              | <b>2-36</b> |
| <b>P1-08SIM Input Simulator Module.....</b>        | <b>2-37</b> |
| <b>P1-08ND-TTL DC Input.....</b>                   | <b>2-38</b> |
| Wiring Diagrams.....                               | 2-40        |
| <b>P1-08ND3 Sinking/Sourcing DC Input .....</b>    | <b>2-41</b> |
| Wiring Diagrams .....                              | 2-43        |
| <b>P1-16ND3 Sinking/Sourcing DC Input.....</b>     | <b>2-44</b> |
| Wiring Diagrams.....                               | 2-46        |
| <b>P1-08NE3 AC/DC Sinking/Sourcing Input .....</b> | <b>2-47</b> |
| Wiring Diagrams.....                               | 2-49        |
| <b>P1-16NE3 AC/DC Sinking/Sourcing Input.....</b>  | <b>2-50</b> |
| Wiring Diagrams.....                               | 2-52        |
| <b>P1-08NA AC Input.....</b>                       | <b>2-53</b> |
| Wiring Diagrams.....                               | 2-55        |

|                                                 |         |
|-------------------------------------------------|---------|
| P1-08TD-TTL DC Output .....                     | 2-56    |
| Wiring Diagrams.....                            | 2-58    |
| P1-08TD1 Sinking DC Output.....                 | 2-59    |
| Wiring Diagrams.....                            | 2-61    |
| P1-08TD2 Sourcing DC Output.....                | 2-62    |
| Wiring Diagrams.....                            | 2-64    |
| P1-15TD1 Sinking DC Output .....                | 2-65    |
| Wiring Diagrams.....                            | 2-67    |
| P1-15TD2 Sourcing DC Output.....                | 2-68    |
| Wiring Diagrams.....                            | 2-70    |
| P1-08TA AC Output .....                         | 2-71    |
| Wiring Diagrams.....                            | 2-73    |
| P1-04TRS Isolated Relay.....                    | 2-74    |
| Wiring Diagrams.....                            | 2-76    |
| P1-08TRS Isolated Relay.....                    | 2-77    |
| Wiring Diagrams.....                            | 2-79    |
| P1-16TR Relay Output .....                      | 2-80    |
| Wiring Diagrams.....                            | 2-82    |
| P1-15CDD1 Input/Output .....                    | 2-83    |
| Wiring Diagrams.....                            | 2-85    |
| P1-15CDD2 Input/Output.....                     | 2-86    |
| Wiring Diagrams.....                            | 2-88    |
| P1-16CDR Discrete Input/ Relay Output.....      | 2-89    |
| Wiring Diagrams.....                            | 2-91    |
| <br>Chapter 3 - Analog I/O Specifications ..... | <br>3-1 |
| Analog I/O Modules Overview.....                | 3-3     |
| Analog I/O Modules.....                         | 3-4     |
| Analog Input Modules.....                       | 3-4     |
| Analog Output Modules.....                      | 3-4     |
| Analog Input/Output Modules .....               | 3-5     |

## Table of Contents

---

|                                       |             |
|---------------------------------------|-------------|
| <b>P1-04AD Analog Input</b> .....     | <b>3-6</b>  |
| Wiring Diagrams.....                  | 3-8         |
| Module Configuration.....             | 3-9         |
| <b>P1-04AD-1 Analog Input</b> .....   | <b>3-10</b> |
| Wiring Diagrams.....                  | 3-12        |
| Module Configuration.....             | 3-13        |
| <b>P1-04AD-2 Analog Input</b> .....   | <b>3-14</b> |
| Wiring Diagrams.....                  | 3-16        |
| Module Configuration.....             | 3-17        |
| <b>P1-04ADL-1 Analog Input</b> .....  | <b>3-18</b> |
| Wiring Diagrams.....                  | 3-20        |
| Module Configuration.....             | 3-21        |
| <b>P1-04ADL-2 Analog Input</b> .....  | <b>3-22</b> |
| Wiring Diagrams.....                  | 3-24        |
| Module Configuration.....             | 3-25        |
| <b>P1-08ADL-1 Analog Input</b> .....  | <b>3-26</b> |
| Wiring Diagrams.....                  | 3-28        |
| Module Configuration.....             | 3-29        |
| <b>P1-08ADL-2 Analog Input</b> .....  | <b>3-30</b> |
| Wiring Diagrams.....                  | 3-32        |
| Module Configuration.....             | 3-33        |
| <b>P1-04RTD Analog Input</b> .....    | <b>3-34</b> |
| Wiring Diagrams.....                  | 3-37        |
| Module Configuration.....             | 3-38        |
| <b>P1-04THM Analog Input</b> .....    | <b>3-39</b> |
| Wiring Diagrams.....                  | 3-41        |
| Module Configuration.....             | 3-43        |
| <b>P1-04NTC Thermistor</b> .....      | <b>3-44</b> |
| Wiring Diagrams.....                  | 3-46        |
| Module Configuration.....             | 3-47        |
| <b>P1-04DAL-1 Analog Output</b> ..... | <b>3-48</b> |
| Wiring Diagrams.....                  | 3-50        |
| Module Configuration.....             | 3-51        |

|                                                                  |                |
|------------------------------------------------------------------|----------------|
| <b>P1-04DAL-2 Analog Output .....</b>                            | <b>3-52</b>    |
| Wiring Diagrams .....                                            | 3-54           |
| Module Configuration .....                                       | 3-55           |
| <b>P1-08DAL-1 Analog Output .....</b>                            | <b>3-56</b>    |
| Wiring Diagrams .....                                            | 3-58           |
| Module Configuration .....                                       | 3-59           |
| <b>P1-08DAL-2 Analog Output .....</b>                            | <b>3-60</b>    |
| Wiring Diagrams .....                                            | 3-62           |
| Module Configuration .....                                       | 3-63           |
| <b>P1-4ADL2DAL-1 Current Analog Input/Output .....</b>           | <b>3-64</b>    |
| Wiring Diagrams .....                                            | 3-67           |
| Module Configuration .....                                       | 3-68           |
| <b>P1-4ADL2DAL-2 Voltage Analog Input/Output .....</b>           | <b>3-69</b>    |
| Wiring Diagrams .....                                            | 3-72           |
| Module Configuration .....                                       | 3-73           |
| <br><b>Chapter 4 - Specialty Modules Specifications .....</b>    | <br><b>4-1</b> |
| Specialty Modules Overview .....                                 | 4-2            |
| <b>P1-02HSC High-Speed Isolated Sinking/Sourcing Input .....</b> | <b>4-3</b>     |
| Wiring Diagrams .....                                            | 4-5            |
| Wiring Example for Koyo Open Collector Output Encoder .....      | 4-6            |
| Wiring Example for Koyo Totem Pole Output Encoder .....          | 4-7            |
| Module Configuration .....                                       | 4-8            |
| <b>P1-04PWM Module .....</b>                                     | <b>4-9</b>     |
| Wiring Diagrams .....                                            | 4-11           |
| Module Configuration .....                                       | 4-12           |
| High-Speed Module Tester Utility .....                           | 4-13           |
| <br><b>Chapter 5 - Installation and Wiring .....</b>             | <br><b>5-1</b> |
| Safety Guidelines .....                                          | 5-3            |
| Plan for Safety .....                                            | 5-3            |
| Three Levels of Protection .....                                 | 5-4            |
| Orderly System Shutdown .....                                    | 5-4            |
| System Power Disconnect .....                                    | 5-4            |
| Emergency Stop Circuits .....                                    | 5-5            |

## Table of Contents

---

|                                                   |             |
|---------------------------------------------------|-------------|
| <b>Productivity® 1000 Mechanical Design .....</b> | <b>5-6</b>  |
| Typical Productivity1000 System.....              | 5-6         |
| <b>Dimensions and Installation .....</b>          | <b>5-7</b>  |
| <b>Basic Dimensions .....</b>                     | <b>5-9</b>  |
| P1-01AC, P1-02AC and P1-01DC .....                | 5-9         |
| P1-540/P1-550.....                                | 5-9         |
| P1-RX Module.....                                 | 5-10        |
| I/O Modules.....                                  | 5-10        |
| <b>Mounting Guidelines .....</b>                  | <b>5-11</b> |
| Enclosures.....                                   | 5-11        |
| Mounting Position.....                            | 5-11        |
| Using Mounting Rails.....                         | 5-11        |
| Mounting Clearances.....                          | 5-12        |
| Temperature Considerations.....                   | 5-12        |
| Power Considerations .....                        | 5-12        |
| Grounding .....                                   | 5-13        |
| Agency Approvals .....                            | 5-13        |
| Installing the Power Supply.....                  | 5-14        |
| DIN Rail Mounting P1000 System .....              | 5-15        |
| Surface Mounting P1000 System .....               | 5-15        |
| Installing the I/O Modules.....                   | 5-16        |
| <b>Wiring Guidelines .....</b>                    | <b>5-17</b> |
| Power Supply Wiring.....                          | 5-17        |
| Grounding .....                                   | 5-17        |
| Fuse Protection.....                              | 5-18        |
| <b>I/O Module Wiring Options.....</b>             | <b>5-19</b> |
| Hand Wiring System.....                           | 5-19        |
| ZIPLink Wiring System.....                        | 5-20        |
| Terminal Block With Pigtail Cable.....            | 5-20        |
| Input and Output Modules ZIPLink Selections.....  | 5-21        |
| Analog Modules ZIPLink Selections.....            | 5-22        |
| Removable Terminal Blocks (Optional) .....        | 5-23        |
| P1-10RTB and P1-10RTB-1 .....                     | 5-23        |
| P2-RTB and P2-RTB-1 .....                         | 5-23        |
| Terminal Block Installation .....                 | 5-24        |

|                                                                       |             |
|-----------------------------------------------------------------------|-------------|
| Terminal Block Removal .....                                          | 5-25        |
| Planning the I/O Wiring Routes.....                                   | 5-25        |
| <b>System Wiring Strategies.....</b>                                  | <b>5-26</b> |
| CPU Isolation Boundaries.....                                         | 5-26        |
| Sinking/Sourcing Concepts .....                                       | 5-27        |
| I/O "Common Terminal" Concepts .....                                  | 5-28        |
| DC Input Wiring Methods.....                                          | 5-29        |
| DC Output Wiring Methods.....                                         | 5-29        |
| Relay Outputs - Wiring Methods .....                                  | 5-31        |
| Relay Outputs – Transient Suppression for Inductive Loads.....        | 5-32        |
| CPU's Integrated Transient Suppressors .....                          | 5-33        |
| Types of Additional Transient Protection.....                         | 5-34        |
| <b>Chapter 6 - Communications .....</b>                               | <b>6-1</b>  |
| <b>Communications .....</b>                                           | <b>6-1</b>  |
| Communication Ports .....                                             | 6-1         |
| microSD Card: .....                                                   | 6-2         |
| MicroUSB: .....                                                       | 6-2         |
| RS-232: .....                                                         | 6-2         |
| <b>Communications: Connectivity .....</b>                             | <b>6-8</b>  |
| CPU Port Connections .....                                            | 6-8         |
| ASCII and Custom Protocol Functionality.....                          | 6-13        |
| ASCII Instructions .....                                              | 6-13        |
| Custom Protocol Instructions .....                                    | 6-14        |
| <b>Communications: Ethernet .....</b>                                 | <b>6-16</b> |
| TCP and UDP Port Numbers .....                                        | 6-16        |
| IP Addressing and Subnetting .....                                    | 6-16        |
| PC Setup.....                                                         | 6-17        |
| CPU Setup .....                                                       | 6-18        |
| CPU Setup, continued.....                                             | 6-19        |
| TCP Connection Behavior with Modbus TCP and Network Instructions..... | 6-19        |
| <b>Communications Modbus Functionality.....</b>                       | <b>6-20</b> |
| Master/Client Function Code and Data Type Support .....               | 6-20        |
| Slave/Server Function Code and Data Type Support.....                 | 6-22        |
| Assigning Modbus Addresses to Tags .....                              | 6-23        |

## Table of Contents

---

|                                                                  |                |
|------------------------------------------------------------------|----------------|
| Modbus Options.....                                              | 6-26           |
| Modbus Instructions .....                                        | 6-29           |
| Network Instructions.....                                        | 6-31           |
| Automatic Poll versus Manual Polling and Interlocking .....      | 6-32           |
| Message Queue .....                                              | 6-34           |
| <b>EtherNet/IP for the Productivity Series .....</b>             | <b>6-35</b>    |
| Terminology Definitions.....                                     | 6-35           |
| Network Layer Chart .....                                        | 6-36           |
| EtherNet/IP Data.....                                            | 6-36           |
| Class 1 and Class 3 Connections.....                             | 6-37           |
| Setup Example 1: Productivity® 1000 as EtherNet/IP Adapter ..... | 6-37           |
| Example 2: Productivity® 1000 as EtherNet/IP Scanner.....        | 6-40           |
| Troubleshooting Tips: .....                                      | 6-43           |
| EtherNet/IP I/O Message Troubleshooting:.....                    | 6-45           |
| EtherNet/IP Explicit Message Troubleshooting:.....               | 6-45           |
| ProNET .....                                                     | 6-46           |
| Custom Protocol over Ethernet Functionality.....                 | 6-47           |
| Hardware Configuration .....                                     | 6-48           |
| Custom Protocol Ethernet Instruction.....                        | 6-49           |
| <b>Communications: Remote I/O and GS-Drives .....</b>            | <b>6-50</b>    |
| Design Considerations for Remote I/O and GS-Drives .....         | 6-50           |
| <b>Communications: Port Configuration.....</b>                   | <b>6-56</b>    |
| External Ethernet Port Settings .....                            | 6-57           |
| Local Ethernet Port Settings.....                                | 6-58           |
| Remote Access Configuration .....                                | 6-58           |
| Serial Configuration.....                                        | 6-59           |
| RS-232 and RS-485 Port Settings .....                            | 6-59           |
| <b>Communications: Error Codes.....</b>                          | <b>6-62</b>    |
| <b>P1000 EtherNet/IP Error Codes .....</b>                       | <b>6-63</b>    |
| <br><b>Chapter 7 - Maintenance and Troubleshooting .....</b>     | <br><b>7-1</b> |
| Hardware Maintenance .....                                       | 7-3            |
| Standard Maintenance .....                                       | 7-3            |
| Air Quality Maintenance .....                                    | 7-3            |
| CPU Battery Replacement .....                                    | 7-3            |

|                                                           |             |
|-----------------------------------------------------------|-------------|
| <b>Diagnostics .....</b>                                  | <b>7-4</b>  |
| Diagnostics. ....                                         | 7-4         |
| Critical Errors .....                                     | 7-4         |
| Non-Critical Errors.....                                  | 7-4         |
| Finding Diagnostic Information .....                      | 7-4         |
| Error Codes .....                                         | 7-4         |
| <b>CPU Functions Indicators .....</b>                     | <b>7-5</b>  |
| <b>PWR Indicator .....</b>                                | <b>7-6</b>  |
| Faulty or Incorrect Power Supply .....                    | 7-6         |
| Faulty CPU .....                                          | 7-6         |
| Device or Module Causes the Power Supply to Shutdown..... | 7-7         |
| <b>Run Indicator .....</b>                                | <b>7-8</b>  |
| <b>CPU Indicator .....</b>                                | <b>7-8</b>  |
| <b>Communications Problems .....</b>                      | <b>7-8</b>  |
| <b>I/O Module Troubleshooting .....</b>                   | <b>7-9</b>  |
| Things to Check .....                                     | 7-9         |
| Error Codes .....                                         | 7-9         |
| Some Quick Steps .....                                    | 7-9         |
| Testing Output Points .....                               | 7-10        |
| <b>Noise Troubleshooting .....</b>                        | <b>7-11</b> |
| Electrical Noise Problems.....                            | 7-11        |
| Reducing Electrical Noise.....                            | 7-11        |
| <b>Run Time vs. Stop Mode Transfer Instruction.....</b>   | <b>7-12</b> |
| Run Time Transfers.....                                   | 7-13        |
| Stop Mode Transfers .....                                 | 7-13        |
| <b>Forcing I/O Points.....</b>                            | <b>7-15</b> |
| Advantages of Forces .....                                | 7-15        |
| Enabling Forces .....                                     | 7-15        |
| Forcing Tags in Your System .....                         | 7-16        |
| Identifying Forced Values.....                            | 7-18        |
| Force Value Timing Chart.....                             | 7-19        |

## Table of Contents

---

|                                                                                   |            |
|-----------------------------------------------------------------------------------|------------|
| <b>Appendix A - European Union Directives (CE).....</b>                           | <b>A-1</b> |
| European Union (EU) Directives.....                                               | A-2        |
| Member Countries .....                                                            | A-2        |
| Applicable Directives.....                                                        | A-2        |
| Compliance .....                                                                  | A-2        |
| General Safety.....                                                               | A-4        |
| Special Installation Manual.....                                                  | A-4        |
| Other Sources of Information .....                                                | A-4        |
| <b>Basic EMC Installation Guidelines .....</b>                                    | <b>A-5</b> |
| Enclosures.....                                                                   | A-5        |
| Mains Filters.....                                                                | A-5        |
| Suppression and Fusing.....                                                       | A-5        |
| Internal Enclosure Grounding.....                                                 | A-5        |
| Equipotential Grounding .....                                                     | A-5        |
| Communications and Shielded Cables .....                                          | A-6        |
| Analog and RS232 Cables.....                                                      | A-7        |
| Multidrop Cables .....                                                            | A-7        |
| Shielded Cables Within Enclosures .....                                           | A-7        |
| Analog Modules and RF Interference.....                                           | A-7        |
| Network Isolation .....                                                           | A-8        |
| Items Specific to the Productivity® 1000 .....                                    | A-9        |
| <br><b>Appendix B - Productivity®1000 Error Codes.....</b>                        | <b>B-1</b> |
| Communications Error Codes.....                                                   | B-2        |
| Module Error Codes .....                                                          | B-3        |
| CPU Error Codes.....                                                              | B-4        |
| Project Error Codes .....                                                         | B-5        |
| Project Error Messages.....                                                       | B-7        |
| <br><b>Appendix C - Security Considerations for Control Systems Networks.....</b> | <b>C-1</b> |
| Security Considerations for Control Systems Networks.....                         | C-2        |