

TABLE OF CONTENTS



Chapter 1 - Getting Started!	1-1
Introduction	1-2
Purpose of this Manual.....	1-2
About Getting Started.....	1-2
Online Help Files and Other Documentation	1-2
Technical Support.....	1-2
Conventions Used	1-3
Key Topics for Each Chapter.....	1-3
Before you begin... ..	1-4
Productivity Suite System Requirements.....	1-5
Step 1: Install Programming Software.....	1-6
Step 2: Launch Programming Software	1-10
Online Help	1-11
Step 3: Install Hardware.....	1-12
Step 4: Apply Power to CPU.	1-15
Step 5: Establish PC to CPU Communications.....	1-16
Step 6: Open/Read Hardware Configuration.....	1-17
Step 7: Create a Project.....	1-19
Rung #1.....	1-19
Rung #2.....	1-23
Step 8: Save Project.....	1-25
Step 9: Write Project to CPU.....	1-26
Step 10: Place CPU in RUN Mode.....	1-27
Step 11: Test the Project Using Monitor Mode.....	1-28

Table of Contents

Chapter 2 - Specifications	2-1
Overview	2-2
CPU System.....	2-2
P3-03B, P3-05B, P3-08B, P3-11B Bases	2-3
Base Configuration.....	2-3
P3-01AC and P3-01DC Power Supplies	2-5
No Power Budgeting	2-5
P3-01AC Specifications	2-6
P3-01DC Specifications.....	2-7
Power Connections	2-8
Grounding	2-8
Productivity3000® CPU Modules	2-9
Productivity® 3000 CPU Modules	2-10
P3-550 Specifications (Retired 06/2023)	2-11
LCD Message Display (P3-550).....	2-13
Front Panel LCD Monitoring and Configuration (P3-550)	2-14
P3-550E Specifications	2-15
LCD Message Display (P3-550E)	2-17
Front Panel LCD Monitoring and Configuration (P3-550E).....	2-18
P3-530 Specifications.....	2-19
Battery (Optional).....	2-21
Port Specifications	2-22
USB IN Port P3-550	2-22
P3-550(E)	2-23
P3-530	2-23
Ethernet Port.....	2-23
Remote I/O Port P3-550(E).....	2-23
P3-550(E)	2-24
P3-530	2-24
USB OUT Port.....	2-24
EXP I/O OUT Port.....	2-24
P3-550(E)	2-25
P3-530	2-25
RS-232 Port.....	2-25
RS-485 Port.....	2-26

P3-EX Expansion Module.....	2-27
P3-EX Expansion Module Example	2-28
Port Specifications	2-30
Remote Slave Modules	2-31
P3-RS/P3-RX Remote Slave Module Example (P3-550(E) only).....	2-32
P3-RS Remote Slave Module Specifications	2-33
P3-RS Remote Slave Module Front Panel.....	2-34
Status Indicators.....	2-34
LCD Message Display (P3-RS only).....	2-35
P3-RX Remote Slave Module Specifications.....	2-36
P3-RX Remote Slave Module Front Panel.....	2-37
Status Indicators.....	2-37
Setting the Remote Slave Address.....	2-38
Port Specifications	2-40
USB IN Port (P3-RS only).....	2-40
P3-RS.....	2-40
Remote I/O Port	2-41
P3-RS.....	2-41
P3-RX.....	2-41
EXP I/O OUT Port.....	2-42
P3-RS.....	2-42
P3-RX.....	2-42
RS-232 Serial Port	2-43
P3-RS.....	2-43
P3-RX.....	2-43
RS-485 Serial Port	2-44
P3-RS.....	2-44
P3-RX.....	2-44
I/O Modules Overview	2-45
Discrete I/O Modules.....	2-46
P3-16SIM Input Simulator	2-47
P3-08ND3S Isolated Sinking/Sourcing Input.....	2-48
Wiring Diagrams	2-50
P3-16ND3 Sinking/Sourcing Input.....	2-51
Wiring Diagrams.....	2-53

Table of Contents

P3-32ND3 Sinking/Sourcing Input.....	2-54
Wiring Diagrams.....	2-55
P3-64ND3 Sinking/Sourcing Input	2-56
Wiring Diagrams.....	2-57
P3-08NAS AC Isolated Input	2-58
Wiring Diagrams.....	2-60
P3-16NA AC Input.....	2-61
Wiring Diagrams.....	2-63
P3-08TD1S Sinking Output.....	2-64
Wiring Diagrams.....	2-66
P3-08TD2S Sourcing Output	2-67
Wiring Diagrams.....	2-69
P3-16TD1 Sinking Output.....	2-70
Wiring Diagrams.....	2-72
P3-16TD2 Sourcing Output	2-73
Wiring Diagrams.....	2-75
P3-32TD1 Sinking Output.....	2-76
Wiring Diagrams.....	2-78
P3-32TD2 Sourcing Output.....	2-79
Wiring Diagrams.....	2-81
P3-64TD1 Sinking Output.....	2-82
Wiring Diagrams.....	2-84
P3-64TD2 Sourcing Output.....	2-85
Wiring Diagrams.....	2-87
P3-08TAS Isolated AC Output	2-88
Wiring Diagrams.....	2-90
P3-16TA AC Output	2-91
Wiring Diagrams.....	2-93
P3-08TRS Isolated Relay Output.....	2-94
Wiring Diagrams.....	2-96
P3-16TR Relay Output.....	2-97
Wiring Diagrams.....	2-99

P3-08TRS-1 Isolated Relay Output	2-100
Wiring Diagrams	2-102
P3-16TD3P Sinking/Sourcing Protected Output.....	2-103
Wiring Diagrams.....	2-105
Chapter 3 - Analog I/O Specifications	3-1
Analog I/O Modules Overview.....	3-2
Analog I/O Modules.....	3-3
P3-04ADS Isolated Analog Input.....	3-4
Wiring Diagrams.....	3-6
Module Configuration	3-8
LCD Panel Display	3-9
P3-08AD Analog Input.....	3-10
Wiring Diagrams.....	3-12
Module Configuration	3-13
LCD Panel Display	3-14
P3-16AD-1 Analog Input	3-15
Wiring Diagrams.....	3-17
Module Configuration	3-18
LCD Panel Display	3-19
P3-16AD-2 Analog Input.....	3-20
Wiring Diagrams.....	3-22
Module Configuration	3-23
LCD Panel Display	3-24
P3-08RTD Analog Input	3-25
Wiring Diagrams.....	3-27
Module Configuration	3-28
LCD Panel Display.....	3-29
P3-08THM Analog Input.....	3-30
Wiring Diagrams.....	3-32
Module Configuration	3-33
LCD Panel Display.....	3-34

Table of Contents

P3-04DA Analog Output.....	3-35
Wiring Diagrams.....	3-37
Configuration Settings.....	3-39
LCD Panel Display.....	3-40
P3-08DA-1 Analog Output	3-41
Wiring Diagrams.....	3-43
Module Configuration	3-44
LCD Panel Display.....	3-45
P3-08DA-2 Analog Output.....	3-46
Wiring Diagrams.....	3-48
Module Configuration	3-49
LCD Panel Display.....	3-50
P3-06DAS-1 Isolated Analog Output (Retired).....	3-51
Wiring Diagrams.....	3-53
Module Configuration	3-54
LCD Panel Display.....	3-55
P3-06DAS-2 Isolated Analog Output (Retired).....	3-56
Wiring Diagrams.....	3-58
Module Configuration	3-59
LCD Panel Display.....	3-60
P3-16DA-1 Analog Output.....	3-61
Wiring Diagrams.....	3-63
Module Configuration	3-64
LCD Panel Display.....	3-65
P3-16DA-2 Analog Output	3-66
Wiring Diagrams.....	3-68
Module Configuration	3-69
LCD Panel Display.....	3-70
P3-8AD4DA-1 Analog Input/Output.....	3-71
Wiring Diagrams.....	3-74
Module Configuration	3-75
LCD Panel Display.....	3-76

P3-8AD4DA-2 Analog Input/Output	3-77
Wiring Diagrams	3-80
Module Configuration	3-81
LCD Panel Display	3-82
Chapter 4 - Speciality Modules Specifications	4-1
High-Speed Pulse Input (HSI) Module Overview	4-2
HSI Specifications	4-2
HSI LED Indicators	4-5
HSI Wiring Examples	4-6
High-Speed Output (HSO) Module Overview	4-9
HSO LED Indicators	4-12
HSO Wiring Examples	4-12
High-Speed Module Tester Utility	4-16
P3-SCM Serial Communications Module	4-17
P3-SCM Specifications	4-17
P3-SCM LED Indicators	4-21
Chapter 5 - Installation and Wiring	5-1
Safety Guidelines	5-2
Plan for Safety	5-2
Three Levels of Protection	5-3
Orderly System Shutdown	5-3
System Power Disconnect	5-3
Emergency Stop Circuits	5-4
Productivity3000[®] Mechanical Design Introduction	5-5
Typical Productivity3000 System	5-5
Dimensions and Installation	5-6
Base Dimensions	5-6
Mounting Guidelines	5-7
Enclosures	5-7
Mounting Position	5-7
Mounting Clearances	5-7
Grounding	5-7

Table of Contents

Temperature Considerations.....	5-7
Power Considerations.....	5-7
Class 1, Division 2 Approval	5-9
Agency Approvals	5-9
Using Mounting Rails.....	5-10
Installing the Power Supply	5-11
Installing the CPU.....	5-12
Installing the I/O Modules.....	5-13
Wiring Guidelines	5-14
Wiring to the Power Supply.....	5-14
Grounding	5-14
Fuse Protection	5-15
I/O Module Wiring Options.....	5-16
ZIPLink Wiring System.....	5-16
Terminal Block With Pigtail Cable.....	5-16
Removable Terminal Blocks (Optional)	5-20
Terminal Block Removal	5-20
System Wiring Strategies.....	5-22
CPU Isolation Boundaries.....	5-22
Sinking/Sourcing Concepts.....	5-23
I/O "Common Terminal" Concepts	5-24
DC Input Wiring Methods.....	5-25
DC Output Wiring Methods.....	5-25
Relay Outputs - Wiring Methods	5-27
Relay Outputs – Transient Suppression for Inductive Loads in a Control System.....	5-28
Types of Additional Transient Protection.....	5-30
Chapter 6 - Communications	i
Communications: Capabilities	6-3
Communication Ports.....	6-3
Communications: Ethernet.....	6-4
Communications: Remote I/O	6-5
Communications: GS Drive Devices	6-6

Communications: Modbus RTU	6-8
Communications: Custom Protocol In and Out	6-11
Communications: Connectivity	6-12
Communication Ports.....	6-12
Communications: Ethernet Port.....	6-13
Communications: Remote I/O Ethernet Port.....	6-14
Communications: USB OUT Port	6-15
Communications: RS-232 Port	6-17
Communications: RS-485 Port	6-18
Communications ASCII and Custom Protocol Functionality	6-19
ASCII Instructions.....	6-19
Custom Protocol Instructions.....	6-20
Communications: Ethernet.....	6-22
TCP and UDP Port Numbers	6-22
IP Addressing and Subnetting	6-22
PC Setup	6-23
CPU Setup	6-24
TCP Connection Behavior with Modbus TCP and Network Instructions.....	6-25
Communications Modbus Functionality.....	6-26
Master/Client Function Code and Data Type Support.....	6-26
Slave/Server Function Code and Data Type Support.....	6-28
Assigning Modbus Addresses to Tags.....	6-29
Modbus Options.....	6-32
Modbus Instructions	6-35
Network Instructions.....	6-37
Automatic Poll versus Manual Polling and Interlocking	6-38
Message Queue.....	6-40
EtherNet/IP for the Productivity Series	6-41
Terminology Definitions.....	6-41
Network Layer Chart	6-42
EtherNet/IP Data.....	6-42
Class 1 and Class 3 Connections	6-43
Troubleshooting Tips:	6-49

Table of Contents

Ethernet IP I/O Message Troubleshooting:.....	6-51
Ethernet IP Explicit Message Troubleshooting:	6-51
ProNET	6-52
Custom Protocol over Ethernet Functionality	6-53
Hardware Configuration	6-54
Custom Protocol Ethernet Instruction.....	6-55
Communications: Remote I/O and GS-Drives.....	6-56
Things To Consider for the design of Remote I/O and GS-Drives.....	6-56
Configuration of Remote Slaves	6-57
Configuration of GS-Drive Connections	6-60
Communications: Port Configuration.....	6-64
Ethernet Configuration.....	6-65
External Ethernet Port Settings	6-65
Remote Access Configuration	6-67
Local Ethernet Port Settings	6-67
Remote Access Configuration.....	6-67
Serial Configuration.....	6-68
RS-232 and RS-485 Port Settings	6-68
Communications: Error Codes.....	6-72
P3000 EtherNet/IP Error Codes	6-73
 Chapter 7 - Maintenance and Troubleshooting	 7-1
Hardware Maintenance	7-2
Standard Maintenance	7-2
Air Quality Maintenance	7-2
CPU Battery Replacement.....	7-2
LCD Display Replacement	7-2
Diagnostics	7-3
Diagnostics	7-3
Critical Errors.....	7-3
Non-Critical Errors.....	7-3
Finding Diagnostic Information.....	7-3
Error Codes.....	7-3

CPU Indicators	7-4
PWR Indicator	7-5
Incorrect Base Power	7-5
Faulty CPU	7-5
Device or Module Causing the Power Supply to Shutdown.....	7-6
Run Indicator	7-7
CPU Indicator.....	7-7
Communications Problems	7-7
I/O Module Troubleshooting.....	7-8
Things to Check.....	7-8
Error Codes.....	7-8
Some Quick Steps	7-8
Testing Output Points	7-9
Noise Troubleshooting	7-10
Electrical Noise Problems	7-10
Reducing Electrical Noise	7-10
Run Time vs. Stop Mode Transfer Instruction.....	7-11
Run Time Transfers.....	7-12
Stop Mode Transfers.....	7-12
Forcing I/O Points.....	7-14
Advantages of Forces.....	7-14
Enabling Forces.....	7-14
Forcing Tags in Your System.....	7-15
Identifying Forced Values	7-17
Force Value Timing Chart.....	7-18
Appendix A - European Union Directives (CE).....	A-1
European Union (EU) Directives.....	A-2
Member Countries	A-2
Applicable Directives	A-2
Compliance	A-2
General Safety	A-3
Special Installation Manual.....	A-4

Table of Contents

Basic EMC Installation Guidelines	A-4
Enclosures.....	A-4
Mains Filters	A-5
Suppression and Fusing.....	A-5
Internal Enclosure Grounding.....	A-5
Equipotential Grounding	A-5
Communications and Shielded Cables.....	A-6
Analog and RS232 Cables.....	A-7
Multidrop Cables	A-7
Shielded Cables Within Enclosures	A-7
Analog Modules and RF Interference.....	A-7
Network Isolation.....	A-8
Items Specific to the Productivity3000®	A-9
 Appendix B - Productivity3000® Error Codes.....	B-1
Communications Error Codes.....	B-2
Module Error Codes	B-3
CPU Error Codes.....	B-5
Project Error Codes.....	B-6
Project Error Messages	B-8
 Appendix C - Security Considerations for Control Systems Networks.....	C-1
Security Considerations for Control Systems Networks.....	C-2