
	CPU Specificat	ions		
User Memory	50MB (Includes program, data and documentation)			
Memory Type	Flash and Battery Backed RA	Flash and Battery Backed RAM		
Retentive Memory	500kB			
Scan Time	1.3 ms (1K Boolean, 128 I/O)			
External Power Required	24VDC ±2% @ 5W plus 1.25 W per additional I/O module In-Rush 35A* See page 6 for Power Supply options			
Protection Circuit	Edison S5062-R, Time Delay, 2A Fuse (15 I/O Modules)			
Communications; 4 Integrated Ports	USB: Programming, Monitoring, Debug, Firmware ETHERNET: (10/100Mbps Ethernet) Programming, Monitoring, Debug, Firmware, Email SMTP Client, Modbus TCP Client (16 Servers) and Server (16 Clients), EtherNet/IP Scanner (32) and Adapter (4), Custom Protocol over Ethernet, ProNet, MQTT. RS-232: (RJ12, 1200-115.2k Baud) ASCII, Modbus RS-485: Removable Terminal Included, (1200-115.2k Baud) ASCII, Modbus RTU			
Data Logging	MicroSD card slot			
Hardware Limits of System	240 Hardware I/O Points: All 15 (16-point I/O Modules)			
Instruction Types	Application Functions Array Functions Counters/Timers Communications Data Handling Drum Sequencers Math Functions	PID Program Control String Functions System Functions Contacts Coils		
Real Time Clock Accuracy	±2s per day typical at 25°C ±10s per day maximum at 60°C			

^{*}Rev E and Higher


Productivity 1000

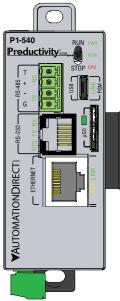


P1-540 CPU

CPU Specifications CPU Front Panel Module Installation Procedure Battery Installation Procedure
Micro SD Specifications
Port Specifications
Micro USB Specifications
CPU Status Indicators
CPU Stop/Run Switch Specifications
Removable Terminal Block Specifications 6
General Specifications
Warning

CPU Front Panel

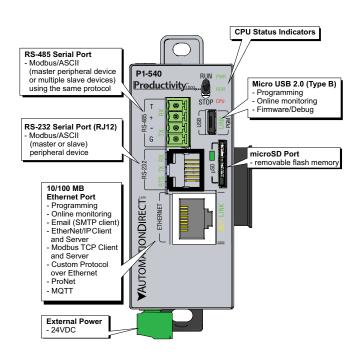


Module Installation

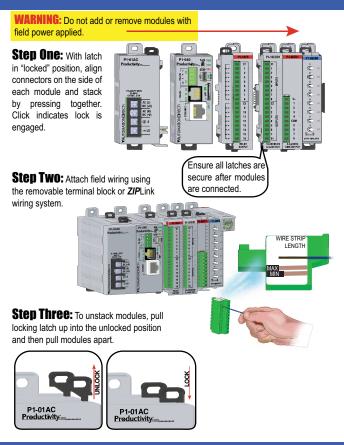


Battery Installation Procedure

Step One:


Open battery compartment located on the top of the CPU and pull up to locked position.

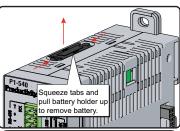

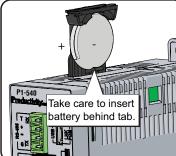

Step Two:

Insert battery under top two tabs in battery compartment. Press and snap battery behind bottom tab then close the battery compartment.

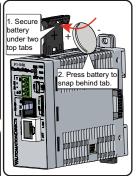

	1)-		-1
		=	
	-8-		
			20
L.			J —8

Port Name

Description

Transfer Rate

Port Status LED

Maximum Card Capacity

(ADATA microSDHC Class 4 memory card)

NOTE: Card not included with unit.

Pin	SD
1	DAT2
2	CD/DAT3
3	CMD
4	VDD
5	CLK
6	VSS
7	DAT0
8	DAT1

Typical

14.4

4.9

Green LED is illuminated when card is inserted/detected

Maximum


14.6

5.1

Battery (Optional)

D2-BAT-1 Coin type, 3.0V Lithium battery, 560mA, battery number CR2354

Note: Although not needed for program backup, an uninstalled battery is included with the P1-540. Install this battery if you want the CPU to retain the Time and Date along with any Tagname values that you have set up as retentive.

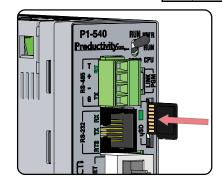

microSD Specifications

Standard microSD socket for data logging

Minimum

14.3

4.8

microSD

32GB

Mbps

Read

Write

Port Specifications

RS-232 Specifications			
Port Name	RS-232		
Description	Non-isolated RS-232 DTE port connects the CPU as a Modbus/ASCII master or slave to a peripheral device. Includes ESD and built-in surge protection		
Data Rates	Selectable, 1200, 2400, 4800, 9600, 19200, 33600, 38400, 57600, and 115200		
+5V Cable Power Source	210mA maximum at 5V, ±5%. Reverse polarity and overload protected		
TXD	RS-232 Transmit output		
RXD	RS-232 Receive input		
RTS	Handshaking output for modem control		
GND	Logic ground		
Maximum Output Load (TXD/RTS)	3kΩ, 1000 pf		
Minimum Output Voltage Swing	±5 V		
Output Short Circuit Protection	±15 mA		
Port Status LED	Green LED is illuminated when active for TXD, RXD and RTS		
Cable Options	EA-MG-PGM-CBL D2-DSCBL USB-RS232-1 with D2-DSCBL FA-CABKIT FA-ISOCON for converting RS-232 to isolated RS-485		



6-pin RJ12 Female Modular Connector

Pin #	Signal		
1	GND	Logic Ground	
2	+5V	210mA Maximum	
3	RXD	RS-232 Input	
4	TXD	RS-232 Output	
5	RTS	RS-232 Output	
6	GND	Logic Ground	

RS-485 Port Specifications		
Port Name	RS-485	
Description	Non-isolated RS-485 port connects the CPU as a Modbus/ASCII master or slave to a peripheral device. Includes ESD/EFT protection and automatic echo cancellation when transmitter is active	
Data Rates	Selectable, 1200, 2400, 4800, 9600, 19200, 33600, 38400, 57600, and 115200	
TXD+/RXD+	RS-485 transceiver high	
TXD-/RXD-	RS-485 transceiver low	
GND	Logic ground	
Input Impedance	19kΩ	
Termination Resistance (TB Jumper wire "T" to "+")	120 Ω . To use, add jumper between "T" and "+". Resistor is internally connected between "T" and "-".	
Maximum Load	50 transceivers, 19k Ω each, 60 Ω termination	
Output Short Circuit Protection	± 250mA, thermal shut-down protection	
Electrostatic Discharge Protection	± 8KV per IEC1000-4-2	
Electrical Fast Transient Protection	± 2KV per IEC1000-4-4	
Minimum Differential Output Voltage	1.5 V with 60Ω load	
Fail Safe Inputs	Logic high input state if inputs are unconnected	
Maximum Common Mode Voltage	-7.5 V to 12.5 V	
Port Status LED	Green LED illuminated when active for TXD and RXD	
Cable Options	Go to AutomationDirect.com for RS-232 and RS-485 cables	







Pin #	Signal
Ţ	TERMINATION
+	TXD+/RXD+
-	TXD-/RXD-
G	GND

Port Specifications

	Ethernet Specifications		
Port Name	ETHERNET		
Description	Standard transformer isolated Ethernet port with built-in surge protection for programming and online monitoring. See table on page 1 for supported devices and protocols.		
Transfer Rate	10 Mbps and 100 Mbps (auto-crossover)		
Port Status LED	LINK (Amber LED) is solid when network LINK is established. ACT (Green LED) flashes when port is active.		

Micro USB Type B Slave Input Specifications		
Port Name	MICRO USB	
Description	Standard Micro USB Slave input for programming and online monitoring, with built-in surge protection. Not compatible with older full speed USB devices.	
Transfer Rate	480 Mbps	
Port Status LED	Green LED is illuminated when LINK is established to programming software.	
Cables	USB Type A to Micro USB Type B: 6ft cable part # USB-CBL-AMICB6 15ft cable part # USB-CBL-AMICB15	

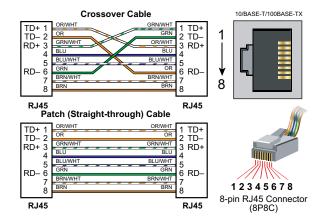

 


CPU Status Indicators		
PWR	Green LED is illuminated when power is ON	
RUN	Green LED is illuminated when CPU is in RUN mode	
CPU	Red LED is illuminated during power ON reset, power down, or watch-dog time-out	



CPU Run/Stop Switch Specifications		
RUN position	Executes user program, run-time edits possible	
STOP position	Does not execute user program, normal program load position	

Removable Terminal Block Specifications		
Part Number	PCON-KIT	
Number of Positions	3 Screw Terminals	
Pitch	3.5 mm	
Wire Range	28–16 AWG Solid Conductor 28–16 AWG Stranded Conductor	
Screw Driver Width	1/8 in (3.175 mm) Maximum	
Screw Size	M2	
Screw Torque	1.7 lb·in (0.4 N·m)	

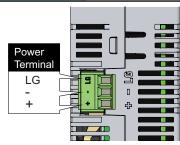

Productivity1000 Power Supplies

All Productivity1000 PLC CPUs require 24VDC input power from either a P1000 power supply or other 24VDC $\pm 2\%$ external power supply.

- P1-01AC: AC Input 85–132 / 170–264 VAC, 16W (power for CPU and up to 8 modules)
- P1-02AC: AC Input 85–132 / 170–264 VAC, 26W (power for CPU and up to 15 modules)
- P1-01DC: DC Input 12-24 VDC, 16W (power for CPU and up to 8 modules)
- The LG and minus terminals on the external power supply connection are internally shorted.
- Use different 24VDC supplies for the CPU and inductive loads to keep the CPU power clean and free of voltage spikes caused by switching inductive loads

General Specifications		
Operating Temperature	0° to 60°C (32° to 140°F)	
Storage Temperature	-20° to 70°C (-4° to 158°F)	
Humidity	5 to 95% (non-condensing)	
Altitude	2,000 meters max	
Pollution Degree	2	
Environmental Air	No corrosive gases permitted	
Vibration	IEC60068-2-6 (Test Fc)	
Shock	IEC60068-2-27 (Test Ea)	
Overvoltage Category	II	
Heat Dissipation	4022mW	
Enclosure Type	Open Equipment	
Module Location	Controller connector on the side of the power supply in a Productivity1000 System.	
Weight	136g (4.8 oz)	
Agency Approvals	UL 61010-1 and UL 61010-2-201 File E139594, Canada & USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)*	

^{*}See CE Declaration of Conformance for details

WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

CAUTION Battery May Explode If Mistreated.

Do Not Recharge, Disassemble or Dispose Of In Fire

Document Name	Edition/Revision	Date
P1-540-DS	2nd Edition, Rev D3	1/24/2025

Copyright 2017, AutomationDirect.com Incorporated/All Rights Reserved Worldwide