



 
Defeatable Rotary Handle Operating Mechanisms

BW9V0CA shown

	Rotary Operating Handles for Fuji MCCBs – Selection Guide										
			V-type Handle	With the optional shaft (x= 6.102 (155))		With the optional shaft (x= 24.567 (624))			V-type		
Breaker Type	Breaker V-type Type Handle	Price H: inch(mm)	H: inch(mm)	Max. Mounting Depth H: inch(mm)	Range in which the hinge with H can be installed	Max. Mounting Depth H: inch(mm)	Range in which the hinge with H can be installed	Mounting Screw	Handle Mass Ib. (kg)		
BW125	BW9V0CA	\$67.00	4.134±0.078	9.843±0.078	5.512 to 9.843	28.307±0.078	28.307 - 5.591	M4 2 25 (05)	4.40 (0.07)		
BW250	BW9V0GA	\$67.00	(105±2)	(105±2)	(250±2)	(140 to 250)	(719±2)	(124 - 719)	M4 x 3.35 (85)	1.48 (0.67)	

Notes: • Handle is an operating mechanism only; not for sealing enclosure door.

- · Not available for side mounting
- For BW250 Series only: When mounting a terminal cover, cut away part of it because it hides the mounting screws for the breaker.




125A, 250A Frame V type handle

• BW9V0CA, BW9V0GA (BW9VSG0, BW9VSG0-24: optional shafts)



mm [inches]

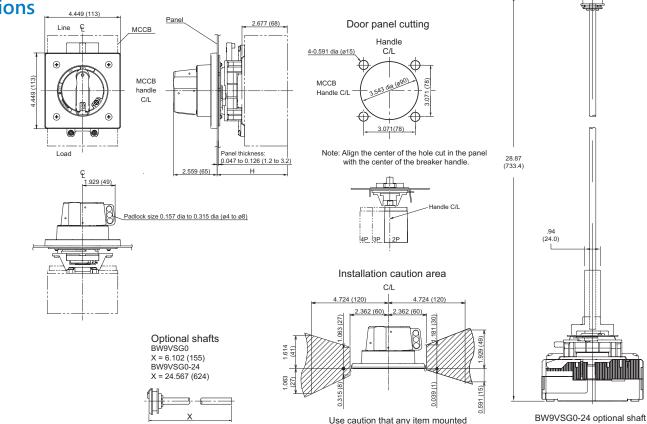

in shaded area can move freely

Breaker and Shaft Assembly



	Rotary Operating Handles for Fuji MCCBs – Selection Guide										
Procker	Preaker V-type Price Type Handle	type Price	V-type Handle	With the optional shaft (x= 3.504 (89))		With the o (x= 24	Mounting	V-type Handle			
Туре			H: inch(mm)	Max. Mounting Depth H: inch(mm)	Range in which the hinge with H can be installed	Max. Mounting Depth H: inch(mm)	Range in which the hinge with H can be installed	Mounting Screw	Mass Ib. (kg)		
BW400	BW9V0HA	\$102.00									
BW630 BW800	BW9V0JA	\$120.00	7.48±0.078 (190±2)	9.843±0.078 (250±2)	7.95 to 9.843 (202to 250)	30.35±0.078 (771±2)	7.95 - 30.35 (202 - 771)	M4 x 3.35 (85)	1.48 (0.67)		

Notes:


- · Handle is an operating mechanism only; not for sealing enclosure door.
- · Not available for side mounting

Dimensions

mm [inches]


400A, 630A, 800A Frame V type handle

· BW9V0HA, BW9V0JA (BZ-VS2, BZ-VS2-24: optional shafts)

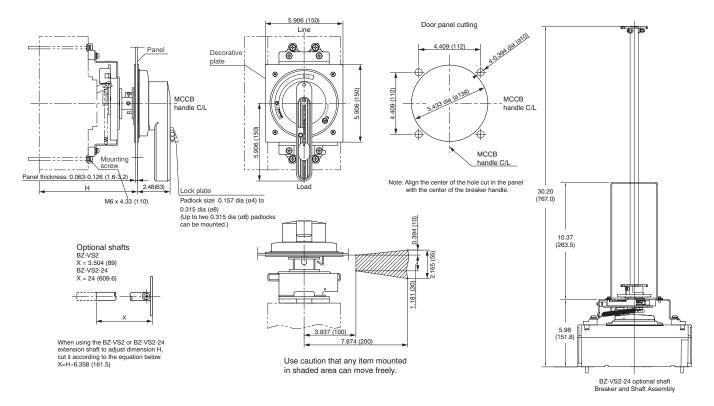

www.automationdirect.com Circuit Protection tCPR-22

Defeatable Flexible Handle Operating Mechanisms

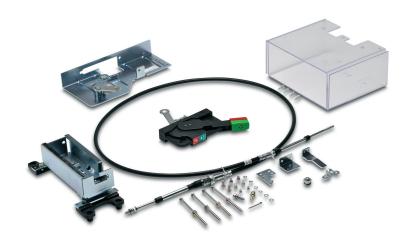




BW9F0JA-20A shown


	Flex Shaft Handles for Fuji MCCBs – Selection Guide							
Breaker Type	Handle Type	Price	Description					
BW125	BW9F0CA-15A	\$357.00	Nema 12 flexible shaft handle for 125A frame. 59.06" (1.5m)cable					
BWIZS	BW9F0CA-20A	\$371.00	Nema 12 flexible shaft handle for 125A frame. 78.74" (2m) cable					
BW250	BW9F0GA-15A	\$371.00	Nema 12 flexible shaft handle for 250A frame. 59.06" (1.5m)cable					
BVV230	BW9F0GA-20A	\$389.00	Nema 12 flexible shaft handle for 250A frame. 78.74" (2m) cable					
BW400*	BW9F0HA-15A	\$540.00	Nema 12 flexible shaft handle for 400A frame. 59.06" (1.5m)cable					
BVV400	BW9F0HA-20A	\$556.00	Nema 12 flexible shaft handle for 400A frame. 78.74" (2m) cable					
BW630*&	BW9F0JA-15A	\$584.00	Nema 12 flexible shaft handle for 630A or 800A frame. 59.06" (1.5m)cable					
BW800*	BW9F0JA-20A	\$599.00	Nema 12 flexible shaft handle for 630A or 800A frame. 78.74" (2m) cable					

^{*}Terminal covers for line side and load side included with Flange Disconnects. 2/pk

Flex Handle Specifications								
Operating instructions	 Operating handle facing up, Breaker is in ON position. Operating handle facing down, Breaker is in OFF position or is reset. Panel door cannot be opened when in ON, OFF or Trip position. In order to open the door, the handle must be turned toward reset position. Release screw is standard. If you want to open a panel door in ON position, please turn the release screw using flat head screwdriver. 							
Frame Size	125A frame	250A frame	400A frame	630A/800 frame				
Mechanical Endurance (cycles)	10,000	8,000	6,000	6,000				
Ambient Temperature	14 to 140F (- 10 to 40°C)							
Relative Humidity	less than 95% RH							
Protection	NEMA Type12 IP54 (IEC60529)							
Conforming Standards	NFPA 79(2007), ANSI(Lockout), OSHA(1910.147, Lockout/tagout), UL489(cUL)							
Environment	No excess	sive dust, smoke, corrosive g	ases, flammable gases, ste	am or salt.				

www.automationdirect.com Circuit Protection tCPR-23

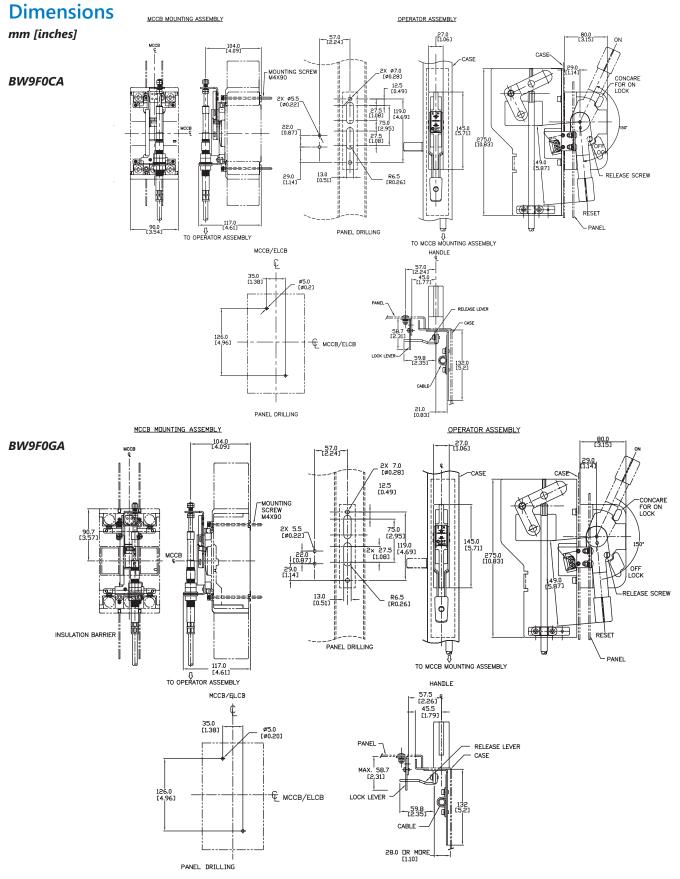

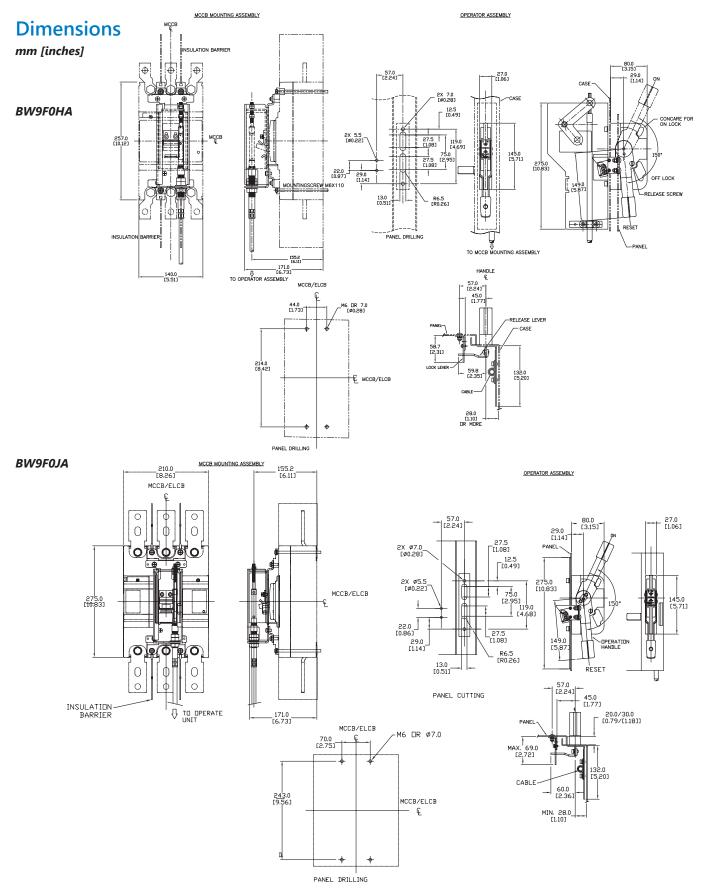

Fuji Molded Case Circuit Breakers Accessories Fuji Electric



BW9W1SHA shown

Auxiliary Contacts

The auxiliary contacts are accessory contacts for the indication of circuit breaker open-closed or tripped.

Auxiliary Contacts for Fuji MCCBs – Selection Guide							
Breaker Type	Part Number	Price	Description				
BW125 BW250	BW9W1SG0	\$37.00	Auxiliary switch for for 125A and 250A frame. Mounting left and right side				
BW400 BW630 BW800	BW9W1SHA	\$33.50	Auxiliary switch for for 400A , 630A and 800A frame. Mounting left side ONLY				

	Ratings of Auxiliary Switches									
	Standard Type									
	Rated			Make/Break	Current (A)					
Breaker Type	Thermal Current (A)	AC			DC			Minimum Load Current		
		Voltage (V)	Res. Load	Ind. Load	Voltage (V)	Res. Load	Ind. Load	ou.rom		
		24	5	5	24	4	3			
BW125, BW250,	5	48	5	5	48	2.5	1	5V DC 160 mA		
BW400 BW630, BW800	5	125	5	3	125	0.4	0.4	30V DC 30 mA		
		250	3	2	250	0.2	0.2			

Operation of auxiliary switches

Accessory	Handle position						
	ON	OFF	Trip				
Auxiiary switch	11/AXcL 14/AXaL	11/AXcL	14/AXaL				
SPDT							
(1)	12/AXbL		12/AXbL				



BW9FRG0 shown

Shunt Trips

Shunt Trip is for remote tripping (opening) of crircuit breaker.

	Shunt Trips for Fuji MCCBs – Selection Guide							
Part Number								
BW9FRG0	\$75.00	Field installable 24 VAC/VDC shunt trip for BW125 and BW250 series MCCB. Left and right side mounting. Lead wires 20AWG, 19.69" long.						
BW9FHA-R	\$75.00	Field installable 24/48 VAC/VDC shunt trip for BW400, BW630 and BW800 series MCCB. Left side mounting only. Lead wires 20AWG, 19.69" long.						
BW9FAG0	\$75.00	Field installable 100/120 VAC, 100-110 VDC shunt trip for BW125 and BW250 series MCCB. Left and right side mounting. Lead wires 20AWG, 19.69" long.						
BW9FHA-A	\$75.00	Field installable 100/240 VAC, 100-220 VDC shunt trip for BW400, BW630 and BW800 series MCCB.Left side mounting only. Lead wires 20AWG, 19.69" long.						

	Ratings of Shunt Trips								
Brooker Tree	A	С	DC		Time Detine of Cail	One and the Time (me)			
Breaker Type	Voltage (V)	VA	Voltage (V)	W	Time Rating of Coil	Operating Time (ms)			
BW425 BW250	24	50	24	50	Continuous	12.01			
BW125, BW250	100-120	50	100-110	50	(with 1 N.O. contact to prevent coil burnout)	13-21			
BW400, BW630,	24-48	2	24-48	2	Continuous	0.20			
BW800	100-240	3	100-220	3	Continuous	8-20			

Note: Allowable operating voltage AC voltage: 85% to 110% of coil rated voltage DC voltage: 75% to 125% of coil rated voltage

Fuji Molded Case Circuit Breakers Accessories



Undervoltage Releases

Undervoltage Release will trip the circuit breaker when the connected voltage drops to less than 70% of undervoltage release voltage rating. It will allow the circuit breaker to close (ON) when voltage is approximately 85% of rated voltage.

Undervoltage Releases for Fuji MCCBs – Selection Guide							
Breaker Type Part Number Price Description							
BW125, BW250	BW9RGAR	\$75.00	Undervoltage Release 24V DC (Left side ONLY)				
BW125, BW250	BW9RGAT	\$75.00	Undervoltage Release 110 to 130 VAC VAC/VDC (Left side ONLY)				
BW400, BW630, BW800	BW9RHA-R	\$72.00	Undervoltage Release 24 VAC/VDC (Left side ONLY)				
BW400, BW630, BW800	BW9RHA-1	\$75.00	Undervoltage Release 120 to 130 VAC 125 VDC (Left side ONLY)				



BW9RGAR shown

Ratings of Undervoltage Trip							
Dunalisa Tuna	A	С	DC				
Breaker Type	Voltage (V)	VA	Voltage (V)	W			
BW125*1 BW250*1	_	-	24	5			
BW250 **	110 - 130	5	_	-			
BW400*2	24	2	24	2			
BW630*2 BW800*2	120 - 130	3	125	3			

Note: Allowable operating voltage: AC voltage: 85% to 110% of coil rated voltage DC voltage: 75% to 125% of coil rated voltage.

Turning ON with the undervoltage trip coil not energized causes normal tripping.



BW9SL0GA-3 shown

Replacement Lugs

Replacement Lug Kits for Fuji MCCBs – Selection Guide							
Part Number	Price	Description					
BW9SL0CA-3	\$76.00	Replacement lug kit for BW125 series MCCB. 75°C. Cu only Package of 3					
BW9SL0GA-3	\$85.00	Replacement lug kit for BW250 series up to 175A MCCB. 75°C. Cu only Package of 3					
BW9SL1GA-3	\$94.00	Replacement lug kit for BW250 MCCB series 200A to 250A. 75°C. Cu only Package of 3					

Note: Terminals are factory-installed only for BW400, BW630 and BW800 series. No replacement terminals available.

^{*1} Reset-allowed type: When the breaker handle is in the OFF or RESET state, tripping does not occur, even if the undervoltage trip coil is not energized.

^{*2} Reset-prohibited type: When the undervoltage trip coil is not energized, reset operation cannot reset the tripped breaker to the OFF state.

Fuji Molded Case Circuit Breakers Accessories



Terminal Covers

Terminal covers act as guards to shield the operator from touching live terminations. They fit either the line or load side.




BW9BTHA-L3W shown

Terminal Covers for Fuji MCCBs – Selection Guide									
Breaker Type	Part Number	Price	Description	Dimensions inch (mm)					
				Α	В	С			
BW400	BW9BTHA-L3W	\$75.00	Gray-white Long type terminal cover for Fuji MCCBs. For line side and load side. 2/pk	6.772 (172)	4.331 (110)	3.858 (98)			
BW630, BW800	BW9BTJA-L3W	\$78.00	Gray-white Long type terminal cover for Fuji MCCBs. For line side and load side. 2/pk	8.268 (210)	6.102 (155)	3.858 (98)			

Note: Gray-white short type terminal covers are provided with breakers as standard for 125 and 250 Amp frames.

 Dimensions of Terminal Covers: inch (mm)



Lockout Attachment

Lockout Attachments for Fuji MCCBs – Selection Guide						
Breaker Type	Part Number	Price	Description			
BW125 BW250	BW9Q1CA	\$18.00	Use to lock out BW125 and BW 250 series MCCBs. Lock not included			
BW400, BW630, BW800	BW9QNHA	\$44.00	Use to lock out BW400, BW600 and BW800 MCCBs. Lock not included.			



BW9Q1CA shown