


Fuji Duo Series Manual Motor Starters

Accessories

Busbar system

Features

- The busbar system reduces wiring time and saves floor space.
- The busbar makes it easy to power from 2 to 5 manual motor starters, with no wiring needed.
- The 3-phase feed-in terminals are used to connect the wire for the power supply circuit.
- The busbar cover guards against accidental touching of nonconnected busbar terminals (charged parts).
- If using BZ0TCRE terminal cover with BM3R series MMS, the busbar system can not be used.

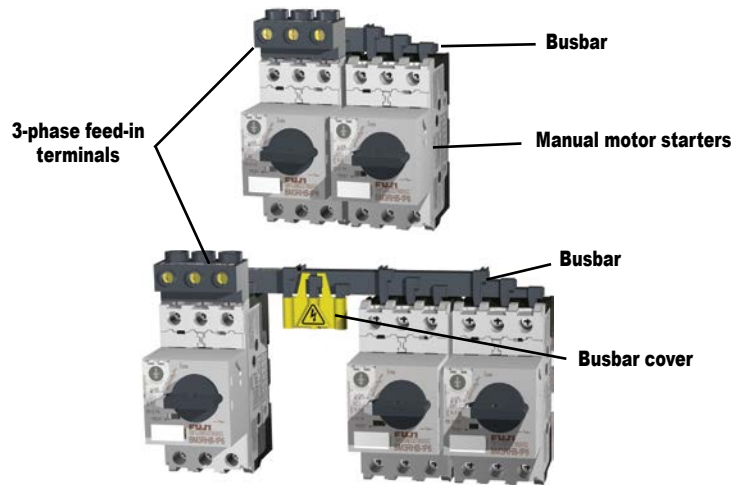**BZ0BR02A****BZ0BR03A****BZ0BR04A****BZ0BR05A****BZ0BR12A****BZ0BR13A****BZ0BR14A****BZ0BR15A****BZ0BV02A****BZ0BV03A**

Note: Busbar photos continued on next page.

**BZ0BFRA****BZ0BFVA****BZ0BCRA****BZ0BCVA**

Busbar System Components and Ratings

Part Number	Price	Description	Used with	Specifications	Weight (g)	
BZ0BR02A	\$23.00	Busbar	BM3R	Continuous current: 64A max. pin connection	2-BM3R, modular space: 45mm	30
BZ0BR03A	\$20.50				3-BM3R, modular space: 45mm	50
BZ0BR04A	\$24.50				4-BM3R, modular space: 45mm	70
BZ0BR05A	\$26.00				5-BM3R, modular space: 45mm	90
BZ0BR12A	\$19.50				2-BM3R, modular space: 54mm	30
BZ0BR13A	\$23.50		BM3R+ 1 external accessory, 9mm wide		3-BM3R, modular space: 54mm	55
BZ0BR14A	\$26.00				4-BM3R, modular space: 54mm	80
BZ0BR15A	\$27.50				5-BM3R, modular space: 54mm	105
BZ0BV02A	\$37.00		BM3V	Continuous current: 126A max. pin connection	2-BM3V, modular space: 55mm	140
BZ0BV03A	Retired				3-BM3V, modular space: 55mm	240
BZ0BV04A	\$55.00				4-BM3V, modular space: 55mm	340
BZ0BV12A	\$39.50				2-BM3V, modular space: 64mm	150
BZ0BV13A	Retired		3-BM3V, modular space: 64mm		270	
BZ0BV14A	Retired		BM3V + 1 external accessory, 9mm wide		4-BM3V, modular space: 64mm	380
BZ0BFRA	\$20.50	3-phase feed-in terminal		BM3R	Continuous current: 64A max. Applicable cable size: 25mm ² max.	40
BZ0BFVA	\$41.50		BM3V	Continuous current: 126A max. Applicable cable size: 50mm ² max.	170	
BZ0BCRA	\$5.50	Busbar cover	BZ0BR	For pin connection	10	
BZ0BCVA	Retired		BZ0BV	NOTE: Some fine tuning and fitting adjustments may be needed.	5	

Fuji Duo Series Manual Motor Starters

Accessories

Busbar system (continued)

Dimensions

(mm)



BZ0BV04A



BZ0BV12A




BZ0BV13A



BZ0BV14A


For BM3RHB-xxx

BZ0BR0xx Without external accessory

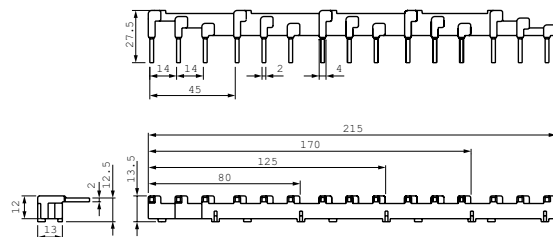


BZ0BR02A: 80 mm
BZ0BR03A: 125 mm
BZ0BR04A: 170 mm
BZ0BR05A: 215 mm

BZ0BR1xx With 1 external accessory

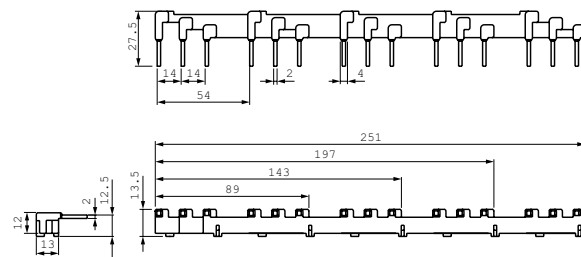


BZ0BR12A: 89 mm
BZ0BR13A: 143mm
BZ0BR14A: 197 mm
BZ0BR15A: 251 mm

BZ0BFRA 3-phase feed-in terminals

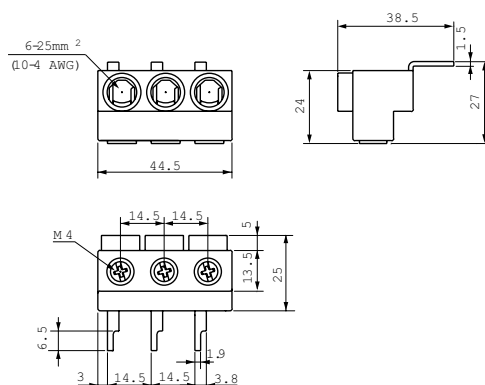


For BM3VHB-xxx

BZ0BV0xx Without external accessory

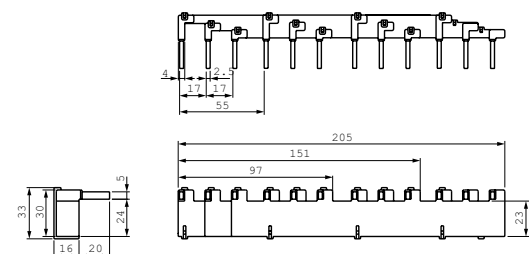

BZ0BV02A: 97 mm
BZ0BV03A: 151 mm
BZ0BV04A: 205 mm

BZ0BV1xx With 1 external accessory, 9mm wide

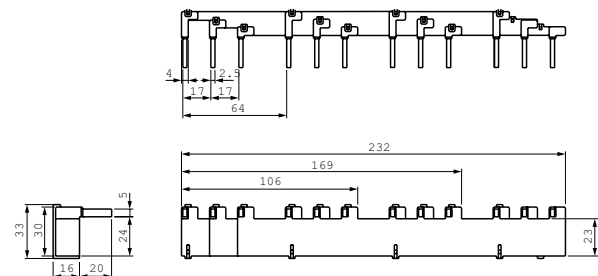

BZ0BV12A: 106 mm
BZ0BV13A: 169 mm
BZ0BV14A: 232 mm

BZ0BFVA

