


IRONHORSE ACG SERIES AC DRIVE USER MANUAL TABLE OF CONTENTS

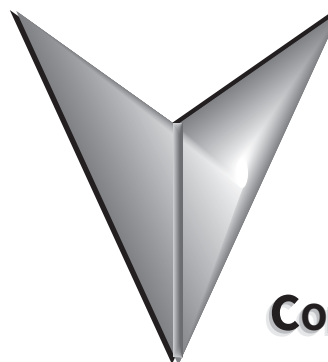

CONTENTS

ACG USER MANUAL TOC

WARNINGS AND TRADEMARKS	W-1
~ WARNING ~	W-1
Trademarks.	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
Warnings.	W-3
ACG SERIES DRIVES MANUAL REVISION HISTORY	H-1
ACG AC DRIVE USER MANUAL TABLE OF CONTENTS	TOC-1
CHAPTER 1: GETTING STARTED	1-1
User Manual Overview	1-2
Overview of this Publication	1-2
Who Should Read This Manual.	1-2
Supplemental Publications	1-2
Technical Support	1-2
Special Symbols	1-2
Purpose of AC Drives	1-3
Selecting the Proper Drive Rating	1-3
Determine Motor Full-Load Amperage (FLA)	1-3
Determine Motor Overload Requirements	1-3
Determine Application Type; Heavy load (HD) or Normal load (ND)	1-3
Parts Locator.	1-4
Continuous Rated Current Derating	1-6
Derating by Carrier Frequency	1-6
Derating by Input Voltage	1-8
Heat Emission	1-9
IRONHORSE ACG Series AC Drive Environmental Information	1-10
Storage and Transportation.	1-10
Environmental Conditions	1-10
IRONHORSE ACG SERIES AC Drive Specifications	1-11
230V Class – (Model Specifications)	1-11
230V Class – (Model Specifications)	1-12
460V Class – (Model Specifications)	1-13
460V Class – (Model Specifications)	1-14
Specifications Applicable to All ACG Series Models	1-15
Receiving and Inspection	1-17
Drive Package Contents.	1-17
Model Number Explanation	1-18
Nameplate Information.	1-18

CHAPTER 2: INSTALLATION AND WIRING. 2-1

- Drive Models by Frame Size 2-3
- Installation 2-3
- Basic Configuration Diagram. 2-3
- Installation Considerations 2-4
- Minimum Clearances and Air Flow. 2-4
- Dimensions 2-6
- Mounting the Drive 2-7
- Removing Front Cover 2-9
- Cable Wiring 2-10
- Floating Ground System 2-11
- Cable Selection 2-12
 - Ground Cable and Power Cable Specifications 2-12
 - Control (signal) Cable Specifications. 2-13
- Ground Connection 2-13
- Power Terminal Wiring 2-14
 - 0.5 – 1 HP (3-phase). 2-14
 - 2.0 – 3.0 HP (3-phase). 2-14
 - 5 HP (3-phase). 2-15
 - 7.5 – 10 HP (3-phase) 2-15
 - 15 – 30 HP (3-phase) 2-16
- Main Circuit Wiring Diagram (all frames) 2-17
 - Power Terminal Labels and Descriptions. 2-17
 - Terminals for Connecting DC Reactor, External Brake Resistor, and DC Circuit 2-18
 - Wiring Guidelines 2-19
 - Motor Operation Precautions. 2-19
- Single Phase Input Utility Wiring and Operation 2-20
 - Power (HP), Input Current and Output Current 2-21
 - Input Frequency and Voltage Tolerance 2-21
 - Protection 2-21
- Control Terminal Wiring. 2-22
 - Control Board Switches 2-22
 - Connector 2-22
 - Full I/O Wiring Diagram. 2-23
 - Input Terminal Labels and Descriptions 2-24
 - Output/Communication Terminal Labels and Descriptions 2-24
 - Pre-insulated Crimp Terminal Connectors (Bootlace Ferrule) 2-25
 - Terminal Screw Specification 2-26
 - PNP/NPN Mode Wiring and Selection. 2-27
 - PNP Mode (Source) 2-27
 - NPN Mode (Sink) 2-27
 - Run Command Wiring. 2-28
 - Relay Output Wiring. 2-28
 - Analog Wiring 2-29
 - AO Wiring 2-30
 - System Wiring Diagram. 2-30
- Re-assembling the Cover 2-30
- Post-Installation Checklist 2-31
- Test Run 2-32
- Verifying the Motor Rotation. 2-33

CHAPTER 3: KEYPAD OPERATION AND QUICK START	3-1
Learning to Perform Basic Operations.	3-2
About the Keypad	3-2
Learning to Use the Keypad	3-5
Actual Application Examples	3-8
Monitoring the Operation	3-15
CHAPTER 4: AC DRIVE PARAMETERS.	4-1
AC Drive Parameters	4-3
Bit Selection	4-3
Parameter Table Format Explanation.	4-3
Operation Parameter Group	4-5
DRIVE Parameter Group (dr)	4-7
BASIC Parameter group (bA)	4-10
ADVANCED Parameter group (Ad)	4-14
CONTROL Parameter Group (Cn)	4-18
INPUT Parameter Group (In)	4-21
OUTPUT Parameter Group (OU)	4-25
COMMUNICATION Parameter Group (CM)	4-29
APPLICATION Parameter Group (AP)	4-35
PROTECTION Parameter Group (Pr)	4-37
2nd MOTOR Parameter Group (M2)	4-41
IronHorse® ACG Drive Operation and Parameter Details	4-44
Chart Key	4-44
Learning Basic Features	4-45
Setting Frequency Reference	4-46
Setting Multi-step Frequency.	4-55
Command Source Configuration	4-57
Forward or Reverse Run Prevention	4-61
Power-on Run	4-62
Reset and Restart	4-63
Setting Acceleration and Deceleration Times	4-64
Acc/Dec Pattern Configuration	4-68
Stopping the Acc/Dec Operation.	4-69
V/F (Voltage/Frequency) Control	4-70
Torque Boost	4-73
Output Voltage Setting	4-75
Start Mode Setting	4-75
Stop Mode Setting.	4-77
Frequency Limit	4-80
2nd Operation Mode Setting	4-82
Multi-function Input Terminal Control	4-83
Fire Mode Operation	4-84
Learning Advanced Features	4-85
Operating with Auxiliary References	4-86
Jog operation	4-90
Up-down Operation.	4-91
Safe Operation Mode	4-94
Dwell Operation	4-95
Slip Compensation Operation	4-97
PID Control.	4-98

Auto Tuning	4-104
Sensorless Vector Control for Induction Motors	4-106
Kinetic Energy Buffering Operation	4-111
Energy Saving Operation	4-114
Speed Search Operation	4-115
Auto Restart Settings	4-119
Operational Noise Settings (carrier frequency settings)	4-120
2nd Motor Operation	4-121
Supply Power Transition.	4-122
Cooling Fan Control	4-123
Input Power Frequency and Voltage Settings	4-124
Parameter Save	4-125
Parameter Initialization (Reset to Defaults)	4-125
Parameter Lock	4-126
Changed Parameter Display	4-126
Multi-function IO Timer Settings.	4-127
Brake Control.	4-128
Multi-Function Output Relay On/Off Control.	4-129
Press Regeneration Prevention.	4-129
Analog Output.	4-130
Digital Output	4-133
Base Block	4-139
Learning Protection Features.	4-140
Motor Protection	4-140
Drive and Sequence Protection.	4-146
Dynamic Braking.	4-149
Under load Fault Trip and Warning.	4-151
Torque Detection Protection Action	4-156
Fault/Warning List	4-158
CHAPTER 5: SERIAL COMMUNICATIONS	5-1
Serial RS-485 Communication Features	5-2
Communication Standards	5-2
Common Third-Party Modbus RTU Masters.	5-2
AutomationDirect PLCs as Modbus Master	5-3
RS-232C to RS-485 Conversion.	5-4
Modbus-RTU Protocol.	5-12
Compatible Common Area Parameter.	5-14
Drive Expansion Common Area Parameter	5-17
CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING.	6-1
Maintenance and Inspections	6-2
Monthly Inspection	6-2
Annual Inspection	6-2
Recharge Capacitors (for drives not in service)	6-2
Recommended Inspection Schedules	6-3
Storage and Disposal	6-6
Troubleshooting.	6-7
Trips and Warnings	6-7
Fault Trips.	6-7
APPENDIX A: ACCESSORIES	A-1
Fuses/Circuit Breakers.	A-2

High Performance EMI Input Filters	A-3
EMI Filter Installation	A-3
Recommended Motor Cable Length.	A-5
Line Reactors / Voltage Time Filters	A-6
Line Reactor	A-6
Load Reactor/Voltage Time Filter.	A-7
DC Reactor	A-8
Line/Load Reactors and Output Filters Selection Charts	A-9
Line Reactor Applications and Wiring Connections.	A-9
Recommended Cable Length.	A-12
Dynamic Braking	A-13
Braking Units.	A-13
Choosing and Installing a Braking Resistor	A-14
ACG-KPD.	A-15
About the Keypad	A-15
Parameter Lock	A-17
ACG Conduit Boxes	A-18
VFD Suite.	A-22
ACG Connection Option	A-23
VFD Suite Serial Connection Setup.	A-24
APPENDIX B: ETHERNET MODULE ACG-ET2.	B-1
Overview	B-2
ACG-ET2 Technical Specifications	B-2
ACG-ET2 Communication Board Layout and Installation	B-3
External Layout.	B-3
Installing the ACG-ET2 Communication Board	B-4
Network Connection	B-6
Network connection cable wiring	B-6
Communication Cable Connector	B-6
Network cable specifications.	B-7
Frequency band	B-7
Twisted pair cable types.	B-7
Network CM Parameter Setting Details	B-8
IP Address, Subnet Mask, Gateway (CM.10–CM.21) Setting	B-8
CIP Input Instance (CM.23)	B-8
CIP Output Instance (CM.24)	B-9
Comm Update (CM.94)	B-9
Keypad parameters for ACG-ET2 communication board.	B-10
Ethernet Parameter Details	B-12
Operation Group.	B-12
CM Group	B-12
Pr Group (Lost Command)	B-14
Services.	B-15
Introduction	B-15
EtherNet/IP.	B-15
Implicit message.	B-15
Explicit Messages	B-22
Modbus TCP Frame	B-28
Modbus TCP frame structure	B-28
MODBUS Application Protocol header (MBAP header)	B-28

<i>Protocol Data Unit (PDU)</i>	<i>B-28</i>
<i>Exception (Except) Frame</i>	<i>B-31</i>
<i>LED Indications and Troubleshooting</i>	<i>B-32</i>