

USER MANUAL TABLE OF CONTENTS



C-MORE CM5 USER MANUAL

C-more CM5 Hardware User Manual	CF-1
Warnings and Trademarks	W-1
~ WARNING ~	W-1
Trademarks	W-1
~ ADVERTENCIA ~	W-2
Marcas Registradas	W-2
~ AVERTISSEMENT ~	W-3
Marques de commerce	W-3
C-more CM5 User Manual Revision History	H-1
C-more CM5 User Manual Table of Contents	TOC-1
Chapter 1: Getting Started1-1
Manual Overview.	1-2
The Purpose of this Manual	1-2
Who Should Read This Manual	1-2
Supplemental Publications.	1-2
Technical Support.	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
Product Overview	1-4
Quick Start Steps	1-5
Step 1 - Unpack and Inspect.	1-5
Optional Accessories	1-5
Step 2 - Install Optional Hardware Accessories	1-6
Step 3 - Become Familiar with Available Communication Ports	1-7
Step 4 - Install the Programming Software and Develop a Project.	1-9
Step 5 - Connect Touch Panel to Computer	1-10
Step 6 - Provide Power to the Touch Panel.	1-11
Step 7 - Access the Touch Panel Setup Screens	1-13
Step 8 - Choose Touch Panel to Device Cables.	1-14
Step 9 - Connect Touch Panel to PLC	1-17
Chapter 2: Specifications2-1
Available Models.	2-2
Model Specifications.	2-3
Specifications common to all models.	2-4
CM5-T4W Specifications.	2-5
CM5-T7W Specifications.	2-6
CM5-T10W and CM5-T12W Specifications.	2-7
CM5-T15W and CM5-T22W Specifications.	2-8
Dimensions, Ports and Memory Expansion	2-9

CM5-T4W Dimensions	2-9
CM5-T4W Ports and Memory Expansion	2-10
CM5-T7W Dimensions	2-11
CM5-T7W Ports and Memory Expansion	2-12
CM5-T10W Dimensions	2-13
CM5-T12W Dimensions	2-14
CM5-T15W Dimensions	2-15
CM5-T22W Dimensions	2-16
CM5-T10W, CM5-T12W, CM5-T15W and CM5-T22W Ports and Memory Expansion	2-17
Mounting Clearances	2-18
Communication Ports	2-19
Ethernet Port	2-19
USB Type B Port.	2-19
USB Type A Port.	2-20
Serial Communication Ports	2-20
User Defined LED.	2-21
Handling External Memory Devices	2-22
Writing to External Memory devices	2-22
Memory Device Formatting	2-22
Minimizing Data Errors.	2-23
Monitoring Available Memory.	2-23
Power Loss Retention.	2-24
Chemical Compatibility	2-24
Chapter 3: Accessories	3-1
Accessories Overview	3-2
Non-glare Screen Covers	3-4
Clear Screen Overlay Installation	3-5
SD Cards	3-6
USB Flash Drive.	3-6
D-SUB 15-pin to Terminal Block Adapters	3-7
Chapter 4: Installation and Wiring.	4-1
Safety Guidelines.	4-2
Introduction	4-3
UL Requirements.	4-4
Cutout Dimensions	4-5
CM5-T4W	4-5
CM5-T7W	4-6
CM5-T10W	4-7
CM5-T12W	4-8
CM5-T15W	4-9
CM5-T22W	4-10
Mounting Clearances	4-11
Wiring Guidelines	4-12
Agency Approvals	4-12
Providing Power to the Touch Panel	4-13
C-more LED Status Indicators	4-14
Chapter 5: System Setup Screens	5-1
Introduction	5-2

Accessing the System Setup Screens (no project loaded)	5-3
Accessing the System Setup Screens (with project loaded)	5-4
System Setup Screens	5-5
Password Protecting System Screen Access	5-5
System Setup Screens - Enable Password in Software	5-6
System Setup Screens Flowchart	5-12
Main Menu	5-13
Touch Screen Calibration.	5-13
Information Screen.	5-14
Information - General Tab	5-14
Information - Memory Tab.	5-15
Information - Ethernet Tab.	5-16
Information - Error Tab.	5-17
Information - License Tab	5-18
Settings Screen.	5-19
Settings - Adjust Clock.	5-20
Settings - Touch Panel	5-21
Settings - Network Settings	5-22
Settings - Adjust Display.	5-23
Settings - Options	5-24
Test Menu.	5-25
Test Menu - Test Touch Panel	5-26
Test Menu - Test Beep / USB Audio	5-27
Test Menu - Test Serial Port	5-28
Test Menu - Test Ethernet Port	5-31
Test Menu - Test Display	5-33
Test Menu - Test User LED	5-35
Memory Screen	5-36
Memory - Backup.	5-38
Memory - Restore	5-44
Memory - Clear Memory.	5-48
Memory - Reset to Factory Default	5-52
Chapter 6: PLC Communications	6-1
Introduction	6-2
Direct LOGIC PLCs Password Protection	6-2
PLC Protocols.	6-3
PLC Communication Cables & Wiring Diagrams	6-5
Cables from AutomationDirect	6-6
AutomationDirect PLCs RS-232C Serial Cables Wiring Diagrams.	6-7
AutomationDirect PLCs PLCs RS-422A/RS-485A Cables Wiring Diagrams.	6-10
DirectLOGIC Universal Isolated Network Adapter, p/n FA-ISOCAN:	6-14
DirectLOGIC Universal Converter, p/n F2-UNICON:	6-15
RS-422A/RS-485A Multi-Drop Wiring Diagram Examples	6-16
Allen-Bradley PLCs RS-232C/RS-485A Serial Cables Wiring Diagrams.	6-20
GE PLCs RS-422/RS-232C Serial Cables Wiring Diagrams.	6-23
Mitsubishi PLCs RS-422/RS-232C Serial Cables Wiring Diagrams	6-24
Omron PLCs RS-232C Serial Cables Wiring Diagrams.	6-26
Modicon PLCs RS-232C Serial Cables Wiring Diagrams.	6-27

Siemens PLCs RS-485A Serial Cables Wiring Diagrams	6-28
Chapter 7: Maintenance	7-1
Maintenance	7-2
Project Backup	7-2
Check Operating Environment	7-2
Check Operating Voltage	7-2
Check Status Indicators	7-2
Check Physical Conditions	7-3
Run Tests under System Setup Screens	7-3
Check Memory Usage	7-4
Check/Adjust Display Brightness	7-4
Check Error Log	7-4
Adjust Touch Panel	7-4
Cleaning the Display Screen	7-5
Check Project Functionality	7-6
Checks from C-more Programming Software	7-6
Maintenance Notes:	7-7
Chapter 8: Troubleshooting	8-1
Overview	8-2
Common Problems	8-2
Troubleshooting Flow Chart	8-3
Touch Panel does not Power On	8-4
Display is Blank	8-5
Display is Dim	8-6
No User Program	8-7
Firmware Recovery Tool	8-8
Safe Mode (ERR-202-5)	8-9
No Communications between Panel and PC (Personal Computer) via USB	8-10
USB Driver Troubleshooting	8-12
No Communications between Panel and PC (Personal Computer) via Ethernet	8-13
No Communications between Panel and PC (Personal Computer)	8-14
No Communications between Panel and PLC	8-17
Difficulty Connecting to the Panel over the Internet (Webserver (Secure HTTPs) and Remote Access features)	8-21
PLC Protocol Error Codes	8-21
Touch Panel Runtime Errors	8-22
Data not Logging Problems	8-23
Electrical Noise Problems	8-23
Chapter 9: Replacement Parts	9-1
Replacement Parts Overview	9-2
Panel Mounting Clip Replacements	9-3
HMI-BRK-1	9-3
HMI-BRK-2	9-3
Logo Label Insert - HMI-LOGO-LBL	9-4
3-wire Communications Terminal Block - HMI-3TB	9-5
DC Power Terminal Block - C0-4TB	9-5
Panel Gasket - HMI-xW-GSK	9-6
Gasket Replacement Installation Instructions:	9-6

Appendix A: Panel and PLC Error Code tables	A-1
Introduction	A-2
C-more Touch Panel Error Code Table	A-3
Direct LOGIC – Panel Error Code PLC-499 Explanation	A-5
Direct LOGIC K-Sequence Protocol - PLC Error Code Table.	A-5
Direct LOGIC DirectNET Protocol – PLC Error Codes	A-5
Modbus Protocols Error Code P499 Explanation	A-6
DirectLOGIC ECOM Protocol – PLC Error Codes.	A-6
Productivity Error Code P499	A-7
AutomationDirect Do-More Error Codes.	A-8
Allen-Bradley – Panel Error Code PLC-499 Explanation.	A-9
Allen-Bradley DF1 Protocol – PLC Error Code Tables	A-10
Allen-Bradley EtherNet/IP Protocol – Panel Error Code PLC-496, 497 and 498 Explanation. . .	A-12
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code Tables ControlLogix, CompactLogix, & FlexLogix	A-13
Allen-Bradley – Micro800 Serial and EtherNet/IP Tag Based PLC Error Code Tables	A-17
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code Tables.	A-21
Generic EtherNet IP Protocol – PLC Error Codes	A-25
GE 90-30 – Panel Error Code PLC-499 Explanation	A-26
GE 90-30 SNPX Protocol – PLC Error Code Tables.	A-27
Mitsubishi FX Protocol – PLC Error Codes	A-35
Omron – Panel Error Code PLC-499 Explanation	A-35
Omron Host Link Protocol – PLC Error Code Table	A-36
Omron FINS Protocol – PLC Error Code Table	A-37
Omron – Panel Error Code PLC-495 Explanation	A-39
Omron CS/CJ FINS Ethernet Protocol – PLC Error Code Table	A-40
Siemens – Panel Error Code P499 Explanation	A-41
Siemens PPI Protocol – PLC Error Code Table	A-42
Siemens ISO over TCP Protocol – PLC Error Code Table	A-43
Appendix B: Touch Panel Runtime Errors	B-1
Introduction	B-2
Runtime Errors	B-3
Appendix C: System Screen Error Codes.	C-1
C-more Touch Panel System Screen Error Code Table	C-2
Appendix D: Security Considerations for Control Systems Networks.	D-1
Security Considerations for Control Systems Networks.	D-2

BLANK
PAGE