



TABLE OF CONTENTS

D0-DCM User Manual

Chapter 1 - Introduction

Manual Overview	1-2
The Purpose of this Manual.....	1-2
Supplemental Manuals.....	1-2
Technical Support.....	1-2
Conventions Used	1-3
Key Topics for Each Chapter.....	1-3
D0-DCM Overview	1-4
Important Configuration Information & PLC Firmware Requirements.....	1-4
Hardware Features.....	1-4
Module Uses.....	1-4
DCM Application Examples	1-5
DirectNET Master or Slave.....	1-5
Additional Communications Port.....	1-6
Modbus RTU Master or Slave.....	1-7

Chapter 2 - Installation, Network Cabling and Module Specifications

Inserting the D0-DCM into the PLC	2-2
D0-DCM Module Installation.....	2-2
PLC Firmware and DirectSOFT Requirements.....	2-2
Building the Communication Cable	2-3
Consideration 1: Physical Configuration.....	2-3
Multi-drop – RS-422/485.....	2-3
Point to Point – RS-232.....	2-3
Consideration 2: Electrical Specification RS232C or RS422/485.....	2-4

Consideration 3: Cable Schematics	2-4
Consideration 4: Cable Specifications.....	2-5
Consideration 5: Installation Guidelines.....	2-5
Wiring Diagrams.....	2-6
D0–DCM Port 2	2-7
RS–422 Network	2-7
Module Specifications	2-8
General Specifications	2-8
Port 1 Specifications.....	2-8
Port 2 Specifications.....	2-9

Chapter 3 - D0-DCM Module Setup

Important Module Configuration Information	3-2
Tip for DirectSOFT Users (optional).....	3-2
Using <i>DirectSOFT</i> to Configure the DCM.....	3-3
DirectSOFT PLC>Menu>Setup	3-3
Select DCM Slot.....	3-3
Port 1 Configuration (slave only).....	3-4
Port 2 Configuration (slave mode)	3-5
Port 2 Configuration (DirectNET	3-6
Port 2 Configuration (Modbus Master).....	3-7
Port 2 Configuration (Non–Sequence)	3-8
D0–DCM Port Configuration Registers.....	3-9
Module Configuration Registers	3-9
Default Communications Parameters.....	3-9
Parameter Descriptions.....	3-10
A: Port 1 – Transmit Mode, Protocol	3-11
B: Port 1 – Station Address, Baud Rate, Parity.....	3-12
C: Port 2 – RTS On/Off delay, Transmit Mode, Protocol, Comm Time–out, RS–485 Mode	3-13
D: Port 2 – Station Address, Baud Rate, Data Bit, Stop Bit, Parity	3-15
E: Port 2 – Memory Address - (Non–Sequence protocol)	3-16
F: Port 2 – Character Time–out.....	3-16

G: Port 1 and 2 Setup and Completion Code, XON/XOFF flow control (Port2)
 RTS flow control (Port 2)..... 3-17
 H: Port 1 and 2 Reset Time-out 3-18
Using Ladder Logic to Setup the D0-DCM (DL05)..... 3-19
 Port 1 Example: (This port is a slave only) 3-19
 Port 2 Example: Slave Mode..... 3-19
 Port 2 Example: **Direct**Net Master..... 3-20
 Port 2 Example: Modbus RTU Master..... 3-20
 Port 2 Example: Non-Sequence Protocol..... 3-21
Using ladder Logic to Setup the D0-DCM (DL06)..... 3-22
 Port 1 Example: Slave Mode Only 3-22
 Port 2 Example: Slave Mode..... 3-22
 Port 2 Example: **Direct**Net Master..... 3-23
 Port 2 Example: Modbus RTU Master..... 3-23
 Port 2 Example: Non-Sequence Protocol..... 3-24

Chapter 4 - **Direct**Net Communications Using RX/WX

RX/WX Network Instructions.....4-2
 Read (RX) and Write (WX) Instructions..... 4-2
 Building the Read (RX) and Write (WX) Routine 4-2
 The First LD Instruction 4-2
 The Second LD Instruction 4-3
 The LDA Instruction 4-3
 Read (WX) Instruction 4-4
 Write (WX) Instruction 4-4
Addressing the Different Memory Types 4-5
 Bit Memory 4-5
 Word Memory and Aliases..... 4-5
 Available Data Types 4-6
 DL05 CPU 4-6
 DL06 CPU 4-6
Special Relays for Communications 4-7
Program with One RX Instruction 4-8
 Program for the Master PLC..... 4-8
 Program for the Slave PLC..... 4-8

Table of Contents

Example Program with One WX Instruction	4-10
Program for the Master PLC	4-10
Program for the Slave PLC.....	4-10
Integrating Multiple RX and WX Instructions	4-12
Interlocking Relays.....	4-12
First RX/WX Instruction	4-13
Second RX/WX Instruction	4-14
Third RX/WX Instruction	4-14
Shift Register	4-15
Store If Equal.....	4-15
First RX/WX Instruction	4-16
Second RX/WX Instruction	4-16
Third RX/WX Instruction	4-16

Chapter 5 - Modbus Communications RX/WX and MRX/MWX

Network Slave Operation.....	5-2
Modbus Function Codes Supported.....	5-2
Determining the Modbus Address.....	5-2
If Your Host Software or Master Requires the Data Type and Address	5-3
Example 1: V2100	5-5
Example 2: Y20	5-5
Example 3: T10 Current Value.....	5-5
Example 4: C54.....	5-6
If the Host Software or Client Requires an Address ONLY	5-6
Example 1: V2100	5-8
Example 2: Y20	5-8
Example 3: C54.....	5-8
Network Master Operation: RX/WX Instructions.....	5-9
Overview.....	5-9
PLC Memory Supported for Client Operation.....	5-11
Example 1: Calculating Word PLC Address	5-12
Example 2: Calculating Discrete Input PLC Address.....	5-12
Building the Read (RX) or Write (WX) Routine.....	5-13
Step 1: Identify ECOM Slot Location and Server Node #.....	5-13
Step 2: Load Number of Bytes to Transfer.....	5-14
Step 3: Specify Master Memory Area.....	5-14

Step 4: Specify Slave Memory Area	5-14
Communications from a Ladder Program.....	5-15
Multiple Read and Write Interlocks.....	5-15
Network Master Operation: DL06 MRX / MWX Instructions	5-16
Modbus Read from Network (MRX)	5-16
MRX Slave Memory Address.....	5-17
MRX Master Memory Addresses.....	5-17
MRX Number of Elements.....	5-17
MRX Exception Response Buffer	5-17
Modbus Write to Network (MWX)	5-18
MWX Slave Memory Address	5-19
MWX Master Memory Addresses.....	5-19
MRX Number of Elements.....	5-19
MRX Exception Response Buffer	5-19
MRX/MWX Example in DirectSOFT	5-20
Multiple Read and Write Interlocks.....	5-20

Chapter 6: Communications Using Network IBox Instructions

Network Configuration Instruction (NETCFG)	6-2
NETCFG IB-700	6-2
Network Read Instruction (NETRX)	6-3
NETRX IB-701	6-3
Network Write Instruction (NETWX).....	6-4
NETWX IB-702.....	6-4
Example Using NETCFG, NETRX and NETWX	6-5