

Special Relays and DIP Switch Parameter Initializing

In This Appendix. . . .

- Special Relays
 - DIP Switch Parameter Initializing
-

Network Status Special Relays

The DL05 has special relays which allows the D0-DEVNETS to monitor the network status. These relays are SP120 and SP121.

SP	Condition	Details
SP120	ON	Communicating
	OFF	No communication
SP121	ON	Communication error
	OFF	Normal

Initializing Parameter Values

The values of the system parameter registers, V7610 – V7617, can be changed and initialized by the position of DIP switches SW1-3 and SW1-6.

Parameter values when the DL05/06 is powered up.

SW-3	SW1-6	V7610	V7611	V7612	V7613	V7614	V7615	V7616	V7617
OFF	OFF	*1	*1	*1	*1	*1	*1	*1	*1
OFF	ON	O40400	2	O40500	2	O3000	128	O3100	128
ON	OFF	O40400	2	O40500	2	O3000	58	O3100	52
ON	ON	O40400	2	O40500	2	O3000	128	O3100	128

*The parameter value in the EEPROM is moved to a register.