

TABLE OF CONTENTS



Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
Physical Characteristics	1-3
Analog Input Module Terminology	1-4
Analog Output Module Terminology	1-5
Selecting the Appropriate Module	1-6
Wide Variety of Modules	1-6
Diagnostic Features	1-6
Analog Input	1-7
Special Input	1-7
Analog Output	1-8
Combination Analog	1-8
Analog Made Easy - Four Steps	1-9

Chapter 2: F2-04AD-1, 4-Channel Analog Current Input

Module Specifications	2-2
F2-04AD-1	2-2
F2-04AD-1L is Obsolete	2-2
Input Specifications	2-3
General Specifications	2-3
Analog Input Configuration Requirements	2-4
Special Placement Requirements (DL230 and Remote I/O Bases)	2-4

Setting the Module Jumpers	2-6
Selecting the Number of Channels	2-6
Connecting the Field Wiring	2-7
Wiring Guidelines	2-7
User Power Supply Requirements	2-7
Current Loop Transmitter Impedance	2-8
Wiring Diagram	2-9
Module Operation	2-10
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	2-10
Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (Pointer method)	2-11
Analog Module Updates	2-11
Understanding the Input Assignments	2-12
Analog Data Bits	2-12
Active Channel Indicator Inputs	2-13
Module Diagnostic Inputs	2-13
Module Resolution	2-13
Writing the Control Program	2-14
Reading Values: Pointer Method and Multiplexing	2-14
Pointer Method for the DL240, DL250-1, and DL260	2-14
Reading Values (Multiplexing) for the DL230, DL240, DL250-1 and DL260	2-16
Single Channel Selected	2-16
Analog Power Failure Detection	2-17
Scaling the Input Data	2-17
The Conversion Program	2-18
Analog and Digital Value Conversions	2-18
Filtering Input Noise for the DL250-1 and DL260 CPUs Only	2-19

Chapter 3: F2-04AD-2, 4-Channel Analog Voltage Input

Module Specifications	3-2
F2-04AD-2	3-2
F2-04AD-2L is Obsolete	3-2
Analog Input Configuration Requirements	3-2
Input Specifications	3-3
General Specifications	3-3
Special Placement Requirements (DL230 and Remote I/O Bases)	3-4
Setting the Module Jumpers	3-5

Selecting the Number of Channels	3-5
Selecting the Input Signal Range	3-6
Connecting the Field Wiring	3-7
Wiring Guidelines	3-7
User Power Supply Requirements	3-7
Custom Input Ranges	3-8
Wiring Diagram	3-9
Module Operation	3-10
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	3-10
Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (Pointer method)	3-11
Analog Module Updates	3-11
Understanding the Input Assignments	3-12
Analog Data Bits	3-12
Active Channel Indicator Inputs	3-13
Module Diagnostic and Sign Inputs	3-13
Module Resolution	3-14
Writing the Control Program	3-15
Reading Values: Pointer Method and Multiplexing	3-15
Pointer Method for the DL240, DL250-1 and DL260 CPUs	3-15
Using Bipolar Ranges (Ptr Method) for the DL240, DL250-1 and DL260 CPUs	3-17
Reading Values (Multiplexing) for the DL230, DL240, DL250-1 and DL260	3-18
Single Channel Selected	3-19
Using Bipolar Ranges (Multiplexing)	3-19
Using 2's Complement for DL230, DL240, DL250-1, and DL260 CPUs (Multiplex)	3-20
Analog Power Failure Detection	3-21
Scaling the Input Data	3-21
The Conversion Program	3-22
Analog and Digital Value Conversions	3-22
Filtering Input Noise for the DL250-1 and DL260 CPUs Only	3-23
 Chapter 4: F2-08AD-1, 8-Ch. Analog Current Input	
Module Specifications	4-2
Firmware Requirements	4-2
Analog Input Configuration Requirements	4-2
Input Specifications	4-3

General Specifications	4-3
Special Placement Requirements (DL230 and Remote I/O Bases)	4-4
Setting the Module Jumpers	4-5
Selecting the Number of Channels	4-5
Connecting the Field Wiring	4-6
Wiring Guidelines	4-6
User Power Supply Requirements	4-6
Current Loop Transmitter Impedance	4-7
Wiring Diagram	4-8
Module Operation	4-9
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	4-9
Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (Pointer method)	4-10
Analog Module Updates	4-10
Understanding the Input Assignments	4-11
Analog Data Bits	4-11
Active Channel Indicator Inputs	4-12
Module Diagnostic Inputs	4-12
Module Resolution	4-12
Writing the Control Program	4-13
Reading Values: Pointer Method and Multiplexing	4-13
Pointer Method for the DL240, DL250-1 and DL260 CPUs	4-13
Reading Values (Multiplexing) for the DL230, DL240, DL250-1 and DL260	4-15
Single Channel Selected	4-15
Analog Power Failure Detection	4-16
Scaling the Input Data	4-16
The Conversion Program	4-17
Analog and Digital Value Conversions	4-17
Filtering Input Noise for the DL250-1 and DL260 CPUs Only	4-18
 Chapter 5: F2-08AD-2, 8-Ch. Analog Voltage Input	
Module Specifications	5-2
Firmware Requirements:	5-2
Analog Input Configuration Requirements	5-2
Input Specifications	5-3
General Specifications	5-3

Special Placement Requirements (DL230 and Remote I/O Bases)	5-4
Setting the Module Jumpers	5-5
Selecting the Number of Channels	5-5
Selecting the Input Voltage	5-6
Connecting the Field Wiring	5-7
Wiring Guidelines	5-7
User Power Supply Requirements	5-7
Wiring Diagram	5-8
Module Operation	5-9
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	5-9
Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (PTR method)	5-10
Analog Module Updates	5-10
Understanding the Input Assignments	5-11
Analog Data Bits	5-11
Active Channel Indicator Inputs	5-12
Module Diagnostic and Sign	5-12
Module Resolution	5-12
Writing the Control Program	5-14
Reading Values: Pointer Method and Multiplexing	5-14
Pointer Method for the DL240, DL250-1 and DL260 CPUs	5-14
Using Bipolar Ranges (Pointer Method) for the DL240, DL250-1 and DL260 CPUs	5-16
Reading Values (Multiplexing) for the DL230, DL240, DL250-1 and DL260	5-17
Single Channel Selected	5-18
Using Bipolar Ranges (Multiplexing)	5-18
Using 2's Complement for the DL205 CPUs (Multiplexing)	5-19
Analog Power Failure Detection	5-20
Scaling the Input Data	5-20
The Conversion Program	5-21
Analog and Digital Value Conversions	5-21
Filtering Input Noise for the DL250-1 and DL260 CPUs Only	5-22
 Chapter 6: F2-04RTD, 4-Channel RTD Input	
Module Specifications	6-2
Module Calibration	6-2
RTD Input Configuration Requirements	6-2
Input Specifications	6-3

Special Placement Requirements (DL230 and Remote I/O Bases)	6-4
Setting the Module Jumpers	6-5
Jumper Locations	6-5
Selecting the Number of Channels	6-5
Setting Input Type	6-5
Selecting the Conversion Units	6-6
Connecting the Field Wiring	6-7
Wiring Guidelines	6-7
RTD - Resistance Temperature Detector	6-7
Ambient Variations in Temperature	6-8
Wiring Diagram	6-8
Module Operation	6-9
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	6-9
Channel Scanning Sequence for DL240, DL250-1 and DL260 CPUs (Pointer Method)	6-10
Analog Module Updates	6-10
Writing the Control Program	6-11
Reading Values Pointer Method and Multiplexing	6-11
Pointer Method for the DL240/250-1/260 CPUs	6-11
Negative Temperature Readings with Magnitude Plus Sign for the DL240, DL250-1 and DL260 CPUs (Pointer Method)	6-13
Magnitude Plus Sign (Binary)	6-14
Magnitude Plus Sign (BCD)	6-14
Negative Temperatures 2's Complement for the DL240, DL250-1 and DL260 CPUs (Binary/Pointer Method)	6-15
Understanding the Input Assignments (Multiplexing Ladder Only)	6-15
Analog Data Bits	6-16
Active Channel Bits	6-16
Broken Transmitter Bits (Pointer and Multiplexing Ladder Methods)	6-16
Reading Magnitude Plus Sign Values (Multiplexing)	6-17
Reading 2's Complement Values (Multiplexing)	6-18
Scaling the Input Data	6-18
Filtering Input Noise (DL250-1 and DL260 CPUs Only)	6-19

Chapter 7: F2-04THM, 4-Channel Thermocouple Input

Module Specifications	7-2
-----------------------	-----

General Specifications	7-2
Thermocouple Specifications	7-3
Voltage Input Specifications	7-3
Module Calibration	7-3
Thermocouple Input Configuration Requirements	7-3
Special Placement Requirements (DL230 and Remote I/O Bases)	7-4
Setting the Module Jumpers	7-5
Jumper Locations	7-5
Calibrate Enable	7-5
Selecting the Number of Channels	7-6
Setting Input Type	7-6
Selecting the Conversion Units	7-7
Thermocouple Conversion Units	7-7
Voltage Conversion Units	7-7
Connecting the Field Wiring	7-8
Wiring Guidelines	7-8
User Power Supply Requirements	7-8
Thermocouples	7-9
Ambient Variations in Temperature	7-9
Wiring Diagrams	7-10
Module Operation	7-11
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	7-11
Channel Scanning Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	7-12
Analog Module Updates	7-12
Writing the Control Program	7-13
Reading Values Pointer Method and Multiplexing	7-13
Pointer Method for the DL240/250-1/260 CPUs	7-13
Negative Temperature Readings with Magnitude Plus Sign for the DL240, DL250-1 and DL260 CPUs (Pointer Method)	7-15
Magnitude Plus Sign (Binary)	7-15
Magnitude Plus Sign (BCD)	7-16
Negative Temperatures 2's Complement for the DL240, DL250-1 and DL260 CPUs (Binary/Pointer Method)	7-17
Understanding the Input Assignments (Multiplexing Ladder Only)	7-17
Analog Data Bits	7-18
Active Channel Bits	7-18

Broken Transmitter Bits (Pointer and Multiplexing Ladder Methods)	7-18
Reading Magnitude Plus Sign Values (Multiplexing)	7-19
Reading 2's Complement Values (Multiplexing)	7-20
Scaling the Input Data	7-20
Module Resolution 16-Bit (Unipolar Voltage Input)	7-21
Module Resolution 15-Bit Plus Sign(Bipolar Voltage Input)	7-21
Analog and Digital Value Conversions	7-22
Filtering Input Noise (DL250-1 and DL260 CPUs Only)	7-23

Chapter 8: F2-02DA-1, F2-02DA-1L, 2-Channel Analog Current Output

Module Specifications	8-2
Analog Output Configuration Requirements	8-2
Output Specifications	8-3
General Specifications	8-3
Special Placement Requirements (DL230 and Remote I/O Bases)	8-4
Connecting and Disconnecting the Field Wiring	8-5
Wiring Guidelines	8-5
User Power Supply Requirements	8-5
Wiring Diagram	8-6
Load Range	8-6
Module Operation	8-7
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	8-7
Channel Scanning Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	8-8
Understanding the Output Assignments	8-9
Channel Select Outputs	8-9
Analog Data Bits	8-10
Module Resolution	8-10
Writing the Control Program	8-11
Reading Values Pointer Method and Multiplexing	8-11
Pointer Method for the DL240, DL250-1 and DL260 CPUs	8-11
Writing Data (Multiplexing)	8-13
Write Data to One Channel	8-14
Write Data to Both Channels	8-14
Calculating the Digital Value	8-15

Analog and Digital Value Conversions	8-15
The Conversion Program	8-16

Chapter 9: F2-02DA-2, F2-02DA-2L, 2-Channel Analog Voltage Output

Module Specifications	9-2
Analog Output Configuration Requirements	9-2
Output Specifications	9-3
General Specifications	9-3
Special Placement Requirements (DL230 and Remote I/O Bases)	9-4
Setting the Module Jumpers	9-5
Voltage Range and Output Combinations	9-6
Connecting and Disconnecting the Field Wiring	9-8
Wiring Guidelines	9-8
User Power Supply Requirements	9-8
Wiring Diagram	9-9
Module Operation	9-10
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	9-10
Channel Scanning Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	9-11
Understanding the Output Assignments	9-12
Channel Select Outputs	9-12
Analog Data Bits	9-13
Signal Sign Output	9-13
Bipolar Output Data	9-13
Module Resolution	9-14
Writing the Control Program	9-15
Calculating the Digital Value	9-15
The Conversion Program	9-16
Negative Values with Bipolar Range	9-17
Writing Values: Pointer Method and Multiplexing	9-18
Writing Values (Pointer Method) for the DL240, DL250-1 and DL260 CPUs	9-18
Writing Data (Multiplexing)	9-20
Write Data to One Channel	9-22
Write Data to Both Channels	9-22
Analog and Digital Value Conversions	9-23

Chapter 10: F2-08DA-1, 8-Channel Analog Current Output

Module Specifications	10-2
Firmware Requirements:	10-2
Analog Output Configuration Requirements	10-2
Output Specifications	10-3
General Specifications	10-3
Special Placement Requirements (DL230 and Remote I/O Bases)	10-4
Connecting and Disconnecting the Field Wiring	10-5
Wiring Guidelines	10-5
User Power Supply Requirements	10-5
Wiring Diagram	10-6
Load Range	10-6
Module Operation	10-7
Channel Scanning Sequence for a DL230 CPU (Multiplexing)	10-7
Channel Scanning Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	10-8
Understanding the Output Assignments	10-8
Channel Select Outputs	10-9
Analog Data Bits	10-10
Output Enable	10-10
Module Resolution	10-10
Writing the Control Program	10-11
Calculating the Digital Value	10-11
The Conversion Program	10-11
Reading Values Pointer Method and Multiplexing	10-12
Pointer Method for the DL240, DL250-1 and DL260 CPUs	10-12
Writing Data (Multiplexing Example)	10-14
Write Data (Multiplexing Example) Continued	10-15
Sending Data to One Channel	10-16
Analog and Digital Value Conversions	10-16

Chapter 11: F2-08DA-2, 8-Channel Analog Voltage Output

Module Specifications	11-2
Firmware Requirements:	11-2
Output Specifications	11-3
General Specifications	11-3

Analog Output Configuration Requirements	11-3
Special Placement Requirements (DL230 and Remote I/O Bases)	11-4
Setting the Module Jumpers	11-5
Voltage Range and Output Combinations	11-5
Connecting the Field Wiring	11-6
Wiring Guidelines	11-6
User Power Supply Requirements	11-6
Wiring Diagram	11-7
Module Operation	11-8
Channel Update Sequence for a DL230 CPU (Multiplexing)	11-8
Channel Update Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	11-9
Understanding the Output Assignments	11-10
Channel Select Outputs	11-10
Analog Data Bits	11-11
Output Enable	11-11
Module Resolution	11-11
Writing the Control Program	11-12
Calculating the Digital Value	11-12
The Conversion Program	11-13
Writing Values: Pointer Method and Multiplexing	11-14
Writing Values (Pointer Method) for the DL240, DL250-1 and DL260 CPUs	11-14
Writing Data Example(Multiplexing)	11-16
Writing Data Example(Multiplexing) continued	11-17
Write Data to One Channel	11-18
Analog and Digital Value Conversions	11-18

Chapter 12: F2-02DAS-1, Isolated 2-Channel Analog Current Output

Module Specifications	12-2
Firmware Requirements:	12-2
Output Specifications	12-3
General Specifications	12-3
Analog Output Configuration Requirements	12-3
Special Placement Requirements (DL230 and Remote I/O Bases)	12-4
Connecting the Field Wiring	12-5

Wiring Guidelines	12-5
Loop Power Supply Requirements	12-5
Wiring Diagram	12-6
Module Operation	12-7
Channel Update Sequence for a DL230 CPU (Multiplexing)	12-7
Channel Update Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	12-8
Understanding the Output Assignments	12-9
Channel Select Outputs	12-9
Analog Data Bits	12-10
Module Resolution	12-10
Writing the Control Program	12-11
Calculating the Digital Value	12-11
Engineering Units Conversion	12-12
Read Data Values: Pointer Method and Multiplexing	12-13
Pointer Method for the DL240, DL250-1 and DL260 CPUs	12-13
Write Data Example (Multiplexing)	12-15
Write Data to One Channel	12-16
Write the same Data to Both Channels	12-16
Analog and Digital Value Conversions	12-17
 Chapter 13: F2-02DAS-2, 0-5V, 0-10V, 2-Channel Isolated Analog Out	
Module Specifications	13-2
Firmware Requirements:	13-2
Output Specifications	13-3
General Specifications	13-3
Analog Output Configuration Requirements	13-3
Special Placement Requirements (DL230 and Remote I/O Bases)	13-4
Setting the Module Jumpers	13-5
Connecting the Field Wiring	13-6
Wiring Guidelines	13-6
Transmitter Power Supply Requirements	13-6
Wiring Diagram	13-6
Module Operation	13-7
Channel Update Sequence for a DL230 CPU (Multiplexing)	13-7
Channel Update Sequence for DL240, DL250-1, and DL260 CPUs	

(Pointer Method)	13–8
Understanding the Output Assignments	13–8
Channel Select Outputs	13–9
Analog Data Bits	13–9
Module Resolution	13–10
Writing the Control Program	13–11
Calculating the Digital Value	13–11
Engineering Units Conversion	13–12
Read Data Values: Pointer Method and Multiplexing	13–13
Pointer Method for the DL240, DL250-1 and DL260 CPUs	13–13
Write Data Example (Multiplexing)	13–15
Write Data to One Channel	13–16
Write the same Data to Both Channels	13–16
Analog and Digital Value Conversions	13–17
Chapter 14: F2-4AD2DA, 4-Ch. In / 2-Ch. Out Analog Combination	
Module Specifications	14–2
Input Specifications	14–2
Output Specifications	14–3
General Specifications	14–3
Combination Analog Configuration Requirements	14–3
Special Placement Requirements (DL230 and Remote I/O Bases)	14–4
Connecting the Field Wiring	14–5
Wiring Guidelines	14–5
Loop Power Supply Requirements	14–5
Current Loop Transmitter Impedance	14–6
Wiring Diagram	14–7
Module Operation	14–8
Input Channel Scanning Sequence for a DL230 CPU (Multiplexing)	14–8
Input Channel Scanning Sequence for DL240, DL250-1, and DL260 CPUs (pointer method)	14–8
Output Channel Update Sequence for a DL230 CPU (Multiplexing)	14–9
Output Channel Update Sequence for DL240, DL250-1, and DL260 CPUs (Pointer Method)	14–9
Understanding the I/O Assignments	14–10
Input Data Bits	14–10
Active Channel Indicator Bits	14–11

Diagnostic Indicator Inputs	14-11
Output Data Bits	14-11
Output Channel Selection Bits	14-12
Module Resolution	14-12
Writing the Control Program	14-13
Analog Input Failure Detection	14-13
Calculating the Digital Value	14-13
Scaling the Input Data	14-15
Read / Write Program for the DL240, DL250-1 and DL260 CPUs (Pointer Method)	14-16
Read Input Values (Multiplexing)	14-18
Single Input Channel Selected (Multiplexing)	14-19
Write Output Values (Multiplexing)	14-19
Write Data to One Channel	14-20
Write the same Data to Both Channels	14-20
Analog and Digital Value Conversions	14-20
Filtering Input Noise (DL250-1, DL260 CPUs Only)	14-21
 Chapter 15: F2-8AD4DA-1, 8-Ch. In / 4-Ch. Out Current Analog Comb.	
Module Specifications	15-2
F2-8AD4DA-1 Requirements	15-2
Input Specifications	15-3
Output Specifications	15-4
General Module Specifications	15-5
Module Placement and Configuration Requirements	15-5
Connecting the Field Wiring	15-6
Wiring Guidelines	15-6
User Power Supply Requirements	15-6
Current Loop Transmitter Impedance	15-7
Wiring Diagram	15-8
Module Operation	15-9
Input Channel Scanning Sequence (Pointer Method)	15-9
Output Channel Update Sequence (Pointer Method)	15-10
Understanding the I/O Assignments	15-11
Input Data Bits	15-12
Output Data Bits	15-12

Special V-Memory Locations	15-13
Module Configuration Registers	15-13
Number of I/O Channels Enabled & Data Format	15-14
Input Selection Resolution Bits	15-14
Input Track and Hold Selection Bits	15-15
Writing the Control Program	15-16
Configuring the Module to Read/Write I/O (Pointer Method, DL250-1 and DL260 only)	15-16
Module Configuration Example 1:	15-17
Module Configuration Example 2:	15-18
Module Configuration Example 3:	15-19
Module 12 Bit Input Resolution	15-20
Module 14 Bit Input Resolution	15-20
Module 16 Bit Input Resolution	15-20
Analog and Digital Input Data Value Conversion	15-21
Input Value Comparisons: Analog, Digital, Engineering Units	15-21
Scaling the Input Data	15-22
Scaling Example	15-22
Input Engineering Unit Conversion Example 1:	15-23
Input Engineering Unit Conversion Example 2:	15-23
Input Engineering Unit Conversion Example 3:	15-24
Input Engineering Unit Conversion Example 4:	15-25
Using the Input Track and Hold Feature	15-25
Track and Hold Example:	15-26
Module 16 Bit Output Resolution	15-27
Digital and Analog Output Data Value Conversion	15-27
Output Value Comparisons: Analog, Digital, Engineering Units	15-27
Calculating the Digital Output Value	15-28
Calculating Output Data: Engineering Units Conversion	15-28
Output Engineering Unit Conversion / Output Data Calculation Example:	15-28
Chapter 16: F2-8AD4DA-2, 8-Ch. In / 4-Ch. Out Current Voltage Comb.	
Module Specifications	16-2
F2-8AD4DA-2 Hardware and Firmware Requirements	16-2
Input Specifications	16-3
Output Specifications	13-3
General Module Specifications	16-5

Module Placement and Configuration Requirements	16-5
Connecting the Field Wiring	16-6
Wiring Guidelines	16-6
User Power Supply Requirements	16-6
Wiring Diagram	16-7
Module Operation	16-8
Input Channel Scanning Sequence (Pointer Method)	16-8
Output Channel Update Sequence (Pointer Method)	16-9
Understanding the I/O Assignments	16-10
Input Data Bits	16-11
Output Data Bits	16-11
Special V-Memory Locations	16-12
Module Configuration Registers	16-12
Number of I/O Channels Enabled & Data Format	16-13
Input Selection Resolution Bits	16-13
Input and Output Range Selection Bits	16-14
Input Track and Hold Selection Bits	16-15
Writing the Control Program	16-16
Configuring the Module to Read/Write I/O (Pointer Method, DL250-1 and DL260 only)	16-16
Module Configuration Example 1:	16-17
Module Configuration Example 2:	16-18
Module Configuration Example 3:	16-19
Module 12 Bit Input Resolution	16-20
Module 14 Bit Input Resolution	16-20
Module 16 Bit Input Resolution	16-20
Analog and Digital Input Data Value Conversion	16-21
Scaling the Input Data	16-22
Scaling Example	16-22
Input Engineering Unit Conversion Example 1:	16-23
Input Engineering Unit Conversion Example 2:	16-23
Input Engineering Unit Conversion Example 3:	16-24
Using the Input Track and Hold Feature	16-24
Track and Hold Example:	16-25
Module 16 Bit Output Resolution	16-26
Digital and Analog Output Data Value Conversion	16-26
Output Value Comparisons: Analog, Digital, Engineering Units	16-26

Calculating the Digital Output Value	16–27
Calculating Output Data: Engineering Units Conversion	16–27

Appendix A: DL205 Discrete I/O Memory Map

X Input / Y Output Bit Map	A–2
Control Relay Bit Map	A–4
Remote I/O Bit Map (DL260 only)	A–8