



Errata Sheet

This Errata Sheet contains corrections or changes made after the publication of this manual.

Product Family:	DL205	Date:	October 2018
Manual Number	D2-HP-M		
Revision and Date	1st Edition, Rev. A; May, 1998		

Changes to Chapter 1. Getting Started

Pages 1-6 and 1-7. Physical Characteristics and Specifications; Connections to the CPU and Specifications

On both of these pages the part number given for the programming cable is incorrect. The correct part number is "DV-1000CBL", not "D2-DSCBL".

Page 1-6. Handheld Programmer Layout


Changes to Chapter 5. Naming and Storing Program; Saving Programs to EEPROM

Page 5-4. Types of EEPROMs (DL205 Only)

Page 5-5. Inserting a EEPROM in the Handheld Programmer

In late 2004, a design change occurred that changed how the EEPROM locks into place. The drawings and text on pages 1-6, 5-4 and 5-5 show the old design, whereby the EEPROM was held into place by a small lever. To replace the EEPROM, raise the lever to loosen the EEPROM. Once the replacement EEPROM is inserted in place, press the lever down to secure it.

On re-designed models, the lever arrangement was replaced by a locking screw, as shown in the photo below. Turn the screw clockwise to loosen and counterclockwise to tighten the EEPROM.

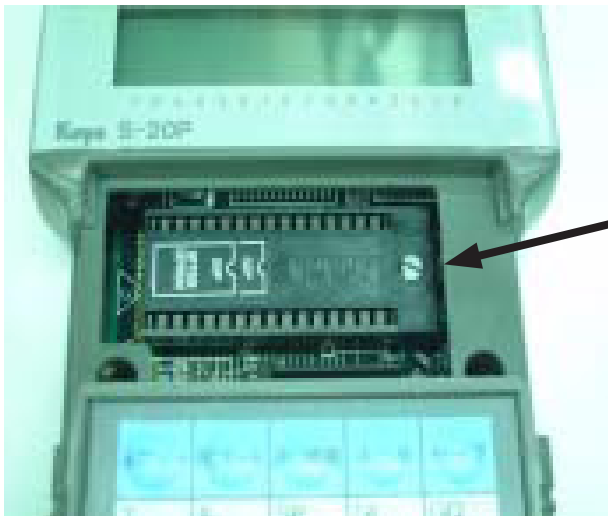

Locking screw secures EEPROM in place. Locking screw replaces lever on models manufactured after October 2004.