

INDEX



A

- Accumulator/Stack Instructions, 5–53
 - Pointers, 5–57
- Analog Potentiometer, 3–19
- ASCII Conversion Table, G-2
- ASCII Instructions, 5–211
- Auto tuning error, 8–48
- Auto Tuning Procedure, 8–45
- Auxiliary Functions, A–2
 - Accessing, A–3
 - DirectSOFT*, A–3
 - Handheld Programmer, A–3

B

- Basic EMC Installation Guidelines, I-4
- Binary Numbering System, H–2
- Bit Map, 3–57
 - Control Relay, 3–59
 - Remote I/O, 3–66
 - Stage Control/Status, 3–63
 - Timer and Counter Status, 3–65
 - X Input/Y Output, 3–57
- Bit Operations, 5–123
- Boolean Instructions, 5–5, 5–10
- Bumpless Transfer, 8–13, 8–27, 8–75, 8–76

C

- Cascade Control, 8–64
 - Tuning, 8–66
- Clock and Calendar, 3–16
- Clock/Calendar Instructions, 5–175
- Comparative Boolean, 5–27
- Converge Jump instruction, 7–25
- Converge Stage instruction, 7–25
- Convergence Jump instruction, 7–20
- Convergence Stages, 7–19
- Counter Instructions, 5–46
- CPU Control Instructions, 5–177
- CPU Error Indicators, 9–10
 - PWR Indicator, 9–11
- CPU Features, 3–2
 - Mode Switch, 3–12
 - Program Storage Media, 3–9
 - Setting the CPU Network Address, 3–17
 - Setup, 3–6
 - Specifications, 3–4
 - Status Indicators, 3–12
- CPU Operation, 3–21
 - I/O Response Time, 3–27
 - Scan Time Considerations, 3–29

D

- Data Type Mismatch, H-7
- DL205 Aliases, 3-52
- DL205 PLC Memory, E-2
- Drum Instruction (DRUM), 6-12
 - chart representation, 6-3
 - counter assignments, 6-6
 - drum control techniques, 6-10
 - event drum (EDRUM), 6-14
 - handheld programmer mnemonics, 6-16
 - masked event drum (MDRMD)(MDRMW), 6-19, 6-21
 - Operation, 6-8
 - powerup state, 6-9
 - self-resetting, 6-11
 - step transitions, 6-11
 - Terminology, 6-2

E

- Environmental Specifications, 2-8
- Error Codes, 9-6, B-2
- Error Term Selection, 8-34
- European Union Directives, I-2
- Expanding DL205 I/O, 4-17
 - Ethernet Base Controller, 4-22
 - Ethernet Remote Master, 4-17
 - Serial Remote I/O Master/Slave, 4-26

F

- Feedforward Control, 8-69
- Freeze Bias, 8-11, 8-35

H

- Hardware Maintenance, 9-2
 - Communications, 9-13
 - Diagnostics, 9-3

- Hexadecimal Numbering System, H-3
- Hysteresis, 8-13, 8-37, 8-38, 8-39

I

- I/O Module Troubleshooting, 9-14
- I/O System Configurations, 4-2
- Immediate Instructions, 5-33
- Initial Stage (ISG), 7-24
- Installation, 2-10
 - Base Wiring, 2-13
 - Connecting DC I/O, 2-19
 - I/O Modules Position, 2-26
 - Transient Suppression, 2-21
- Instruction Execution Times, C-2
- Instruction Table, 5-2
- Instructions
 - stage, 7-23
 - stage programming, 7-2
- Intelligent Box (IBox) Table, 5-230
- Intelligent I/O Instructions, 5-191
- Interrupt Instructions, 5-187

J

- Jump instruction, 7-7

L

- Local Expansion I/O, 4-11
- Loop Mode, 8-28
- Loop Table Word Definitions, 8-20

M

- Machine Startup, 9-18
- Memory Map, 3-37, 3-53
 - DL230, 3-53
 - DL240, 3-54

- DL250-1, 3-55
 - DL260, 3-56
 - Message Instructions, 5-197
 - Modbus RTU Instructions, 5-205
 - Mounting Guidelines, 2-5
 - Component Dimensions, 2-5
- ## N
- Network Connections, 4-32
 - Configuring Port 2, 4-32
 - Network Instructions, 5-193
 - Network Master Operation, 4-41
 - Network Modbus RTU Master Operation, 4-45
 - Network Slave Operation, 4-35
 - Modbus, 4-35
 - Noise Troubleshooting, 9-17
 - Non-volatile V-memory, E-3
 - Non-Sequence Protocol, 4-54
 - Configure the DL250-1 Port 2, 4-56
 - Not Jump, 7-24
 - Number Conversion Instructions, 5-130
- ## O
- Octal Numbering System, H-4
- ## P
- Parallel Processing, 7-19
 - PID
 - Analog Filter, 8-54
 - Direct*SOFT Filter Intelligent Box Instruction, 8-56
 - Error Flags, 8-18
 - Example Program, 8-71
 - Loop Modes, 8-28, 8-52, 8-53, 8-65
 - Parameters, 8-33
 - Setup Alarms, 8-36
 - Special Features, 8-52
 - PID Alarms, 8-36
 - Calculation Overflow/Underflow Error, 8-39
 - Hysteresis, 8-39
 - Mode/Alarm Bit Description, 8-23
 - Monitor Limit, 8-36
 - Programming Error, 8-39
 - PV Deviation, 8-37
 - Rate-of-Change, 8-38
 - PID Loop
 - Alarms, 8-13
 - Auto Tuning, 8-41
 - Configure, 8-26
 - Manual Tuning, 8-41, 8-42, 8-44, 8-47, 8-54
 - Mode, 8-28
 - Operating Modes, 8-14
 - Operation, 8-9
 - Program Setup, 8-71
 - Reverse Acting, 8-12, 8-14, 8-27, 8-41
 - Setup, 8-18
 - Terminology, 8-76
 - Troubleshooting Tips, 8-74
 - PID Mode 2 Word Description, 8-22
 - PID Mode Setting 1 Description, 8-21
 - PLC Numbering Systems, 3-35
 - Position Algorithm, 8-9, 8-15, 8-77
 - Position Form, 8-9
 - Power Budget, 4-7
 - Product Weight Table, F-2
 - Products and Data Types, H-9
 - Program Control Instructions, 5-179
- ## Q
- Quick Start, 1-10
- ## R

- Ramp/Soak Generator, 8–57
 - Controls, 8–60
 - DirectSOFT* Ramp/Soak Example, 8–62
 - Profile Monitoring, 8–61
 - Ramp/Soak Flag Bit Description, 8–23
 - Ramp/Soak Table Location, 8–24
 - Relay Ladder, 8–62
 - Table, 8–58
 - Table Flags, 8–60
 - Test Profile with PID View, 8–63
 - Testing, 8–61
- Rate-of-Change, 8–13, 8–14, 8–38
- Real Numbering System, H–5
- Reset Windup, 8–10, 8–35, 8–77

S

- Safety Guidelines, 2–2
 - Emergency Stops, 2–3
- Shift Register Instruction, 5–52
- Signed vs. Unsigned Integers, H–8
- Special Relays, D–2
- Square Root, 8–14
- Stage instructions, 7–23
- Stage Programming, 7–2, 7–15
 - convergence, 7–19
 - emergency stop, 7–14
 - Example, 7–10
 - four steps to stage programming, 7–9
 - introduction, 7–2
 - jump instruction, 7–7
 - mutually exclusive transitions, 7–14
 - parallel processing concepts, 7–19
 - program organization, 7–15
 - questions and answers, 7–29
 - stage instruction characteristics, 7–6
 - state transition diagrams, 7–3
 - timer inside stage, 7–13

- State Diagram, 7–11
- Step Transitions, 6–4
- System Components, 1–4
 - DirectLOGIC™* Part Numbering System, 1–8
- System V-memory, 3–41
 - DL230, 3–41
 - DL240, 3–43
 - DL250–1, 3–46
 - DL260, 3–49

T

- Table Instructions, 5–144
- Technical Support, 1–2
- Time-Proportioning Control, 8–67
 - On/Off Control Program, 8–68
- Timer Instructions, 5–41
- Transcendental Functions, 5–121
- Transfer Mode, 8–27

U

- Using a Password, 3–18
- Using Battery Backup, 3–14

V

- Velocity Algorithm, 8–9, 8–15, 8–77
 - Velocity Form, 8–12