


# Installation Instructions Notice d'installation Instrucciones de montaje

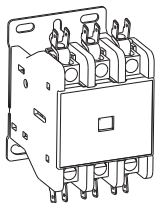

WDP50/60/75/90 3Pole  
Definite-purpose Contactor



1/5



**WARNING**

**DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.**

2/5

	A	B	C	D	E	F	G	H	
A1	a								
A2	0.8N.m [10Lb.in]								
Model Code	A	a	B	C	D	E	F	G	H
WDP50	M10	M3.5	4-10N.m [40Lb.in]	4-10 [12-8]	4-10 [12-8]	4-10 [12-8]	4-10 [12-8]	6-16 [10-6]	6-16 [10-6]
WDP60	M10	M3.5	4-10N.m [40Lb.in]	4-10 [12-8]	4-10 [12-8]	4-10 [12-8]	4-10 [12-8]	6-16 [10-6]	6-16 [10-6]
WDP75	M12	M4	4-14N.m [50Lb.in]	10-25 [8-4]	10-25 [8-4]	10-25 [8-4]	10-25 [8-4]	16-35 [6-3]	16-35 [6-3]
WDP90	M12	M4	4-14N.m [50Lb.in]	16-25 [6-4]	16-25 [6-4]	16-25 [6-4]	16-25 [6-4]	25-35 [4-3]	25-35 [4-3]

3/5

### Warning!

**Motor may start automatically. Automatic start may injure persons and damage machines. Automatic restart is possible when "automatic reset" is active.**


### Avertissement !

**Le redémarrage automatique du moteur peut provoquer des dégâts matériels et être dangereux pour personnes. Ce danger du redémarrage automatique correspond au mode «réarmement automatique».**

### ¡Advertencia!

**El motor puede arrancar automáticamente. El arranque automático es posible cuando el "botón de reset" está en posición automático y el circuito de maniobra activado.**

4/5

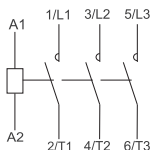

**Disconnect all power before working on equipment.  
Coupez toutes les alimentations avant de travailler sur l'équipement.  
Desconecte la alimentación antes de trabajar en equipo.**

5/5



Printed with environment-friendly paper  
Copyright WorldwideElectric. All Rights Reserved  
www.worldwideelectric.net