

Table of Contents

Chapter 1: Introduction

| | |
|---|------------|
| Manual Overview | 1-2 |
| The Purpose of this Manual | 1-2 |
| Who Should Read this Manual | 1-2 |
| Technical Assistance | 1-2 |
| How this Manual is Organized | 1-3 |
| Chapters | 1-3 |
| Appendices | 1-3 |
| Concept Background | 1-4 |
| ScreenCreator Basics | 1-4 |
| The <i>Direct</i> Touch Panel | 1-4 |
| Grid Lines and Dots | 1-5 |
| The Screens | 1-5 |
| Installing ScreenCreator | 1-6 |

Chapter 2: Project Tutorial

| | |
|--|-------------|
| Tutorial Overview | 2-2 |
| Set up the Panel | 2-2 |
| Programming Cable | 2-2 |
| Start ScreenCreator | 2-3 |
| Create a New Project | 2-3 |
| Local Screens | 2-4 |
| Create a New Screen | 2-4 |
| Zoom Screen | 2-4 |
| Size Window to Screen | 2-5 |
| Add a New Part | 2-5 |
| Select the Part | 2-5 |
| Part Properties | 2-6 |
| Place the Part on the Screen | 2-7 |
| Save the New Screen | 2-7 |
| Add a New Screen and Screen Select parts | 2-8 |
| Download the Project | 2-10 |
| The Pushbuttons on the Panel | 2-10 |
| The Global Screen and Local Screens | 2-11 |
| Open an existing Screen | 2-11 |
| Add a Numerical Input Display and Ten-key Pad | 2-12 |
| Add a Numerical Input Display | 2-12 |
| Add a Ten-key Pad | 2-14 |
| Tutorial Review | 2-16 |

Chapter 3: Key Concepts

| | |
|--|-------------|
| Projects | 3-2 |
| Screens (Global and Local) | 3-2 |
| Screen Objects | 3-2 |
| Screen Parts | 3-2 |
| Part Toolbar | 3-2 |
| Access of a Part | 3-2 |
| Adding Parts to a Screen | 3-3 |
| User Parts | 3-3 |
| Screen Parts Versus Library Parts | 3-3 |
| Library Parts | 3-4 |
| Like Part Templates | 3-4 |
| Editing Library Parts | 3-4 |
| Creating a New Library Part from an Existing One | 3-5 |
| Creating a New Library Part from Scratch | 3-7 |
| Inside a Part | 3-10 |
| Control | 3-10 |
| Control Texture and Color | 3-11 |
| Part Background and Program | 3-11 |
| Viewing and Editing Part Components: Browse List | 3-12 |
| How the Components of a Part fit together | 3-13 |
| How ON/OFF Colors work in a Part | 3-14 |
| The Project Register: Screens, Registered Text and Textures | 3-15 |
| Screens | 3-15 |
| Registered Text | 3-16 |
| Registered Textures | 3-17 |
| Textures | 3-18 |
| Screen (or Part) Textures Versus Library Textures | 3-18 |
| Adding Textures to a Screen or Part | 3-18 |
| Bitmaps | 3-19 |
| Adding Bitmaps to a Screen or Part | 3-19 |
| Figures (Drawing Objects) | 3-20 |
| Adding Figures to a Screen or Part | 3-20 |
| Tile Color (Fill) | 3-20 |
| The Toolbars | 3-21 |
| A Quick Reference for the Toolbars | 3-22 |
| Standard Toolbar | 3-22 |
| Drawing Toolbar | 3-23 |
| Part Toolbar | 3-23 |
| Control Toolbar | 3-23 |

Chapter 4: ScreenCreator Menus and Toolbars

| | |
|-------------------------------|-------------|
| The Screen Menu | 4-2 |
| The Create Menu | 4-6 |
| The Edit Menu | 4-11 |
| The Library Menu | 4-15 |
| The Tools Menu | 4-20 |
| The Windows Menu | 4-22 |
| The Project Menu | 4-22 |
| The Help Menu | 4-27 |

Chapter 5: Control Reference

| | |
|---------------------------------|------------|
| Control Definition | 5-2 |
| Pushbutton/Switch | 5-3 |
| Selector Switch | 5-7 |
| Numerical Display | 5-7 |
| Text Display | 5-11 |
| Clock Display | 5-15 |
| Figure (Texture) Display | 5-17 |
| Plot | 5-21 |
| Bar Graph | 5-24 |
| Line Graph | 5-27 |
| Band | 5-30 |
| Circle | 5-32 |
| Free | 5-34 |
| Slider | 5-36 |
| Meter | 5-39 |
| Light | 5-42 |
| Pipe | 5-45 |

Chapter 6: Part Reference

| | |
|---|------------|
| Parts | 6-2 |
| Numerical Input Displays (Word) | 6-2 |
| Numerical Input Displays (Double Word) | 6-4 |
| ASCII Text Displays | 6-6 |
| Text Input Displays | 6-7 |
| Registered Text Display | 6-9 |
| Lights (for each Bit of a Word Address) | 6-14 |
| Toggle Switches | 6-15 |
| Selector Switches | 6-16 |
| Key Pads/Keyboards | 6-18 |
| Screen Select Parts | 6-22 |
| Trend Graphs | 6-25 |
| External Clocks and Calendars | 6-27 |
| The Error Display | 6-30 |
| Alarms (Warning Displays) | 6-31 |
| Special Parts | 6-36 |

Appendix A: Connecting to a PLC

| | |
|---|-------------|
| Connecting to PLC <i>Direct</i> PLCs | A-2 |
| Step 1: Choose RS-232C or RS-422 for panel/PLC communication | A-2 |
| Step 2: Set up panel/PLC communication | A-2 |
| <i>Direct</i> Touch Setup for RS-422 (panel/PLC) | A-2 |
| RS-232C Setup | A-3 |
| RS-422 Setup | A-4 |
| Suggested Setup for PLCs with RS-422 | A-4 |
| <i>Direct</i> Touch Setup for RS-232C (panel/PLC) | A-5 |
| Step 3: Connect the PLC to the panel through the proper cable | A-5 |
| <i>Direct</i> Touch Cables | A-5 |
| Connecting to Allen-Bradley PLCs | A-6 |
| RS-232C (panel/PLC) | A-7 |
| Step 1: Channel 0 (RS-232C) Setup for panel/PLC | A-7 |
| Step 2: Channel1 (DH 485) Setup for PC/PLC | A-7 |
| Suggested Setup for A-B PLCs | A-8 |
| Step 3: Connect the PLC to the panel through the DP-ABCBL-1 cable | A-8 |
| Allen-Bradley SLC 5/03 or 5/04: Data Addressing | A-9 |
| Allen-Bradley Micrologix (1000 or 1500): Data Addressing | A-9 |
| Allen-Bradley PLCs: Communications | A-10 |
| Connecting to PLCs running the Modbus protocol | A-10 |
| Connecting to the WinPLC | A-11 |
| <i>Direct</i>Touch Panel Section | A-15 |
| The Programming Cable (DP-PGMCBL) | A-15 |
| <i>Direct</i> Touch Cable Pin-outs | A-15 |
| <i>Direct</i> Touch Panel Specifications | A-16 |
| <i>Direct</i> Touch Panel Dimensions and Installation | A-17 |

Appendix B: ScreenCreator and *Direct*Touch panel Error Codes

| | |
|---|-------------|
| ScreenCreator Errors and Warnings | B-2 |
| ScreenCreator Errors (E000-E251) | B-2 |
| ScreenCreator Warnings (W000-W018) | B-10 |
| ScreenCreator Errors in Compiling and Building Screen Data | B-12 |
| Compiling Errors (EC000-EC082) | B-12 |
| Building Data Errors (EL000-EL080) | B-18 |
| Building Data Warnings (WL000-WL021) | B-21 |
| <i>Direct</i>Touch Panel Operation Errors | B-22 |
| Panel Operation Errors (1-15) | B-22 |
| Main CPU Errors (1001-1063) | B-23 |
| Serial Communication Errors (2000-2965) | B-24 |
| Downloading/Uploading Errors (3361-3878) | B-25 |
| Message Processing Errors (4110-4520) | B-26 |
| Errors caused by too many messages issued (6001-6008) | B-26 |