

Index

A

A–B, *See Allen–Bradley*
Access of a Part, 3–2
Alarm Displays, 6–30 through 6–35
Allen–Bradley (A–B) PLCs
 Addressing, A–9
 Connecting to, A–6
 Data Files, A–9
Arc, 4–7
ASCII Text, 5–11
 Displays for, 6–6
Attributes/Properties, 4–13

B

Background, Color, 3–14
Backlight, 6–38
Band, 5–30
Bar Graphs, 5–24
Bitmaps, 3–22, 4–9
Brightness, 6–37, A–17
Browse List, 3–12, 4–21
Building, 4–25

C

Cables, A–5
 Programming, 2–2, A–15
 RS–422 pig–tail, A–4
Chapters, 1–3
Circle, 4–8
Circle Control, 5–32

Clock Display Control, 5–15
Clock Parts, 6–27 through 6–29
Closed, 3–2
Color, 3–11, 3–14
 ON/OFF, 3–14
Communication
 with Allen–Bradley PLCs, A–6
 with PLCDirect PLCs, A–2
 with WinPLCs, A–11
Connecting, A–2
Control, 3–10
 Definition, 5–2
 Toolbar, 3–22, 3–23
Controls, 4–10
 List of, 5–2
Copy, 4–12
Corner, 4–13
Custom Parts (see User Parts also), 3–5 to 3–11
Cut, 4–12

D

Debugging
 Reference Bar, 3–21
 Status Bar, 3–21
Decimal Place, 5–8
Deleting, 4–13
 Screens, 4–4
Dimensions and Installation, A–17
DirectTouch Panel
 Brightness Setting, A–17
 Cables, A–5, A–15
 Concept and Description, 1–4
 Connecting to a PLC, A–2
 Dimensions and Installation, A–17

Error Codes, B–22
Specifications, A–9

Display

Backlight, 6–38
Brightness, 6–37, A–17
Tool, 4–20

Dots, 1–5

Downloading, 2–10, 4–25

Downloading/Uploading, Errors, B–25

Drawing, Toolbar, 3–22, 3–23

Drawing Objects, 3–23

Copying (Duplicating), 4–12

E

Editing Tools, 4–12

Ellipse, 4–8

Error Codes, B–2

Compiling and Building, B–12
Panel Error Codes, B–22

Error Displays, 6–30 through 6–35

Exit ScreenCreator, 4–5

F

Fault Screen Parts, 6–30 through 6–35

Figure (Texture) Display, 5–17

Figures, 3–23

Duplicating (Copying), 4–12

Fill, 4–8

Fill Color, 3–23, 4–8

Fixed/Fixed 2, 5–8

Float, 5–8

Free Control, 5–34

Frozen, 3–2

G

Global Screen, 2–11, 2–16, 3–2, 6–30

Graphics, 3–22

Grid Lines, 1–5, 4–20

Grid Options, 4–20

H

Help

Index, 4–27
Menu, 4–27

I

Images, 3–22

Installing, 1–6

Interlock Controls, 6–39

ISO 7000, 3–15

K

K–Basic, 3–10 to 3–11

Key Pads, 2–14, 6–18

Cannot Arrange on screen, 2–15

Keyboards, 2–14, 6–19

Cannot Arrange on screen, 2–15

L

Layout, 1–3

LCD, Backlight, 6–38

Library

External files (Parts, Textures, and Bitmaps), 4–18
Maintenance (Delete, Rename, etc.), 4–19
Menu, 4–15

Library Parts, 3–4

Adding to Library from Screen, 4–18

Creating New, 3–5, 3–7

New, 4–15

Open, 4–16

Library Textures

New, 4–15

Open, 4–16

Light Control, 5–42

Lights, 6–14

Changing ON/OFF Colors, 3–14

Line, 4–6

Continuous, 4–7

Selecting the Corner, 4–13

Line Graphs, 5–27

List, Components, 3–12

Local Screens, 2–11, 2–16, 3–2

M

Menus, 4–2

Meter, Scale, 4–9

Meter Control, 5–39

Meters, Creating New, 3–7, 3–9

Micrologix, A–6

Mirror, 4–13, 4–14

Modbus, A–10, A–11

Move to Back/Front, 4–13

N

Normal, 3–2

Numbers

 formatting and displaying, 5–8

Numerical Displays, 4–11, 5–7

 Input Displays (Double Word), 6–4

 Input Displays (Word), 6–2

Numerical Input, 2–12, 6–18

O

ON/OFF Colors, 3–14

Operation Parameter, 3–10, 3–11

Organization of this Manual, 1–3

P

Parallelogram, 4–8

Part

 Background, 3–11

 Controlling Access from another part, 6–36

 Inside a Part, 3–10, 3–13

 Program, 3–11

 Toolbar, 3–22, 3–23

Parts

 Access, 3–2

 Class List, 2–5

 Closing an Edited Part, 4–4

 Control, 6–36

 Components of, 3–10, 3–13

 Creating New, 2–5, 4–11

 Editing, 3–12, 4–4

 Editing Contents of, 4–13

 Library, 3–3, 3–4

 Placing on Screen, 2–7

 Properties, 2–6

 Reference, 6–2

 Saving, 4–4

 Screen, 3–3

 Selecting, 2–5

 User, 3–3

 Viewing, 3–12

Password Protection (by Screen Select), 6–22, 6–23

Paste, 4–12

PID, 6–40

Pie Charts, 5–32

Pipe Control, 5–45

PLC

 Clocks and Calendars, 6–27 through 6–29

 Connecting to, A–2

PLC Addresses, Edit Address, 4–26

Plot Control, 5–21

Polygons, 3–23, 4–10

Printing

 Edited Part, 4–5

 Project Files, 4–24

 Screen, 4–5

Program, 3–11

 Screen, 4–14

Project

 Backup/Restore, 4–26

 Closing, 4–24

 Copying, 4–26

 Creating New, 2–3, 4–23

 Definition, 3–2

 Deleting, 4–27

 Downloading, 2–10

 Menu, 4–22

 Opening, 4–23

 Opening Multiple, 4–23

 Properties, 4–23

 Register, 3–15, 4–25

 Tutorial, 2–2

Pushbutton/Switch

 Adding the Part to a Screen, 2–5

 Control Reference, 5–3

 Creating a Control, 4–10

 Settings, 2–6

Pushbuttons, Labeled (with Text), 3–5

Q

Quick Start (Project Tutorial), 2-2
Quit ScreenCreator, 4-5

R

Rectangle, 4-7
Redo, 4-12
Reference Bar, 3-21
Refreshing the Screen, 4-13
Register, 3-15, 4-25
Registered Text, 3-16, 6-9
Registered Text Displays, 6-9
Rotate, 4-13
RS-232C, A-2
RS-422, A-2, A-4
RTU (Modbus), A-10
Ruler, 4-20

S

Scale, 4-9, 5-10, C-3
Create, Menu, 4-6
Edit, Menu, 4-11
Screen
 Colors, 4-5
 Menu, 4-2
 Objects, 3-2
 Parts, 3-2, 3-3
 Properties, 4-5
 Refresh, 4-13
 Register, 3-15, 4-25
ScreenCreator
 Error Codes and Warnings, B-2, B-12
 Installing, 1-6
 Quitting, 4-5
 Requirements, 1-6
 Starting, 2-3
 Version Information, 4-27
 Warnings, B-10
Screens
 Closing, 4-3
 Creating New, 2-4, 4-2
 Deleting, 4-4
 Global, 2-11, 2-16, 3-2

Local, 2-11, 2-16, 3-2
Opening, 4-2
Preview, 4-3
Register, 3-15, 4-25
Save As, 4-4
Saving, 4-3
Saving/Naming, 2-7
Screen Select Parts, 2-8, 6-22, 6-23
Sizing, 2-5
Zoom, 2-4

Select All, 4-13
Selectable, 3-2
Selector Switch, 5-7, 6-16, 6-17
Serial Communications, A-2
Serial Communications, Error Codes, B-24
Shaded, 3-2
SLC 500 PLCs, A-6
Slider Control, 5-36
Snap to Grid, 4-20
Special Parts, 6-36
Specifications, A-16
Spline, 4-7
Square, 4-7
Standard Toolbar, 3-22
Status Bar, 3-21
Switches (see also Pushbuttons), 6-15
Synchronize, 2-6, 5-6

T

Tank Indicator, 5-34
Technical Support, 1-2
Ten-Key Pads, 2-14, 6-18
 Cannot Arrange on screen, 2-15
Text
 Creating on Screen, 4-8
 Registered Text, 3-21, 6-9
Text Displays, 5-11
 ASCII, 6-6
 Input Displays, 6-7
 Registered Text, 6-9 (See also Registered Text)
Text Input, 6-19
Texture, 3-11, 4-9
 Expansion (Ungrouping), 4-14

Texture Display, 5–17
Textures, 3–15
 Screen and Library, 3–15
Think & Do Software, A–11
Tile, 3–14, 3–23
Toggle Switches, 6–15
Toolbars, 3–21, 3–22
 Part, 3–2
 Selecting, 4–20
Tools
 Menu, 4–20
 Options, 4–20
Touch cells, 5–3
Touch panels, 1–4
Touchscreens, 1–4
Trend Graphs, 5–27
 Data Storing, 6–25
Tutorial, 2–2 to 2–16
 Review, 2–16

U

Undo, 4–12
Ungrouping Texture components, 4–14
Uploading, 2–10, 4–25, 4–26
User Parts, 3–3, 3–6

V

Version Information, 4–27
Viewing
 Actual Screen, 4–21
 Parts and Controls, 4–20
Volume Part, 6–21

W

Warning Displays, 6–30 through 6–35
Windows, 1–6
 Menu, 4–22
WinPLC, A–11
Wiring, A–4

Z

Zoom, 2–4
 Options, 4–20
