

TABLE OF CONTENTS



Chapter 1: Getting Started	1-1
Introduction	1-2
Conventions Used	1-3
Product Overview	1-4
Agency Approvals	1-4
Part Number Key	1-5
Product Label Example:	1-5
Serial Number and Date Code format:	1-5
Quick Start Steps	1-6
Step 1 – Unpack and Inspect	1-6
Step 2 – Install Optional Hardware Accessories	1-7
Step 3 – Become Familiar with Available Communication Ports	1-8
Step 4 – Install C-more 6" Micro-Graphic Panel	1-9
Enclosure Clearances	1-10
Step 5 – Install the Programming Software and Develop a Project	1-11
Step 6 – Connect C-more 6" Micro-Graphic Panel to Computer	1-12
Step 7 – Providing Power to the C-more 6" Micro-Graphic Panel	1-13
Step 8 – Accessing the C-more 6" Micro-Graphic Panel Setup Screens	1-14
Step 9 – Choose C-more 6" Micro-Graphic Panel to PLC Protocol & Cables	1-15
Step 10 – Connect C-more 6" Micro-Graphic Panel to PLC	1-16

Chapter 2: Specifications	2-1
Available Models	2-2
Model Specifications	2-3
Panel Dimensions	2-5
Communications Ports	2-6
Chemical Compatibility	2-7
Chapter 3: Accessories	3-1
Accessories	3-2
C-more Micro-Graphic Programming Software	3-3
USB to RS-232 Programming Cable Assembly	3-6
20-Button Landscape (Horizontal) Keypad Bezel	3-8
21-Button Portrait (Vertical) Keypad Bezel	3-11
D-SUB 15-pin 90-degree Communication Port Adapter	3-14
D-SUB 15-pin to Terminal Block Adapter	3-14
Clear Screen Overlay	3-15
Chapter 4: Installation and Wiring	4-1
Safety Guidelines	4-2
Introduction	4-3
Panel Cutout Dimensions (all models)	4-4
Wiring Guidelines	4-5
Chapter 5: System Setup Screens	5-1
Introduction	5-2
Accessing the System Setup Screens	5-3
System Setup Screens Flowchart	5-4
Setup Menu	5-5
Information Menu	5-6

Memory	5-6
Protocol	5-6
Extensions	5-6
Versions	5-6
Setting Menu	5-7
LCD Contrast	5-7
Backlight, Model EA1-S6ML	5-8
Backlight, Model EA1-S6MLW	5-9
Beep	5-10
Calibration	5-11
Clear User Memory	5-12
Reset to Factory Default	5-12
Hourglass	5-13
Rotation	5-14
Test Menu	5-15
Serial Port1 - Loop Back Test	5-15
Serial Port2 - Loop Back Test	5-16
PLC Enquiry Test	5-17
Buzzer Test	5-17
Touch Panel Test	5-18
Exit	5-18
Chapter 6: PLC Communications	6-1
Introduction	6-2
C-more 6" Micro-Graphic Communication Ports	6-4
DirectLOGIC PLCs Password Protection	6-6
PLC Compatibility and Connection Charts	6-6
AutomationDirect Controllers	6-6
RS-422A/RS-485A Communications	6-6
Allen-Bradley:	6-7
GE, Mitsubishi, Omron, Modicon and Siemens:	6-7
How to use the PLC Compatibility and Connection Charts	6-8
Example:	6-8
Cables from AutomationDirect	6-16

Cables from AutomationDirect – Wiring Diagrams	6-18
User Constructed Cables – Wiring Diagrams	6-26
RS-422A/RS-485A Multi-Drop Wiring Diagram Examples	6-36
Chapter 7: Maintenance	7-1
Project Backup	7-2
Check Operating Environment	7-2
Check Operating Voltage	7-2
Check Transmit and Receive Indicators	7-3
Check Physical Conditions	7-3
Run Tests under the System Setup Screens	7-4
Check Settings under the System Setup Screens	7-5
Cleaning the Display Screen	7-5
Check Project Functionality	7-6
Checks from the <i>C-more</i> Micro-Graphic Programming Software	7-6
Chapter 8: Troubleshooting	8-1
<i>C-more</i> 6" Micro-Graphic Panel does not Power up	8-2
Display is Blank	8-2
Display is Dim	8-3
No User Program	8-3
Lost Firmware – Red 'Update Mode' Screen Displayed	8-4
Updating Firmware	8-4
No Communications between Panel and PC (Personal Computer)	8-5
No Communications between Panel and PLC	8-7
Panel & PLC Error Codes	8-8
<i>C-more</i> Micro-Graphic Panel Runtime Errors	8-9
Electrical Noise Problems	8-10

Chapter 9: Replacement Parts	9-1
Replacement Parts Overview	9-2
Replacement Parts	9-2
Customizing the Function Keys Insert Label	9-3
Appendix A: PLC Protocol Error Codes	A-1
Introduction	A-2
C-more Micro-Graphic Panel Error Code Table	A-3
Modbus Protocols Error Code P499 Explanation	A-4
AutomationDirect CLICK	A-4
AutomationDirect DirectLOGIC - Modbus (Koyo)	A-4
Modicon Modbus RTU	A-4
Entity Modbus RTU	A-4
Productivity3000 Error Code P499 Explanation	A-5
Do-more Error Code P499 Explanation	A-6
DirectLOGIC Error Code P499 Explanation	A-7
DirectLOGIC – K-Sequence PLC Error Code Table	A-7
DirectLOGIC – DirectNET PLC Error Codes	A-7
Allen-Bradley Error Code P499 Explanation	A-8
Allen-Bradley DF1 Protocol – PLC Error Code Tables	A-9
Allen-Bradley DH485 Protocol – PLC Error Code Tables	A-11
GE Error Code P499 Explanation	A-13
GE SNPX Protocol – PLC Error Code Tables	A-14
Mitsubishi FX Protocol – PLC Error Codes	A-23
Mitsubishi Q / QnA Series – PLC Error Codes	A-23
Omron Error Code P499 Explanation	A-25
Omron Host Link Protocol – PLC Error Code Table	A-26
Omron FINS Protocol – PLC Error Code Table	A-27
Siemens Error Code P499 Explanation	A-30
Siemens PPI Protocol – PLC Error Code Table	A-31

Appendix B: C-more Micro-Graphic Panel Runtime ErrorsB-1
IntroductionB-2
Panel ErrorsB-2
Boot Loader ErrorsB-3

Index

