

# TABLE OF CONTENTS

---



## Chapter 1: Getting Started

Introduction .....	1-2
Conventions Used .....	1-3
Product Overview .....	1-4
Agency Approvals .....	1-5
Part Number Key .....	1-5
Product Label Examples: .....	1-6
Serial Number and Date Code formats: .....	1-6
Quick Start Steps .....	1-7
Step 1 – Unpack and Inspect.....	1-7
Step 2 – Install Optional Hardware Accessories.....	1-8
Step 3 – Become Familiar with Available Communication Ports.....	1-9
Step 4 – Install <b>C-more</b> Micro-Graphic Panel.....	1-10
Step 5 – Install the Programming Software and Develop a Project .....	1-11
Step 6 – Connect <b>C-more</b> Micro-Graphic Panel to Computer.....	1-12
Step 7 – Provide Power to the <b>C-more</b> Micro-Graphic Panel .....	1-13
Step 8 – Accessing the <b>C-more</b> Micro-Graphic Panel Setup Screens .....	1-14
Step 9 – Choose <b>C-more</b> Micro-Graphic Panel to PLC Protocol & Cables.....	1-15
Step 10 – Connect <b>C-more</b> Micro-Graphic Panel to PLC .....	1-16

## Chapter 2: Specifications

Available Models.....	2-2
Model Specifications .....	2-4
Panel Dimensions (all models).....	2-6
Communications Ports .....	2-7
Chemical Compatibility .....	2-8

### Chapter 3: Accessories

Accessories .....	3-2
<b>C-more</b> Micro-Graphic Programming Software.....	3-3
USB to RS-232 Programming Cable Assembly .....	3-7
8-Button Keypad Bezel .....	3-9
20-button Keypad Bezel .....	3-12
DC Power Adapter.....	3-15
Serial Port with DC Power Adapter .....	3-19
D-SUB 15-pin to Terminal Block Adapter .....	3-22
Clear Screen Overlay .....	3-23

### Chapter 4: Installation and Wiring

Safety Guidelines .....	4-2
Introduction.....	4-3
Panel Cutout Dimensions (all models) .....	4-4
Wiring Guidelines .....	4-5

### Chapter 5: System Setup Screens

Introduction.....	5-2
Accessing the System Setup Screens .....	5-3
System Setup Screens Flowchart .....	5-4
Setup Menu .....	5-5
Information Menu .....	5-6
Memory .....	5-6
Protocol .....	5-6
Extensions .....	5-6
Versions.....	5-6
Setting Menu.....	5-7
Setting – LCD Contrast.....	5-7
Setting – Backlight, Models EA1-S3ML & EA1-S3ML-N .....	5-8
Setting – Backlight, Models EA1-S3MLW & EA1-S3MLW-N.....	5-9

Setting – Beep..... 5-10

Setting – Calibration..... 5-11

Setting – Clear User Memory ..... 5-12

Setting – Reset to Factory Default..... 5-12

Setting – Hourglass ..... 5-13

**Test Menu ..... 5-14**

    Test Menu – Serial Port1 - Loop Back Test..... 5-14

    Test Menu – Serial Port2 - Loop Back Test..... 5-15

    Test Menu – PLC Enquiry Test..... 5-16

    Test Menu – Buzzer Test ..... 5-16

    Test Menu – Touch Panel Test..... 5-17

**Exit ..... 5-17**

## Chapter 6: PLC Communications

**Introduction..... 6-2**

    Available PLC Protocols ..... 6-2

**C-more Micro-Graphic Built-in Port 1 ..... 6-3**

**C-more Micro-Graphic Optional EA-MG-SP1 Port 2..... 6-4**

**DirectLOGIC PLCs Password Protection..... 6-5**

**PLC Compatibility and Connection Charts..... 6-5**

    AutomationDirect Controllers..... 6-5

    RS-422A/RS-485A Communications ..... 6-5

    Allen-Bradley: ..... 6-6

    GE, Mitsubishi, Omron, Modicon and Siemens: ..... 6-6

    How to use the PLC Compatibility and Connection Charts ..... 6-7

    Example: ....6-7

**Available Purchased Cables ..... 6-22**

**Available Purchased Cables – Wiring Diagrams ..... 6-24**

**User Constructed Cables – Wiring Diagrams..... 6-34**

**RS-422A/RS-485A Multi-Drop Wiring Diagram Examples..... 6-44**

### Chapter 7: Maintenance

Project Backup .....	7-2
Check Operating Environment .....	7-2
Check Operating Voltage .....	7-2
Check Transmit and Receive Indicators.....	7-3
Check Physical Conditions.....	7-3
Run Tests under the System Setup Screens.....	7-4
Check Settings under the System Setup Screens .....	7-5
Cleaning the Display Screen.....	7-5
Check Project Functionality .....	7-6
Checks from the <b>C-more</b> Micro-Graphic Programming Software.....	7-6
<b>Notes:</b> .....	7-7

### Chapter 8: Troubleshooting

<b>C-more</b> Micro-Graphic Panel does not Power up .....	8-2
Display is Blank .....	8-2
Display is Dim .....	8-3
No User Program .....	8-3
Lost Firmware – Red ‘Update Mode’ Screen Displayed .....	8-4
No Communications between Panel and PC (Personal Computer).....	8-5
No Communications between Panel and PLC .....	8-7
Panel & PLC Error Codes.....	8-8
<b>C-more</b> Micro-Graphic Panel Runtime Errors.....	8-9
Panel Errors .....	8-9
Electrical Noise Problems.....	8-10

### Chapter 9: Replacement Parts

<b>Replacement Parts Overview</b> .....	9-2
<b>Replacement Parts</b> .....	9-2
Panel Mounting Clips – EA-MG-S3ML-BRK .....	9-2
Panel Gasket – EA-MG-S3ML-GSK .....	9-2
8-Button Keypad Bezel Mounting Clips – EA-MG-BZ1-BRK.....	9-2
8-Button Keypad Bezel Gasket – EA-MG-BZ1-GSK .....	9-2
20-Button Keypad Bezel Mounting Clips – EA-MG-BZ2-BRK.....	9-3
20-Button Keypad Bezel Gasket – EA-MG-BZ2-GSK .....	9-3

DC Power Connector – EA-MG-DC-CON ..... 9-3  
 Function Keys Label Inserts – EA-MG-S3ML-FKL ..... 9-3  
**Customizing the Function Keys Insert Label ..... 9-4**

**Appendix A: Panel & PLC Error Code Tables**

**Introduction ..... A-2**  
**C-more Micro-Graphic Panel Error Code Table ..... A-3**  
**Modbus Protocols Error Code P499 Explanation ..... A-4**  
 AutomationDirect CLICK ..... A-4  
 AutomationDirect DirectLOGIC - Modbus (Koyo)..... A-4  
 Modicon Modbus RTU ..... A-4  
 Entivity Modbus RTU..... A-4  
**Productivity3000 Error Code P499 Explanation ..... A-5**  
**Do-more Error Code P499 Explanation ..... A-6**  
**DirectLOGIC Error Code P499 Explanation ..... A-7**  
**DirectLOGIC – K-Sequence PLC Error Code Table..... A-7**  
**DirectLOGIC – DirectNET PLC Error Codes..... A-7**  
**Allen-Bradley Error Code P499 Explanation ..... A-8**  
**Allen-Bradley DF1 Protocol – PLC Error Code Tables..... A-9**  
**Allen-Bradley DH485 Protocol – PLC Error Code Tables ..... A-11**  
**GE Error Code P499 Explanation ..... A-13**  
**GE SNPX Protocol – PLC Error Code Tables ..... A-14**  
**Mitsubishi FX Protocol – PLC Error Codes ..... A-23**  
**Mitsubishi Q / QnA Series – PLC Error Codes ..... A-23**  
**Omron Error Code P499 Explanation ..... A-25**  
**Omron Host Link Protocol – PLC Error Code Table ..... A-26**  
**Omron FINS Protocol – PLC Error Code Table ..... A-27**  
**Siemens Error Code P499 Explanation ..... A-30**  
**Siemens PPI Protocol – PLC Error Code Table..... A-31**

## Appendix B: Micro-Graphic Panel Runtime Errors

Introduction.....	B-2
Panel Errors.....	B-2

## Index