

TABLE OF CONTENTS



Chapter 1: Getting Started

Introduction.....	1-2
Conventions Used	1-3
Product Overview	1-4
Agency Approvals.....	1-5
Part Number Key.....	1-5
Product Label Examples:.....	1-6
Serial Number and Date Code formats:.....	1-6
Quick Start Steps	1-7
Step 1 – Unpack and Inspect.....	1-7
Step 2 – Install Optional Hardware Accessories.....	1-8
Step 3 – Become Familiar with Available Communication Ports.....	1-9
Step 4 – Install C-more Micro-Graphic Panel	1-10
Step 5 – Install the Programming Software and Develop a Project.....	1-11
Step 6 – Connect C-more Micro-Graphic Panel to Computer.....	1-12
Step 7 – Provide Power to the C-more Micro-Graphic Panel.....	1-13
Step 8 – Accessing the C-more Micro-Graphic Panel Setup Screens	1-14
Step 9 – Choose C-more Micro-Graphic Panel to PLC Protocol & Cables.....	1-15
Step 10 – Connect C-more Micro-Graphic Panel to PLC	1-16

Chapter 2: Specifications

Available Models	2-2
Model Specifications	2-4
Panel Dimensions (all models)	2-6
Communications Ports.....	2-7
Chemical Compatibility.....	2-8

Chapter 3: Accessories

Accessories	3-2
C-more Micro-Graphic Programming Software	3-3
USB to RS-232 Programming Cable Assembly	3-7
8-Button Keypad Bezel	3-9
20-button Keypad Bezel	3-12
DC Power Adapter	3-15
Serial Port with DC Power Adapter	3-19
D-SUB 15-pin to Terminal Block Adapter	3-22
Clear Screen Overlay	3-23

Chapter 4: Installation and Wiring

Safety Guidelines	4-2
Introduction.....	4-3
Panel Cutout Dimensions (all models)	4-4
Wiring Guidelines	4-5

Chapter 5: System Setup Screens

Introduction.....	5-2
Accessing the System Setup Screens	5-3
System Setup Screens Flowchart	5-4
Setup Menu	5-5
Information Menu	5-6
Memory.....	5-6
Protocol.....	5-6
Extensions	5-6
Versions	5-6
Setting Menu. 5-7	
Setting – LCD Contrast.....	5-7
Setting – Backlight, Models EA1-S3ML & EA1-S3ML-N	5-8
Setting – Backlight, Models EA1-S3MLW & EA1-S3MLW-N.....	5-9



Setting – Beep 5-10

Setting – Calibration 5-11

Setting – Clear User Memory 5-12

Setting – Reset to Factory Default 5-12

Setting – Hourglass 5-13

Test Menu 5-14

 Test Menu – Serial Port1 - Loop Back Test 5-14

 Test Menu – Serial Port2 - Loop Back Test 5-15

 Test Menu – PLC Enquiry Test 5-16

 Test Menu – Buzzer Test 5-16

 Test Menu – Touch Panel Test 5-17

Exit 5-17

Chapter 6: PLC Communications

Introduction 6-2

 Available PLC Protocols 6-2

C-more Micro-Graphic Built-in Port 1 6-3

C-more Micro-Graphic Optional EA-MG-SP1 Port 2 6-4

DirectLOGIC PLCs Password Protection 6-5

PLC Compatibility and Connection Charts 6-5

 AutomationDirect Controllers 6-5

 RS-422A/RS-485A Communications 6-5

 Allen-Bradley: 6-6

 GE, Mitsubishi, Omron, Modicon and Siemens: 6-6

 How to use the PLC Compatibility and Connection Charts 6-7

 Example: 6-7

Available Purchased Cables 6-22

Available Purchased Cables – Wiring Diagrams 6-24

User Constructed Cables – Wiring Diagrams 6-34

RS-422A/RS-485A Multi-Drop Wiring Diagram Examples 6-44

Chapter 7: Maintenance

Project Backup	7-2
Check Operating Environment.....	7-2
Check Operating Voltage.....	7-2
Check Transmit and Receive Indicators	7-3
Check Physical Conditions	7-3
Run Tests under the System Setup Screens.....	7-4
Check Settings under the System Setup Screens	7-5
Cleaning the Display Screen.....	7-5
Check Project Functionality	7-6
Checks from the C-more Micro-Graphic Programming Software	7-6
Notes:	7-7

Chapter 8: Troubleshooting

C-more Micro-Graphic Panel does not Power up.....	8-2
Display is Blank	8-2
Display is Dim.....	8-3
No User Program.....	8-3
Lost Firmware – Red ‘Update Mode’ Screen Displayed	8-4
No Communications between Panel and PC (Personal Computer).....	8-5
No Communications between Panel and PLC.....	8-7
Panel & PLC Error Codes.....	8-8
C-more Micro-Graphic Panel Runtime Errors.....	8-9
Panel Errors.....	8-9
Electrical Noise Problems.....	8-10

Chapter 9: Replacement Parts

Replacement Parts Overview	9-2
Replacement Parts	9-2
Panel Mounting Clips – EA-MG-S3ML-BRK.....	9-2
Panel Gasket – EA-MG-S3ML-GSK.....	9-2
8-Button Keypad Bezel Mounting Clips – EA-MG-BZ1-BRK.....	9-2
8-Button Keypad Bezel Gasket – EA-MG-BZ1-GSK	9-2
20-Button Keypad Bezel Mounting Clips – EA-MG-BZ2-BRK.....	9-3
20-Button Keypad Bezel Gasket – EA-MG-BZ2-GSK	9-3

DC Power Connector – EA-MG-DC-CON 9-3
 Function Keys Label Inserts – EA-MG-S3ML-FKL 9-3
Customizing the Function Keys Insert Label 9-4

Appendix A: Panel & PLC Error Code Tables

Introduction..... A-2
C-more Micro-Graphic Panel Error Code Table..... A-3
Modbus Protocols Error Code P499 Explanation A-4
 AutomationDirect CLICK..... A-4
 AutomationDirect DirectLOGIC - Modbus (Koyo) A-4
 Modicon Modbus RTU..... A-4
 Entivity Modbus RTU A-4
Productivity3000 Error Code P499 Explanation A-5
Do-more Error Code P499 Explanation A-6
DirectLOGIC Error Code P499 Explanation A-7
DirectLOGIC – K-Sequence PLC Error Code Table A-7
DirectLOGIC – DirectNET PLC Error Codes..... A-7
Allen-Bradley Error Code P499 Explanation A-8
Allen-Bradley DF1 Protocol – PLC Error Code Tables..... A-9
Allen-Bradley DH485 Protocol – PLC Error Code Tables A-11
GE Error Code P499 Explanation..... A-13
GE SNPX Protocol – PLC Error Code Tables A-14
Mitsubishi FX Protocol – PLC Error Codes A-23
Mitsubishi Q / QnA Series – PLC Error Codes A-23
Omron Error Code P499 Explanation A-25
Omron Host Link Protocol – PLC Error Code Table..... A-26
Omron FINS Protocol – PLC Error Code Table A-27
Siemens Error Code P499 Explanation..... A-30
Siemens PPI Protocol – PLC Error Code Table..... A-31

Appendix B: Micro-Graphic Panel Runtime Errors

Introduction..... B-2

Panel Errors B-2

Index