



TABLE OF CONTENTS

Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Supplemental Manuals.....	1-2
Technical Support.....	1-2
Conventions Used	1-3
Key Topics for Each Chapter.....	1-3
Agency Approvals	1-4
Quick Start Steps	1-5
Step 1 – Unpack and Inspect.....	1-5
Step 2 – Become Familiar with Available Communication Ports.....	1-6
Step 3 – Install C-more Micro Panel	1-8
Enclosure Clearances.....	1-9
Step 4 – Install the Programming Software and Develop a Project	1-11
Step 5 – Connect C-more Micro to Computer.....	1-12
Step 6 – Provide Power to the C-more Micro Panel	1-14
Step 7 – Accessing the C-more Micro Panel Setup Screens.....	1-16
Step 8 – Choose C-more Micro Panel to PLC Protocol & Cables.....	1-17
Step 9 – Connect C-more Micro Panel to PLC.....	1-19

Chapter 2: Specifications

Available Models	2-2
EA3-S3ML-RN and EA3-S3ML-R Specifications	2-3
EA3-S3ML and EA3-T4CL Specifications	2-6
EA3-T6CL, EA3-T8CL and EA3-T10CL Specifications	2-9
EA3-S3ML-RN, EA3-S3ML-R, EA3-S3ML Panel Dimensions	2-12
EA3-T4CL Panel Dimensions	2-13

Table of Contents

EA3-T6CL Panel Dimensions	2-14
EA3-T8CL Panel Dimensions	2-15
EA3-T10CL Panel Dimensions	2-16
Communications Ports.....	2-17
 Chapter 3: Accessories	
Accessories	3-2
<i>C-more</i> Micro Programming Software.....	3-3
EA-ECOM Ethernet Communication Module.....	3-6
D-SUB 15-pin 90-degree Communication Port Adapter	3-7
D-SUB 15-pin to Terminal Block Adapters.....	3-8
Clear Screen Overlay.....	3-9
 Chapter 4: Installation & Wiring	
Safety Guidelines	4-2
Plan for Safety.....	4-2
Introduction	4-3
Panel Cutout Dimensions	4-4
Enclosure Clearances.....	4-5
Enclosure Clearances.....	4-6
Wiring Guidelines	4-7
Providing Power to the <i>C-more</i> Micro Panel	4-7
 Chapter 5: System Setup Screens	
Introduction	5-2
Information	5-2
Setting.....	5-2
Test Menu.....	5-2
Accessing the System Setup Screens	5-3
System Setup Screens Flowchart	5-4
Setup Menu	5-5
Information Menu	5-6

Setting Menu..... 5-7

- Setting – Brightness..... 5-7
- Setting – Touch/Key Beep..... 5-8
- Setting – Calibration..... 5-9
- Setting – Clear User Memory..... 5-10
- Setting – Reset to Factory Default..... 5-10
- Setting – Hourglass..... 5-11
- Setting – Rotation..... 5-12
- Setting – Emulation..... 5-12
- Setting – Ethernet..... 5-13

Test Menu 5-14

- Test Menu - Serial Port1 - Loop Back Test..... 5-15
- Test Menu - Serial Port2 - Loop Back Test..... 5-16
- Test Menu – PLC Enquiry Test..... 5-17
- Test Menu – Buzzer Test..... 5-17
- Test Menu - Touch Panel Test..... 5-18
- Test Menu - Display Test..... 5-18

Exit 5-19

Chapter 6: PLC Communications

Introduction..... 6-2

- Available PLC Protocols..... 6-3
- Maximum Connected PLC Nodes..... 6-4

C-more Micro Communication Ports..... 6-5

Cables from AutomationDirect – Wiring Diagrams 6-9

User Constructed Cables – Wiring Diagrams 6-17

RS-422A Multi-Drop Wiring Diagram Example 6-28

RS-485A Multi-Drop Wiring Diagram Example 6-30

Chapter 7: Maintenance

Maintenance 7-2

- Project Backup..... 7-2
- Check Operating Environment..... 7-2
- Check Operating Voltage..... 7-2

Table of Contents

Check Transmit and Receive Indicators	7-3
Check Physical Conditions	7-3
Run Tests under the System Setup Screens.....	7-4
Check Settings under the System Setup Screens.....	7-5
Cleaning the Display Screen	7-5
Check Project Functionality	7-6
Checks from the C-more Micro Programming Software	7-6
Notes:	7-7

Chapter 8: Troubleshooting

Troubleshooting	8-2
C-more Micro Panel does not Power up.....	8-2
Display is Blank.....	8-2
Display is Dim	8-3
No User Program.....	8-3
Lost Firmware – ‘Update Mode’ Screen Displayed.....	8-4
Updating Firmware.....	8-4
No Communications between Panel and PC (Personal Computer).....	8-5
No Communications between Panel and PLC	8-7
Panel & PLC Error Codes.....	8-8
C-more Micro Panel Runtime Errors.....	8-9
Panel Errors.....	8-9
Reset to Factory Default.....	8-10
Electrical Noise Problems.....	8-10

Chapter 9: Replacement Parts

Replacement Parts	9-2
Customizing the Function Keys Insert Label	9-4

Appendix A: Panel & PLC Error Code Tables

Introduction	A-2
C-more Micro Panel Error Code Table	A-3
Modbus Protocols Error Code P499 Explanation	A-4
AutomationDirect CLICK	A-4

AutomationDirect DirectLOGIC - Modbus (Koyo).....	A-4
Modicon Modbus RTU	A-4
Entivity Modbus RTU	A-4
Productivity Error Code P499 Explanation.....	A-5
Do-more / BRX Error Code P499 Explanation	A-6
DirectLOGIC Error Code P499 Explanation	A-7
DirectLOGIC – K-Sequence PLC Error Code Table	A-7
DirectLOGIC – DirectNET PLC Error Codes	A-7
Allen-Bradley Error Code P499 Explanation	A-8
Allen-Bradley DF1 Protocol – PLC Error Code Tables.....	A-9
Allen-Bradley DH485 Protocol – PLC Error Code Tables	A-11
GE Error Code P499 Explanation.....	A-13
GE SNPX Protocol – PLC Error Code Tables	A-14
Mitsubishi FX Protocol – PLC Error Codes	A-23
Mitsubishi Q / QnA Series – PLC Error Codes	A-23
Omron Error Code P499 Explanation	A-25
Omron Host Link Protocol – PLC Error Code Table.....	A-26
Omron FINS Protocol – PLC Error Code Table	A-27
Siemens Error Code P499 Explanation.....	A-30
Siemens PPI Protocol – PLC Error Code Table.....	A-31

Appendix B: C-more Micro Panel Runtime Errors

Introduction.....	B-2
Panel Errors	B-2

