

# TABLE OF CONTENTS

---



<b>Chapter 1: Getting Started</b> .....	<b>1-1</b>
Introduction .....	1-2
Conventions Used .....	1-3
Mounting Clips – New Style .....	1-3
Product Overview .....	1-4
Part Number Key – Touch Panels .....	1-5
EZTouch Conversion and Mounting .....	1-6
EZTouch Touch Panel Cross Reference to C-more .....	1-7
<b>Quick Start Steps</b> .....	<b>1-9</b>
Step 1 – Unpack and Inspect .....	1-9
Step 2 – Assemble Temporary Support Stand .....	1-10
Step 3 – Install Optional Hardware Accessories .....	1-11
Step 4 – Become Familiar with Available Communication Ports .....	1-12
Step 5 – Install the Programming Software and Develop a Project .....	1-13
Step 6 – Connect Touch Panel to Computer .....	1-14
Step 7 – Provide Power to the Touch Panel .....	1-15
Step 8 – Access the Touch Panel Setup Screens .....	1-16
Step 9 – Choose Touch Panel to PLC Protocol & Cables .....	1-17
Step 10 – Connect Touch Panel to PLC .....	1-20
<b>Chapter 2: Specifications</b> .....	<b>2-1</b>
<b>Available Models</b> .....	<b>2-2</b>
<b>Model Specifications</b> .....	<b>2-3</b>
6” Base Feature Models .....	2-4
6” Full Feature Models .....	2-5
6” Obsolete Models .....	2-6

## Table of Contents

---

8" and 10" Full Feature Models . . . . .	2-8
12" and 15" Full Feature Models . . . . .	2-9
<b>EA7-S6M-R, S6C-R, T6CL-R, S6M, S6C, T6C, T6CL (Dimensions and Ports &amp; Memory Exp.) . . . . .</b>	<b>2-10</b>
<b>EA7-T8C (Dimensions and Ports &amp; Memory Exp.) . . . . .</b>	<b>2-12</b>
<b>EA7-T10C (Dimensions and Ports &amp; Memory Exp.) . . . . .</b>	<b>2-14</b>
<b>EA7-T12C (Dimensions and Ports &amp; Memory Exp.) . . . . .</b>	<b>2-16</b>
<b>EA7-T15C (Dimensions and Ports &amp; Memory Exp.) . . . . .</b>	<b>2-18</b>
<b>Mounting Clearances . . . . .</b>	<b>2-20</b>
<b>Communications Ports . . . . .</b>	<b>2-21</b>
<b>Audio WAV File Specifications . . . . .</b>	<b>2-23</b>
<b>Memory Organization . . . . .</b>	<b>2-24</b>
<b>Handling External Memory Devices . . . . .</b>	<b>2-25</b>
<b>Power Loss Detection and Power Retention Period . . . . .</b>	<b>2-26</b>
<b>Data Logging Function and Logging Media . . . . .</b>	<b>2-26</b>
<b>Data Logging - Memory Device Full . . . . .</b>	<b>2-26</b>
<b>Chemical Compatibility . . . . .</b>	<b>2-27</b>
<b>Chapter 3: Accessories . . . . .</b>	<b>3-1</b>
Accessories . . . . .	3-2
Accessories Overview . . . . .	3-3
Accessories at a Glance . . . . .	3-4
AC/DC Power Adapter – EA-AC . . . . .	3-5
Expansion Assembly – EA-EXP-OPT . . . . .	3-9
CF Card Interface Module – EA-CF-IF . . . . .	3-12
CompactFlash Memory – EA-CF-CARD . . . . .	3-14
6" Adapter Plate – EA-6-ADPTR . . . . .	3-17
D-SUB 15-pin 90 degree Comm Port Adapter – EA-ADPTR-4 . . . . .	3-19

D-SUB 15-pin to Terminal Block Adapter – EA-COMCON-3	3–20
Non-glare Screen Covers – EA-xx-COV2, xx = 6, 8, 10, 12 or 15	3–22
USB Pen Drive – SDCZ4-2048-A10	3–24
<b>Chapter 4: Installation and Wiring</b>	<b>4–1</b>
Safety Guidelines	4–2
Introduction	4–3
EA7-S6M-R, S6C-R, T6CL-R, S6M, S6C, T6C, T6CL – Cutout Dimensions	4–4
EA7-T8C – Cutout Dimensions	4–5
EA7-T10C – Cutout Dimensions	4–6
EA7-T12C – Cutout Dimensions	4–7
EA7-T15C – Cutout Dimensions	4–8
6" Adapter Plate – EA-6-ADPTR	4–9
Mounting Clearances	4–11
Wiring Guidelines	4–12
Agency Approvals	4–12
Marine Use	4–12
Providing Power to the Touch Panel	4–13
DC Wiring Diagram	4–13
AC Wiring Diagram (EA-AC)	4–14
<b>Chapter 5: System Setup Screens</b>	<b>5–1</b>
Introduction	5–2
Chapter Organization	5–3
Accessing the System Setup Screens (no project loaded)	5–4
Accessing the System Setup Screens (with project loaded)	5–5
System Setup Screens – Enable Password in Software	5–7
System Setup Screens Flowchart	5–13
Main Menu	5–14
Information Menu	5–15
Setting Menu	5–19

Test Menu .....	5-25
Memory Menu .....	5-35
<b>Chapter 6: PLC Communications .....</b>	<b>6-1</b>
Introduction .....	6-2
DirectLOGIC PLCs Password Protection .....	6-2
PLC Communication Cables & Wiring Diagrams .....	6-5
PLC Communication Cables & Wiring Diagrams .....	6-6
AutomationDirect PLCs RS-232C Serial: .....	6-7
Direct LOGIC PLCs RS-422A/RS-485A: .....	6-10
Direct LOGIC Universal Isolated Network Adapter, p/n FA-ISOCAN: .....	6-14
Direct LOGIC Universal Converter, p/n F2-UNICON: .....	6-15
RS-422A/RS-485A Multi-Drop Wiring Diagram Examples .....	6-16
Allen-Bradley: .....	6-20
GE: .....	6-24
GE VersaMax Micro: .....	6-24
Mitsubishi: .....	6-24
Omron: .....	6-26
Modicon ModBus RS-232: .....	6-27
Modicon Micro Series: .....	6-27
Modicon ModBus with RJ45: .....	6-27
Siemens: .....	6-28
<b>Chapter 7: Maintenance .....</b>	<b>7-1</b>
Project Backup .....	7-2
Check Operating Environment .....	7-2
Check Operating Voltage .....	7-2
Check Status Indicators .....	7-2
Check Physical Conditions .....	7-3
Run Tests under System Setup Screens .....	7-3
Check Memory Usage via System Setup Screens .....	7-4
Check/Adjust Display Brightness or Contrast .....	7-4

Check Error Log via System Setup Screens	7-4
Adjust Touch Panel via System Setup Screens	7-4
Replace Battery Periodically	7-5
Cleaning the Display Screen	7-5
Check Project Functionality	7-6
Checks from <i>C-more</i> Programming Software	7-6
<b>Chapter 8: Troubleshooting</b>	<b>8-1</b>
Common Problems	8-2
Toubleshooting Flow Chart	8-3
Touch Panel does not Power up	8-4
Display is Blank	8-5
Display is Dim	8-6
No User Program	8-7
No Communications between Panel and PC (Personal Computer)	8-8
No Communications between Panel and PLC	8-13
IP Address in System Setup Screens displays 0.0.0.0	8-16
Difficulty Connecting to the Panel over the Internet (Web server and Remote Access features)	8-17
PLC Protocol Error Codes	8-18
Touch Panel Runtime Errors	8-19
Panel Constantly Displays “Initializing” when Powering up	8-20
Data not Logging Problems	8-20
Loss of Date/Time and Retentive Data	8-21
Electrical Noise Problems	8-21
<b>Chapter 9: Replacement Parts</b>	<b>9-1</b>
Replacement Parts Overview	9-2
Replacement Parts at a Glance	9-2
Battery Replacement & Installation Instructions	9-3

6" Panel Mounting Clip Replacements & Installation	9-5
8-15" Panel Mounting Clip Replacements & Installation	9-6
DC Panel Power Connector Replacement	9-7
AC Power Adapter Connector Replacement	9-7
8-15" Panel Backlight Bulb Replacements & Installation	9-8
6-15" Panel Gasket Replacement & Installation	9-11
8-15" Panel Bezel Replacement & Installation	9-12
6" Adapter Plate Gasket Replacement & Installation	9-14
<b>Appendix A: PLC Protocol Error Codes</b>	<b>A-1</b>
Introduction	A-2
C-more Touch Panel Error Code Table	A-3
DirectLOGIC – Panel Error Code PLC-499 Explanation	A-5
DirectLOGIC K-Sequence Protocol – PLC Error Code Table	A-5
DirectLOGIC DirectNET Protocol – PLC Error Codes	A-5
Modbus Protocols Error Code P499 Explanation	A-6
AutomationDirect CLICK	A-6
AutomationDirect DirectLOGIC - Modbus (Koyo)	A-6
Modicon Modbus RTU	A-6
Entivity Modbus RTU	A-6
DirectLOGIC ECOM Protocol – PLC Error Codes	A-6
Allen-Bradley – Panel Error Code PLC-499 Explanation	A-7
Allen-Bradley DF1 & DH485 Protocols – PLC Error Code Tables	A-8
Allen-Bradley EtherNet/IP Protocol –Panel Error Code PLC-496, 497 and 498 Explanation	A-10
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code TablesControlLogix, CompactLogix, & FlexLogix	A-11
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code TablesMicroLogix 1100, 1400 & SLC 5/05, both via native Etherne-9t port;MicroLogix 1000, 1100, 1200, 1400, 1500, SLC 5/03/04/05, all via ENI Adapter	A-15
Generic EtherNet IP Protocol – PLC Error Codes	A-20

GE 90-30 – Panel Error Code PLC-499 Explanation .....	A-21
GE 90-30 SNPX Protocol – PLC Error Code Tables .....	A-22
Mitsubishi FX Protocol – PLC Error Codes .....	A-31
Omron – Panel Error Code PLC-499 Explanation .....	A-31
Omron Host Link Protocol – PLC Error Code Table .....	A-32
Omron FINS Protocol – PLC Error Code Table .....	A-33
Omron – Panel Error Code P495 Explanation .....	A-36
Omron CS/CJ FINS Ethernet Protocol – PLC Error Code Table .....	A-37
Siemens – Panel Error Code P499 Explanation .....	A-38
Siemens PPI Protocol – PLC Error Code Table .....	A-39
Siemens ISO over TCP Protocol – PLC Error Code Table .....	A-40
<b>Appendix B: Touch Panel Runtime Errors .....</b>	<b>B-1</b>
Introduction .....	B-2
Runtime Errors .....	B-3
<b>Appendix C: Mounting Clips Prior April 2006 .....</b>	<b>C-1</b>
Introduction .....	C-2
EA7-S6M-R, S6C-R, S6M, S6C & T6C .....	C-3
EA7-T8C .....	C-5
EA7-T10C .....	C-7
EA7-T12C .....	C-9
EA7-T15C .....	C-11
<b>Index</b>	