

INSTALLATION INSTRUCTIONS FOR WA21ITE FOR INSTALLATION OF I-T-E MAX FLEX OPERATORS FOR CIRCUIT BREAKERS IN WIEGMANN ENCLOSURES WITH DISCONNECT ON RIGHT FLANGE

INSTALL ADAPTER PLATE (ITEM 1 DR 15) AND PLATE GASKET (ITEM 2) DN THE INSIDE OF THE ENCLISURE, BEHIND THE RECTANGULAR (PENING PROVIDED. SECURE IN PLACE WITH FOUR SCREVS (ITEM 3). STEP 1

ASSEMBLE THE 1-T-E OPERATING HANDLE TO THE MOUNTING PLATE WHICH WAS INSTALLED IN THE ENCLOSURE IN STEP 1. DMIT CAP SCREW AND LOCKWASHER WHICH FITS INTO THE BOTTOM HOLE OF THE 1-T-E OPERATING HANDLE.

THE BOTTOM HOLE OF THE 1-T-E OPERATING HANDLE.

INSTALL THE SLIDE ARM (ITEM 4 OR 14) DIVER THE INTERLOCK
LEVER PART OF THE 1-T-E OPERATING HANDLE AS SHOVN.

NOTE THAT THE NOTCH IN SLIDE ARM IS POSITIONED TOWARD THE
DOOR OPENING, PLACE THE SMALLER FIDAMETER END OF THE
SHOULDER COLLAR (ITEM 5 OR 16) THROUGH THE DVAL SLOT IN
THE SLIDE ARM, INSTALL LONG CAP SCREV (ITEM 6 OR 17) VITH
LOCKWASHER (ITEM 7 OR 18) THROUGH SHOULDER COLLAR INTO
THE BOTTOM MOUNTING HOLE OF THE 1-T-E OPERATING HANDLE
AND TIGHTER. THE SLIDE ARM SHOULD MOVE UP AND DOWN
SMODTHLY, INSTALL INTERLOCK LEVER EXTENSION PER
I-T-E INSTRUCTIONS. STEP 3

STEP 5

STELLINE. IN THE STATE AND ASSESSED AND LETTER STATE OF THE STATE AND ASSESSED AND LATER ASSESSED AND LATER AND ASSESSED AND LATER AND ASSESSED AND LATER AND ASSESSED AND LATER AND ASSESSED AND LATER ADJUSTED DER DIRECT AND LATER ASSESSED AND LATER ADJUST DE DE DOWN IF NECESSARY UP-DOWN MOTION REQUIRED TO DEPEND THE RELEASE MECHANISM IN THE L-T-E OPERATION HANDLE.

STEP 5 CONTINUED

(B) ADJUST THE LENGTH OF THE SLIDE ARM ASSEMBLY, VITH PROPER ADJUSTMENT OF THE SLIDE ARM, THE SAFETY LOCK (IN 1-T-E OPERATING HANDLE) SHOULD RELEASE JUST BEFORE THE MASTER DOOR IS FULLY LATCHED, LENGTHEN SLIDE ARM IF SAFETY LOCK RELEASES TOO SOON, SHORTEN SLIDE ARM IF SAFETY LOCK RELEASES TOO SOON.

IF SAFETY LICK RELEASES TOO LATE.

ATTACH THE DOOR CATCH (ITEM 11, PROVIDED BY VIEGMANN TO THE TAPPED SPACER ON THE DOOR USING THE BOTTOM SET OF MOUNTING HOLES. USE TVO SCREVS (ITEM 12) AND LICKVASHERS (ITEM 13). THE DOOR CATCH PREVENTS THE DOOR FROM BEING DEEMED WHEN THE 1-T-E OPERATING HANDLE IS IN THE TOW POSITION. THE DOOR CATCH HAY BE ADJUSTED UP OR DOWN TO HOD HOPPERLY ON THE INTERLOCK BLADE. THE DOOR CATCH (ITEM 13) MUST BE POSITIONED OF INTERLOCK BLADE. THE DOOR CATCH (ITEM 13) MUST BE POSITIONED UP INTERLOCK LEVER EXTENSION WHEN THE I-T-E OPERATING HANDLE IS IN EXTREME "OFF" POSITION.

DRILL AND TAP HOLES IN PANEL AS SHOWN IN THE DIAGRAM AND TABLE. STEP 8 INSTALL PANEL IN ENCLOSURE.


MOUNT CIRCUIT BREAKER AND OPERATION MECHANISM ON PANEL USING I-T-E INSTRUCTIONS AND PARTS. STEP 9

RECOMMENDED DIMENSIONS FOR PANEL DRILLING (CIRCUIT BREAKER LOCATION) GIVEN IN TABLE ALLOW VIRE BEND SPACE FOR MAXIMUM CONDUCTOR SIZE. BREAKER, HOWEVER, CAN BE LOCATED ANYWHERE VITHIN REACH OF CABLE USED. SEE 1-T-E INSTRUCTIONS.


I-T-E CIRCUIT BREAKER TYPE	DPERATING MECHANISM	w	х	Ε	F	TAPPED HOLE SIZE
E2(-A), (H), E4(-A) (H) E6(-A)XETD ED2(Y), (H)ED4 (H) ED6(EDD CLE(-A)XETD	FHOEBO	3-3/8	5	1	1	#8-32
CEDECETIO						
FJ6, F6, HF6 FXD6, FD6, HFD6	FHOFBO	10-3/4	7-1/2	1-1/2	1-1/2	1/4-20
CLF, CFD6						
JD2, JD6, JJ66ETD JJ6, SHJ6, SJL, QJXD2 JXD6CETD, HJD6 QSJD6, SHJD6QPSCJD6Q CLJETD, CJD6CETD SCJD6 LJ6, LL6CETD, SHLQ	FHOJBO	10-1/2	9-3/4	2-1/2	2-1/2	1/4-20
OLDE, HLDE, SLDEDSHLDED						
CLL(ETI), CLD6(ETI) SCLD6						
MD6, MXD6, HMD6 HXMD6, CMD6, SMB6 SHMD6, SCMD6, NDB SHMD6, SCMD6, NDB CMD6, SND6, SHAD6 SCMD6, SND6, SHAD6 SCMD6, PDB, PXD6, HPD6, HPXD6, CPD6, RD6, RXD6, HRD6 HXXD6, CRD6 ©	FHONBO	14	14-1/4	3	3-1/2	3/8-16


	PARTS LIST	
ITEM NO.	PART NAME	QTY.
1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 112. 13.4. 15. 16. 17. 18.	ADAPTER PLATE, I-T-E GASKET, PLATE SAREV, I/-ED X I/2 PAN HD SLIDE ARM SHOULDER COLLAR SHOULDER COLLAR COREV, I/-ED X 7/8 HEX HD LDCKVASHER, I/4 SPRING VASHER, FLO HEX DIDER CAT STORY LDCKVASHER, HIJ INT. NUT, I/A-ED HEX DIDER CAT STORY DIDER CAT STORY	1 1 4 1 1 1 2 2 2 1 2 2 1 1 1 1 1 1 2 2 2 1

① MOLDED CASE SWITCHES. © CIRCUIT BREAKERS WITH
CURRENT LIMITING REQUIRE
(2) ADDITIONAL HOLES;
SEE I-T-E INSTRUCTIONS

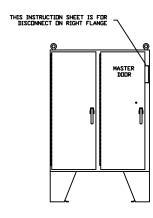

ENCLOSURE CATALOG NUMBERS

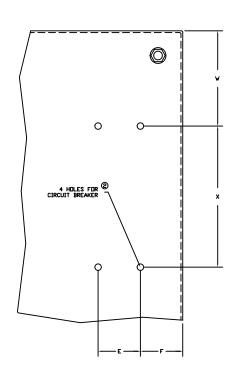

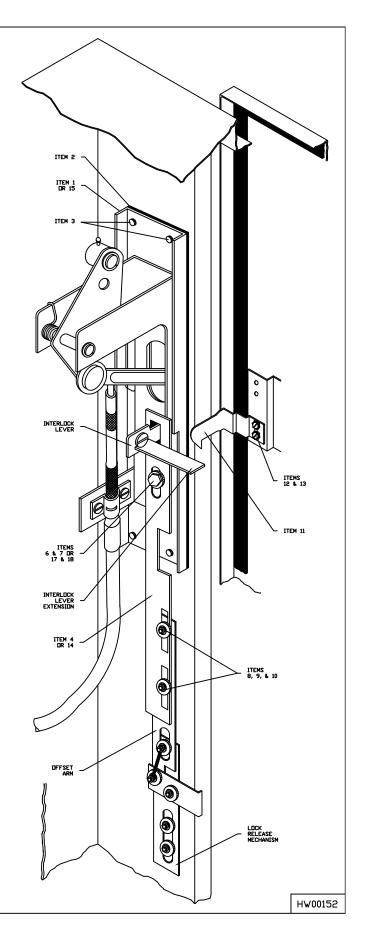

OPERATOR ADAPTER KIT WA21ITE