


**LABELWORKS PX
LW-PX900**

User's Guide Ver.04

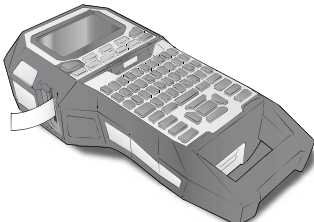

Read this document carefully to use this product safely and correctly. If your product is faulty, please read the included warranty card and contact the store you purchased it from. If you require further assistance, contact your local K-Sun customer support center.

Please also visit us at <http://labelworks.epson.com> for help and support. You can download the latest version of this User's Guide from the website.

Portions of this software are copyright 2016 The FreeType Project (www.freetype.org). All rights reserved.

International ENERGY STAR® Compliance Statement

The purpose of the International ENERGY STAR® Program is to promote the development and popularization of energy-efficient office equipment. As an ENERGY STAR® Partner, Seiko Epson Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.




Notation used in this manual

- ⚠ WARNING** Indicates information that, if ignored, could possibly result in serious personal injury or even death due to incorrect handling.
- ⚠ CAUTION** Indicates information that, if ignored, could possibly result in personal injury, physical damage, or damage to equipment due to incorrect handling.
- Attention** Indicates important information about LW-PX900.
- MEMO** Indicates additional information and points which may be useful to know regarding a topic.
- ☞ 1, 2, 3, 4** Indicates a title and page with more detailed information.
- ☞** Shows an image of the label to be used as an example.
- ☞** Indicates the buttons on LW-PX900.
- "Name"** Indicates the menu items, messages shown on the display, or the name of a manual. Example: "On", "Start print?"

©Seiko Epson Corporation 2015-2018. All rights reserved.
Printed in China

Included Items

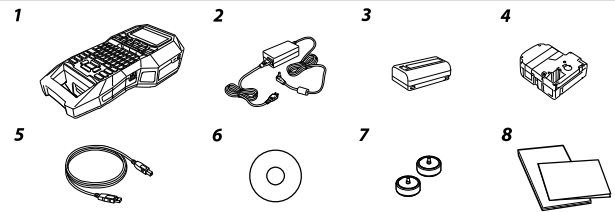

The included items differ depending on the type of product package you purchased. Use the following table to check the items. If you would like to purchase an item that is not included or have purchased a package other than one in the following table, see the separate sheet included with the product.

No.	Included item name	Package name		
		LW-PX900 Full kit	LW-PX900 Lite kit	LW-PX900 PC kit
1	LW-PX900	✓	✓	✓
2	AC adapter	✓	✓	✓
3	Li-ion battery (CS2CE97010)	✓	-	-
4	PX tape cartridge	✓	-	-
5	USB cable	✓	-	✓
6	Label Editor Professional CD-ROM	✓	-	✓
7	Magnetic attachment (CS2CE98010)	✓	-	-
8	Documents*	✓	✓	✓

* You can download LW-PX900 User's Guide (PDF version) from <http://labelworks.epson.com>.

Specifications

Body	
Dimensions	Approx. 136 (W) x 295 (D) x 97 (H) (mm)
Weight	Approx. 1,250 g (excluding batteries, tape cartridge)
Usage conditions	
Operating temperature	5 to 35 degrees C
Storage temperature	-10 to 55 degrees C
Supported tape width	
	4 mm, 6 mm, 9 mm, 12 mm, 18 mm, 24 mm, 36 mm
Power supply	
Li-ion battery x 1 / AA alkaline battery x 6	
AC adapter	
Type	AST1527Z2-1
Manufacturer	Seiko Epson Corp.
Input	AC100-240V, 1.2A, 50-60Hz (dedicated adapter, power cable only)
Output	DC15V, 2.7A
Total output power	40.5 W

Li-ion battery specifications

Ambient temperature	
During operation	0 to 40 degrees C
Charge	0 to 40 degrees C
During storage	Less than 1 month -20 to 50 degrees C
	Less than 3 month -20 to 40 degrees C
	Less than 1 year -20 to 20 degrees C

Charging information

Nominal specifications	Charging current (Std.)	1.0 A
	Charging voltage (Std.)	8.05 V
Charge limits	Charging time	Approx. 3 hours
	Battery pack model	CS2CE97010
	Maximum charge current, A	1.0 A
	Maximum charge voltage, V	8.4 V

Rated time when using alkaline batteries

Rated operating time / Rated resting time	0.5h / 1.0h
---	-------------

Safety Instructions

For your safety, read the attached documents carefully to use this product correctly. After you have read all instructions, keep this manual handy for future reference and to make your concerns clear. Items below indicate safety precautions to protect users, their surroundings and their property from possible injury or damage. Precautionary notations are categorized as follows according to personal injury and damage to the equipment if the instructions are ignored or the equipment is misused.

- ⚠ DANGER** This symbol indicates information that, if ignored, could possibly result in serious or fatal personal injury. Take extra caution in performing procedures with DANGER headings.
 - ⚠ WARNING** This symbol indicates information that, if ignored, could possibly result in serious personal injury or even death due to incorrect handling.
 - ⚠ CAUTION** This symbol indicates information that, if ignored, could possibly result in personal injury, physical damage, or damage to equipment due to incorrect handling.
- The following describes the meaning of each symbol used in the precautions.
- ⚠** This indicates an important reminder.
 - ⊘** This indicates a prohibited item.
 - !** This indicates a mandatory procedure.

When handling batteries

- ⚠** If any liquid from the battery gets into your eyes, promptly wash it out with clean water for more than 10 minutes and consult your doctor at once. If you do not, the liquid may cause loss of eyesight. Never disassemble or modify the battery pack. This may cause fire, explosion, leakage, overheating or damage. Do not expose the battery to fire or heat it. This may cause fire, explosion, leakage, overheating or damage.

When using the AC adapter and power cable

- ⚠** The cords included with this product contain chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.** (This notice is provided in accordance with Proposition 65 in Cal. Health & Safety Code §25249.5 and following.)
- ⊘** Do not use any AC adapter or power cable other than the dedicated AC adapter and power cable. Do not use the AC adapter with other than the specified voltage also. Otherwise, damage, overheating, fire or electric shock may occur.
- ⊘** Take the following precautions when handling the AC adapter and power cable.
 - Make sure to avoid octopus wiring.
 - Make sure the plug is not dusty before inserting it into an outlet.
 - Insert the plug firmly into the outlet.
 - Do not hold the AC adapter or the plug with wet hands.
 - Do not pull the power cable when disconnecting the plug. Be sure to hold the plug when disconnecting it.
 - Do not make any modification to the AC adapter or power cable.
 - Do not apply strong shocks to or put a heavy object on the AC adapter or power cable.
 - Do not bend or twist the AC adapter or power cable forcibly.
 - Do not place the AC adapter or power cable near a heater.
- ⊘** Do not use any damaged AC adapter or power cable. Otherwise, damage, overheating or smoking may occur, which may result in fire or electric shock.
- ⊘** Do not touch the plug during thunderstorms.

When handling batteries

- !** Keep the battery pack away from fire or flame if it produces a strange odor or leakage. Otherwise fire or explosion may occur.
- !** Should any battery liquid get on skin or clothing, promptly wash it off with clean water. If you do not, the liquid may damage your skin.
- !** Do not expose the battery to water. Do not allow water to contact the terminals. This may cause fire, overheating, or electric shock.
- !** Keep batteries out of reach of children. They are extremely dangerous if swallowed. Contact a doctor immediately if swallowed.

When using this product

- ⊘** Do not apply any strong force or shocks to the product such as standing on, dropping or hitting it. Otherwise, the product may be broken, which may result in fire or electric shock. If it is damaged, turn off the power immediately, unplug the AC adapter and remove the batteries, and then contact the K-Sun customer support center. Continuous use may result in fire or electric shock.
- ⚠** Take care not to spill any beverage such as tea, coffee or juice onto the product, or to spray aerosol insecticide. It may cause malfunction, fire, or electric shock. If any liquid has been spilled on the product, turn off the power, unplug the AC adapter and remove the batteries immediately, and then contact the K-Sun customer support center. Continuous use may result in fire or electric shock.
- ⚠** Do not touch the printhead because it becomes very hot. Otherwise, there is a risk of burns.
- ⊘** Do not open any covers other than the top cover or battery cover. Doing so may result in fire or electric shock. Always use the product as instructed in this manual. Otherwise, damage or injury may occur.
- ⊘** Never modify or disassemble this product. Doing so may cause fire or electric shock. Do not carry out any operations not described in this manual, or the product may break or cause injury.
- !** If any of the following abnormalities is observed, turn off the power immediately, unplug the AC adapter and remove the batteries, and then contact the K-Sun customer support center.
 - If smoke, strange odors or unexpected noises come from the product.
 - If liquid or foreign objects get inside the product.
 - If the product has been dropped or damaged.
- !** Do not touch the tape eject slot, during printing or when the auto cutter is in operation. Otherwise there is a risk of injury.

Others

- ⊘** Do not use or store the product, batteries, AC adapter, power cable, or tape cartridges in the following places.
 - In direct sunlight.
 - Where it may become extremely hot such as in a vehicle with the windows closed.
 - Where it may become extremely hot such as near a heater or the temperature becomes very unstable such as near the exhaust duct of an air conditioner.
 - Where the product may get wet due to a shower or rain such as in a bathroom or outdoors.
 - In a dusty place or where the product may be exposed to smoke or steam such as near the kitchen or a humidifier.
 - On an unstable place such as on a shaky table or on an inclined plane.
 - Where it might be subjected to vibration or shock.
 - Near high-voltage power lines or something that generates a magnetic field.
- !** Keep the plastic bags used to contain the product or this manual out of reach of children. Children may suffocate if they swallow them or put their heads into the bags.

CAUTION

- ⚠** If liquid leaks from a battery, wipe it off with a cloth and replace it with a new one. If the liquid comes in contact with your skin, wash it away with water immediately.
- ⊘** If the batteries are used incorrectly, they may cause leakage, overheating, explosion, erosion, or damage to the product, which may result in fire or injury.
 - Do not use new ones and old batteries together, or mix different types of batteries.
 - Use AA alkaline batteries.
 - Use batteries in the correct directions.
 - Take the batteries out immediately when they have no power remaining.
 - Take the batteries out if you do not use the product for a long time.
 - Do not heat batteries or throw them in fire or water.
 - Do not pinch the batteries with metal tweezers or use any pointed sharp metal object such as the tip of a mechanical pen or ball-point pen when taking the batteries out.
- !** When disposing of used batteries, make sure to follow the regulations.

When using the AC adapter

- ⊘** Do not unplug the AC adapter while the product is in operation, otherwise printing may not be successful.
 - ⊘** Do not use the AC adapter in a small, confined space, or cover it with a cloth. Otherwise, the AC adapter may overheat and deteriorate.
- When using this product**
- ⊘** Do not stand or put anything heavy on the product or place it on an unstable place such as on a shaky table or on an incline. Otherwise, the product may fall and cause injury.
 - ⚠** To ensure safety, unplug this product before leaving it unused.
 - !** Before cleaning, make sure to unplug the AC adapter from the outlet, and remove the batteries.
 - ⊘** Do not use a moistened cloth or solvents such as alcohol, thinner or benzene.
 - ⊘** Do not block or insert objects into the supplied AC adapter socket or the tape eject slot.

When handling tape cartridges

- Make sure to use a dedicated PX Tape.
- Some types of tape cannot be cut by the cutter. For the details, refer to the tape's manual.
- Do not drop it or disassemble it. Doing so may cause damage.
- Do not pull out the tape forcibly by hand. But make sure to feed the tape with **FEED**. Otherwise, the tape cartridge may be broken and unusable.
- Avoid using a tape cartridge without remaining tape. Doing so may cause overheating of the printhead, which may result in damage or malfunction.

MEMO

Tape cartridges contain ink ribbons in them. When disposing of tape cartridges, make sure to follow the local regulations for disposal.

Other cautions

- Notes on usage**
- Do not touch the thermal head. Static electricity may damage the thermal head.
 - Do not plug in and unplug the AC adapter while printing. Power may be cut off.
 - The Li-ion battery cannot be charged while printing.
 - Operate the keyboard gently.
 - Take care not to cut your fingers when cutting the label with scissors.
 - Do not attach a label on human bodies, living things, public facilities or other people's belongings.
 - Be sure to turn the power off after use.
 - Powering off message is displayed while turning off the product. Do not remove the AC adapter until the message disappears.
 - Be sure to replace batteries with the power turned off. If you replace the batteries while the product is powered, files or data stored on it may be deleted.

Recycling the Battery

Contains a lithium-ion battery. Must be recycled or disposed of properly.

MEMO

Do not disassemble the battery pack.



For American Users
The lithium-ion battery is recyclable. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.

Troubleshooting

Messages

This section explains the remedies when the following messages appear on the display.

Check battery Charge Li-ion!	The battery runs out of power. Connect the AC adapter to LW-PX900 and charge the battery. For details, see "Charging the Li-ion battery".
Check battery Charge alkaline	The batteries run out. Turn off the power and replace all batteries with new ones.
Cover open!	Top cover is open. Close the top cover.
Insert tape	Check if the tape cartridge is loaded or correctly set. For details, see "Installing a tape cartridge".
Check tape cartridge	The loaded tape is not supported. Insert a correct cartridge.
No more sequence No.!	Only up to 2 sequence numbers can be inserted.
No more barcode!	Only up to 2 barcodes can be inserted.
QR CODE too big!	Perform either of the following: Use a wider tape. Reduce the text or cell size. Lower "ECC Level".
Overheated!	The printhead is overheated. Turn off the power and remove the tape cartridge, then leave the product until it cools down.
Trash at slot Remove trash	Tape remains in the tape eject slot. Remove the tape.
Remove cut tape	Unable to start printing because cut tape remains in the tape eject slot. Remove the tape from the tape eject slot.

Problem

Unable to charge Li-ion battery

Is the Li-ion battery correctly installed? Check that the Li-ion battery is correctly installed. Is the AC adapter securely connected? Connect the AC adapter and the power cable firmly to the power socket of the product, the AC adapter connector and the outlet.

Unable to detect the tape correctly

Is the tape cartridge correctly installed? Check that the tape cartridge is correctly installed. Is the label for detecting the tape cartridge clean? If not, wipe the dirt off with a soft cloth. Is the detection sensor of LW-PX900 clean? If not, wipe the dirt off with a soft cloth.

 
MEMO

If none of the above has solved the problem or the symptom is other than the above, contact the K-Sun customer support center.

Creating Special Labels

Creating Labels for Patch Panel

You can create the optimal labels for your patch panel by setting the label length and number of blocks.



- Press **[F4]**.
- Select the length type with **[<] [>]** and then press **[<]**.
In this example, we will select "Blocks".
Blocks: Sets the length by block length.
Label: Sets the length by label length.
- Enter the blocks length and then press **[<]**.
Setting range: 0.25 to 30 cm
- Enter the blocks number and then press **[<]**.
In this example, we will enter "3".
Setting range: 1 to 50
- Select the type of separator with **[<] [>]** and then press **[<]**.
In this example, we will select "Line".
- Select the orientation with **[<] [>]** and then press **[<]**.
In this example, we will select "Hori".
Hori:

607A	608A	609A
------	------	------

Vert.1:


607A	608A	609A
------	------	------

Vert.2:

607A	608A	609A
------	------	------
- Enter the text.
You can create labels with sequence numbers.
For details, see "Creating Labels with Block Sequence Numbers Assigned"
- Press **[F5]**.

Creating Labels for Block-66

 You can create labels for Block-66 so that large numbers of connectors can easily be identified.



- Press **[F4]** + **[F5]**.
- Select the length type with **[<] [>]** and then press **[<]**.
In this example, we will select "Blocks".
Blocks: Sets the length by block length.
Label: Sets the length by label length.
- Enter the blocks length and then press **[<]**.
Setting range: 0.25 to 30 cm
- Enter the blocks number and then press **[<]**.
In this example, we will enter "4".
Setting range: 1 to 50
- Select the type of separator with **[<] [>]** and then press **[<]**.
In this example, we will select "Line".
- Select the orientation with **[<] [>]** and then press **[<]**.
In this example, we will select "Hori".
Hori:

01	02	03	04
----	----	----	----

Vert.1:


01	02	03	04
----	----	----	----

Vert.2:

01	02	03	04
----	----	----	----
- Enter the text.
You can create labels with sequence numbers.
For details, see "Creating Labels with Block Sequence Numbers Assigned"
- Press **[F5]**.

Creating Labels for Faceplate

Text can be automatically placed at the center of a block. This enables you to easily create a label suitable for the size of the area where it will be affixed.

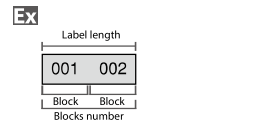

- Press **[F4]**.
- Enter the label length and then press **[<]**.
Setting range: 1 to 99.9 cm
- Enter the blocks number and then press **[<]**.
In this example, we will enter "2".
Setting range: 1 to 50
- Select the orientation with **[<] [>]** and then press **[<]**.
In this example, we will select "Hori".
Hori:

001	002	003
-----	-----	-----

Vert.1:

001	002	003
-----	-----	-----

Vert.2:

001	002	003
-----	-----	-----
- Enter the text.
- Press **[F5]**.

Creating Barcode Labels


MEMO
- You may not be able to add a barcode depending on the label type you create.
- Only up to two barcodes can be inserted in one label.

Supported barcode types:
EAN-8, EAN-13, CODE128, CODE39, QR CODE, ITF, CODABAR, UPC-A, UPC-E

- Press **[F4]**.
- Select an item with **[<] [>]** and press **[<]**.
Move on to the next options until the setting is complete.
- Enter the alphanumeric characters for the barcode and then press **[<]**.
- Press **[F5]**.

Creating Labels for Punch Block

You can create labels to identify at a glance the numbers for the wires or pins connected to a punch block.

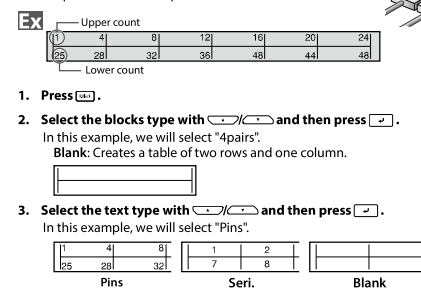


- Press **[F4]**.
- Select the blocks type with **[<] [>]** and then press **[<]**.
In this example, we will select "4pairs".
Blank: Creates a table of two rows and one column.

- Select the text type with **[<] [>]** and then press **[<]**.
In this example, we will select "Pins".

1	4	8	12	16	20	24
25	28	32	36	40	44	48
- Enter the upper count and then press **[<]**.
In this example, we will enter "1".
- Enter the lower count and then press **[<]**.
In this example, "25" is entered automatically.
- Enter the label length and then press **[<]**.
Setting range: 1 to 99.9 cm
- Press **[F5]**.

Creating Labels to Wrap Around Cable

 You can repeatedly print text so that it can be seen regardless of the angle from which the cable is viewed.



- Press **[F4]**.
- Select the length type with **[<] [>]** and then press **[<]**.
In this example, we will select "Length".
Dia: Sets the length by cable diameter. (Setting range: 0.25 to 15 cm)
Length: Sets the length by label length.
- Enter the label length and then press **[<]**.
Setting range: 1 to 99.9 cm
- Select On or Off of repeat text with **[<] [>]** and then press **[<]**.
In this example, we will select "On".
On:

1162	1162	1162	1162	1162	1162
------	------	------	------	------	------

 
Off:

1162

- Select the type of margins with **[<] [>]** and then press **[<]**.
In this example, we will select "Long".
Tape/3: Sets margins that are a 1/3 of the tape width.
Tape: Sets margins that are equal to the tape width.
- Enter the text.
- Press **[F5]**.

Creating Labels to Wrap around Cable like a Flag

This label is useful for differentiating cables because the flag portion of the label wrapped around the cable is easy to see.



- Press **[F4]** + **[F5]**.
- Select the setting method of space length with **[<] [>]** and then press **[<]**.
In this example, we will select "Length".
Dia: Sets the length by cable diameter. (Setting range: 0.25 to 15 cm)
Length: Sets the length by space length.
- Enter the space length and then press **[<]**.
Setting range: 0.25 to 30 cm
- Enter the text length and then press **[<]**.
Setting range: 0.25 to 30 cm
- Select the type of separator with **[<] [>]** and then press **[<]**.
In this example, we will select "Line".
- Select the orientation with **[<] [>]** and then press **[<]**.
In this example, we will select "Hori.2".
Hori.1:

USB	A001	A001
-----	------	------

Hori.2:

USB	A001	A001
-----	------	------

Vert.1:

USB	A001	A001
-----	------	------

Vert.2:

USB	A001	A001
-----	------	------

Vert.3:

USB	A001	A001
-----	------	------

Vert.4:


USB	A001	A001
-----	------	------
- Enter the text of block 1 and then press **[<]**.
- Enter the text of block 2.
- Press **[F5]**.

Creating Labels with Symbol

- Press **[F4]**.
 - Select a category with **[<] [>]** and press **[<]**.
 - Select a symbol with **[<] [>]** and press **[<]**.
 - Press **[F5]**.
- MEMO**
For available symbols, see "Symbol List" on the separate sheet.

Creating Multiple Labels at Once

 You can create many labels at once.



- Press **[F4]** + **[F5]**.
- Select the label length with **[<] [>]** and then press **[<]**.
Auto: Automatically adjusts the label length depending on the length of text.
Set: Sets the label length.
Setting range: 1 to 99.9 cm
- Enter the blocks number and then press **[<]**.
In this example, we will enter "3".
- Select the type of margins with **[<] [>]** and then press **[<]**.
Tape/3: Sets margins that are a 1/3 of the tape width.
Tape: Sets margins that are equal to the tape width.
- Select the orientation with **[<] [>]** and then press **[<]**.
In this example, we will select "Hori".
Hori:

012

Vert.1:

012

Vert.2:

012

- Enter "Cable" and then press **[<]**.
Similarly for other labels, enter text and press **[<]**.
- Press **[F5]**.

Creating Labels with Dedicated Tape

Die-Cut Label

Use the dedicated Die-Cut label. You can print on to pre-cut rounded corner label, oval label, and circular label.



- Select the orientation with **[<] [>]** and then press **[<]**.
In this example, we will select "Hori".
Hori:

ABC

Vert:

ABC

- Enter the text.
You can adjust the position of the text by changing the LW-PX900 settings.
For details, see "Changing the LW-PX900 Settings."
- Press **[F5]**.

Self-Lamination Overwrap

 
Use the dedicated Self-Lamination Overwrap. This label tape comes with transparent film. The film can be wrapped around the label to prevent it from getting dirty.



- Enter the label length and then press **[<]**.
Setting range: 1 to 99.9 cm
- Enter the text.
- Press **[F5]**.

Creating Sequentially Numbered Labels


The number is automatically incremented each time a label is printed. Up to four digits including numbers (0 to 9) and alphabet letters (a to z and A to Z) can be entered.



- Press **[F4]**.
- Enter the start value of the sequential numbers and then press **[<]**.
In this example, we will enter "0001".
- Select the number of repetition with **[<] [>]** and then press **[<]**.
In this example, we will select "2 times".
- Press **[F4]** + **[F5]**.
- Select "Print copies" with **[<] [>]** and then press **[<]**.
- Enter the number of print copies and then press **[<]**.
In this example, we will enter "6".
- Select "Start print?" with **[<] [>]** and then press **[<]**.
Printing starts.

Creating Labels with Block Sequence Numbers Assigned

 You can assign sequential numbers to blocks. Up to four digits including numbers (0 to 9) and alphabet letters (a to z and A to Z) can be entered.



Create the blocks in advance. In this example, we have created three blocks.

- Press **[F4]** + **[F5]**.
- Enter the start value of the sequential numbers and then press **[<]**.
In this example, we will enter "CN01".
Sequential numbers are automatically assigned to block 2 and block 3.
- Select the number of repetition with **[<] [>]** and then press **[<]**.
In this example, we will select "1 time".
- Press **[F5]**.

Customizing Labels

Setting the Format and Style (Edit menu)

You can decorate your label by setting the following.

MEMO
The setting items displayed when you press differ depending on the label type you create.

Layout
Left, Center, Justify, Right
Adjusts the layout when multiple lines are used.

Frame & Table
Decorates the text with a frame or inserts a table.

Separator
Decorates the text of a die cut label with a frame.

Style
Outline, Normal, Gray, Shadow, S+O
Applies a character style to text.

Char. spacing
None, Narrow, Normal, Wide
Sets the inter-character spacing.

Border & Line
Strikeout, Underline, None, Border, Round brdr, Shading, Brdr mesh, Round mesh
Applies border, underline, shade etc. to text.

Char. Width
Smaller, Small, Narrow, Normal, Wide
This allows you to change the width or height of characters.

Background
None, 1 Wave, 2 Diamond1, 3 Diamond2, 4 Snow, 5 Flower, 6 Star, 7 Cards, 8 Arabesq, 9 Mesh, 10Dotted
Sets the background pattern.

Bold & Italic
Italic, Normal, Bold, B+I
Changes the text in bold or italics.

Length
This setting is the same as when is pressed.
*4 "Setting the Label Length"

Margins
This setting is the same as when is pressed.
*4 "Setting the Margins"

Orientation
|AB|A, |< a|, |> a|, |> a|>
Sets the orientation of the text.

Font size
Select font size from preset patterns or from "Manual". When "Manual" is selected, font size can be set for each block line by line.
*4 "Changing the Font Size"

Font
This setting is the same as when + is pressed.
*4 "Changing the Font"

Line swap
Swaps the order of text line by line. You may not be able to swap the lines depending on the label type you create.

Color Reversal
On, Off
When set to "On", creates label with the text color and tape color reversed.

Procedure for setting

- Place the cursor.**
Place the cursor on the left of the characters to which you want to apply a function.
If you apply the function to a specific line or block, confirm that the cursor is in the line or block.
- Press .**
Example: to apply "Bold & Italic"
- Select "Bold & Italic" with and press .**
- Select "B + I" with and press .**
- Select an area to which you want to apply the function with and press .**
When "character" is selected, the function is applied to all characters on the right of the cursor.

Changing the Font Size

You can change the font size of text by selecting from preset patterns. To change the font size of a block line by line, set "Manual" under "Font size" of "Edit menu".
*4 "Setting the Format and Style (Edit menu)"

MEMO
• You may not be able to change the font size depending on the label type you create.
• If your text contains only the letters and/or marks described below, it is printed larger than text that contains the other letters and/or marks.
Numbers, English alphabet uppercase letters, space, and the following marks: ! " # % & ' * + - . / : ; < = > ? \ ^

- Press .
- Each time you press , the font size changes.

Changing the Font

Changes the font type of text.

- Press + .
- Each time you press + , the font changes.

SansS. ABC Roman ABC

Changing the Text Orientation

Changes the text orientation to vertical or horizontal.

MEMO
You may not be able to change the text orientation depending on the label type you create.

- Press + .
- Each time you press + , the setting switches between "Horizontal" and "Vertical".

Horizontal ABC
Vertical ABC

When creating "Patch Panel", "Block-66", "Faceplate", or "Mix-Len"

- Press + .
- Select the orientation with and press .

Hori. ABC
Vert.1 ABC
Vert.2 ABC

Setting the Label Length

You can set the length of label or block.

MEMO
• This cannot be set for a die cut label.
• When creating a special label, you can set the length again. Setting items for special label is displayed after pressing .

- Press .
- Select the setting method of the length with and press .

Auto: Automatically adjusts the label length depending on the length of text.
Set: Sets the label length.
Setting range: 1 to 99.9 cm

- Select the alignment for the text with and press .

Left, Center, Justify, Right

Setting the Margins

Sets the left and right margins.

MEMO
You may not be able to set the margins depending on the label type you create.

- Press .
- Select the type of margins with and press .

Tape width /3: Sets margins that are a 1/3 of the tape width.
Tape width: Sets margins that are equal to the tape width.

Adding Block

By dividing text into blocks, you can change the style and the number of lines block-by-block.

Display Cable #101
 USB No.1
 USB No.2

Label Cable USB No.1
 #101 USB No.2
Block 1 Block 2

- Press .
- A new block is started from the character next to the cursor.

Cable #101 Cable #101
 #101 #101

Saving Frequently Used Labels

By saving frequently used labels, you will be able to easily recall and print from them next time. Up to 100 labels can be saved.

■ Saving a label

- Press .
 - Select "Save" with and press .
 - Select a registration number with or the number keys and then press .
- The registration confirmation screen appears.
- Confirm the registration number and then press .

■ Recall the saved label

- Press .
 - Select "Recall" with and press .
 - Select a registration number with or the number keys and then press .
- The recall confirmation screen appears.
- Confirm the registration number and then press .

■ Printing the saved label

You can select multiple files and print them at once.

- Press .
 - Select "Print" with and press .
 - Select a registration number with or the number keys and then press .
- By continuously selecting registration numbers and pressing , you can select multiple files.
- Select "Print Start" with and press .
- Printing starts.

MEMO
You can also select "Print Start" by pressing + .

■ Deleting the saved label

- Press .
 - Select "Delete" with and press .
 - Select a registration number with or the number keys and then press .
- The deletion confirmation screen appears.
- Confirm the registration number and then press .

Utilizing Print Functions

■ Enlarge print

You can create a label that is larger than the width of a single label. Print the created content separately on multiple labels and then put them together to use as a single label.

ABC

- Press .
 - Select "Enlarge print" with and press .
 - Select "2size" with and press .
 - Select "2/2" with and press .
 - Select "Start print?" with and press .
- Printing starts.

MEMO
The function remains enabled even after printing. To disable the function, select "Off".

■ Mirror print

On OBA Off ABC

- Press .
 - Select "Mirror print" with and press .
 - Select "On" with and press .
 - Select "Start print?" with and press .
- Printing starts.

MEMO
The function remains enabled even after printing. To disable the function, select "Off".

■ Print copies

ABC ABC ABC ...

- Press .
 - Select "Print copies" with and press .
 - Enter the number of print copies and then press .
 - Select "Start print?" with and press .
- Printing starts.

MEMO
The function remains enabled even after printing. To disable the function, set the number of print copies to "1".

Changing the LW-PX900 Settings

Auto cut

Sets whether or not to cut automatically.

When "Auto cut" is set to "On", the function (Half cut) for precutting just the label part to make the backing paper easy to peel off is set.

Print density

Sets the print density.

Drop stop

This function is useful for affixing consecutively printed labels one at a time.

When "On" is selected, printed labels will not be scattered because they are stacked in the tape eject slot and a label is output each time a label is removed. This function is only available when the label length is 28 mm or more, "Auto cut" is set to "On", and "Half cut" is set to "Off".

Die-Cut pos

Adjusts the text position of die cut label.

Width pos: Adjusts the vertical positioning of text.
Length pos: Adjusts the horizontal positioning of text.

Backlight

Sets the display backlight to On or Off.

Language

You can select the language shown on the display from the following:
Dansk, Deutsch, English, Español, Français, Italiano, Nederlands, Norsk, Português-Br, Português-EU, Suomi, Svenska, Türkçe

inch:cm

The unit of length used to indicate the label size can be switched between inch and cm.

MEMO
Version: To make sure the version number that has been installed in the printer.

Procedure for setting

- Press + .
- Select the desired function with and press .
- Select the desired item with and press .