



**WARNING/Caution** ..... inside cover  
Table of Contents ..... i  
Manual Revisions ..... iv  
EU Information ..... v

**1 INTRODUCTION**

Manual Organization ..... 2  
Introduction to the EZText Panel ..... 4  
What you need to get started ..... 5  
    Hardware ..... 5  
    Software ..... 5  
**Need Help?** ..... 5  
    Onscreen HELP ..... 5  
    PLC HELP ..... 5  
    Technical Support ..... 6  
Models ..... 7  
PLCs Supported by EZText Panels ..... 8  
PLC and Programming Cable Part Numbers ..... 9  
Accessories and Optional Equipment ..... 9  
Front Panel Features ..... 10  
    Operator Controls and Indicators ..... 10  
        PLC Message LED ..... 10  
        Control Pushbuttons ..... 11  
        Function Pushbuttons ..... 11  
        Pushbutton LEDs ..... 11  
        Character LCD Display with LED Backlight ..... 11  
        Messages ..... 12  
    Rear Panel Indicators ..... 12  
Specifications ..... 13

**2 HARDWARE INSTALLATION**

Custom Labels ..... 16  
    Create Custom Labels ..... 16  
    Install Custom Labels ..... 17  
EMI Noise Filter Installation ..... 18  
Mounting ..... 19  
    Models EZ-220 and EZ-420 Outline Dimensions  
        and Mounting Template ..... 19  
    Model EZ-220L Outline Dimensions and Mounting Template ..... 20  
    DIN Clip Mounting ..... 21  
Connections and Wiring ..... 22  
    EZ-220 and EZ-420 Rear View ..... 23  
    EZ-220L Rear View ..... 24  
    Power Connector ..... 25



Serial Port .....	25
Connect a PLC .....	26
DeviceNet Port .....	26
<b>3 LEARNING THE FEATURES</b>	
Learning the Features .....	28
Memory Mapping/PLC Data Registers .....	28
Pushbuttons .....	29
LEDs .....	29
PLC Message Registers .....	30
Embedded Data Registers .....	30
PLC Messages and Local Messages .....	32
Embedded Data .....	32
Message Types .....	33
Displaying PLC Messages .....	34
PLC Message LED .....	35
Displaying Local Messages .....	35
Local Message File Structure Example .....	36
Local Message Menu Structure Example .....	37
<b>4 TUTORIAL</b>	
EZText Panel Setup .....	40
SETUP Mode .....	40
Adjust Display Contrast .....	40
Internal Software and Hardware Revisions .....	40
Preparing for Configuration .....	40
Installing EZText Programming Software .....	41
Tutorial — Plan the Project using Application Worksheets .....	43
Tutorial — Create the Project using EZText Programming Software .....	47
Tutorial — Configure a PLC .....	56
<b>5 CONFIGURATION</b>	
Configure New System .....	60
Configure Existing System .....	74
Connect to Panel, View Panel Status and Firmware Version .....	75
Upgrade Firmware .....	76
<b>6 MAINTENANCE and TROUBLESHOOTING</b>	
Maintenance .....	80
Fuse Reset .....	80
Precautions .....	80
Screen Overlay/Chemical Compatibility .....	80
Screen Overlay Cleaning .....	82
Gasket Replacement .....	82



Troubleshooting ..... 83  
    Panel Configuration Problems ..... 83  
    PLC Errors ..... 84  
Still Need Help? ..... 85  
Warranty Repairs ..... 86  
Out of Warranty Repairs ..... 86  
Frequently Asked Questions (FAQs) ..... 87

**Appendix A** ..... A-1  
    EZText Panel Application Worksheet ..... A-2

**Appendix B** ..... B-1  
    Cable/Wiring Diagrams ..... B-2

**Appendix C** ..... C-1  
    PLC Driver Error Messages ..... C-2  
    EZText Panel Error Messages ..... C-13  
    EZText Programming Software Error Messages ..... C-14

**INDEX** ..... I-1