

DURAPULSE GS10 DRIVE USER MANUAL TABLE OF CONTENTS



CONTENTS

GS4 USER MANUAL TOC

WARNINGS AND TRADEMARKS	W-1
~ WARNING ~	W-1
Trademarks.	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
Warnings.	W-3
DURAPULSE GS10 USER MANUAL REVISION HISTORY	H-1
DURAPULSE GS10 DRIVE USER MANUAL TABLE OF CONTENTS	TOC-1
CHAPTER 1: GETTING STARTED.	1-1
User Manual Overview	1-2
Overview of this Publication	1-2
Who Should Read This Manual.	1-2
Supplemental Publications	1-2
Technical Support	1-2
Special Symbols	1-2
Purpose of AC Drives	1-3
Selecting the Proper Drive Rating	1-3
Determine Motor Full-Load Amperage (FLA)	1-3
Determine Motor Overload Requirements	1-3
Determine Application Type; Constant Torque or Variable Torque	1-3
Installation Altitude	1-4
Determine Maximum Enclosure Internal Temperature	1-5
Derate Output Current Based on Carrier Frequency (if necessary)	1-7
GS10 Variable Torque Carrier Frequency Derating	1-7
DURAPULSE GS10 AC Drive Environmental Information.	1-9
Storage and Transportation.	1-9
GS10 Environmental Conditions	1-9
GS10 General Specifications	1-10
DURAPULSE GS10 AC Drive Specifications	1-11
120V Class – 1-Phase Model-Specific Specifications	1-11
230V Class – 1-Phase Model-Specific Specifications	1-12
230V Class – 3-Phase Model-Specific Specifications	1-13
230V Class – 3-Phase Model-Specific Specifications	1-14
460V Class – 3-Phase Model-Specific Specifications	1-15
460V Class – 3-Phase Model-Specific Specifications	1-16
Receiving and Inspection	1-17
Drive Package Contents.	1-17
Model Number Explanation	1-18

Nameplate Information	1–18
CHAPTER 2: INSTALLATION AND WIRING	2–1
Drive Models by Frame Size	2–2
Installation	2–2
Minimum Clearances and Air Flow.	2–3
GS10 Series Minimum Clearance Distances	2–3
GS10 Airflow and Power Dissipation	2–4
Dimensions	2–5
Circuit Connections – RFI Jumper	2–10
RFI Jumper Removal.	2–10
Isolating Main Power from Ground	2–10
Floating Ground System (IT Systems)	2–12
Asymmetric Ground System (Corner Grounded TN Systems)	2–12
Circuit Connections – Warnings and Notes	2–13
Danger!.	2–13
Wiring Terminal Access	2–17
Control Terminal Access.	2–17
GS10 Wiring Diagrams and Terminals	2–18
Full I/O Wiring Diagram.	2–18
Main Circuit Wiring Diagram	2–19
Main Circuit Wiring Terminals	2–20
Main Terminal Specifications	2–20
Wiring Terminal Connector Dimensions – Main-Circuit Terminals.	2–21
Main Terminal Diagrams	2–22
GS10 Control Terminal Specifications	2–23
Control Terminal Block Diagram & Wiring Specifications	2–25
Control Terminal Wiring Instructions.	2–26
Control Circuit Wiring Diagrams	2–27
Digital Inputs.	2–27
System Wiring Diagram.	2–28
CHAPTER 3: KEYPAD OPERATION AND QUICKSTART	3–1
The DURApulse GS10 Digital Keypad	3–2
Keypad Indicator LEDs.	3–3
GS10 Keypad Operation	3–4
GS10 Keypad Function Examples.	3–4
Main Page	3–5
Frequency Command Settings	3–5
Parameter Settings	3–6
Setting Direction.	3–7
Application Settings.	3–7
Reference Table for Digital LED Character Display	3–9
CHAPTER 4: AC DRIVE PARAMETERS	4–1
Introduction	4–2
Video Tutorials.	4–2
DURAPULSE GS10 Parameter Summary.	4–2
Drive Parameters Summary (P00.xx)	4–2
Basic Parameters Summary (P01.xx)	4–8
Digital Input/Output Parameters Summary (P02.xx)	4–11

Analog Input/Output Parameters Summary (P03.xx)	4-17
Multi-Step Speed Parameters Summary (P04.xx)	4-20
Motor Parameters Summary (P05.xx)	4-21
Protection Parameters Summary (P06.xx)	4-24
Special Parameters Summary (P07.xx)	4-30
High-Function PID Parameters Summary (P08.xx)	4-33
Communication Parameters Summary (P09.xx)	4-36
Speed Feedback Control Parameters Summary (P10.xx)	4-38
Advanced Parameters Summary (P11.xx)	4-39
Function Parameters (P12.xx)	4-40
Macro / User Defined Macro Parameters Summary (P13.xx)	4-43
Protection Parameters (2) Summary (P14.xx)	4-45
DURAPULSE GS10 Parameter Details	4-46
Explanation of Parameter Details format	4-46
Group P00.xx Details – Drive Parameters	4-47
Group P01.xx Details – Basic Parameters	4-64
Group P02.xx Details – Digital Input/Output Parameters.	4-75
Group P03.xx Details – Analog Input/Output Parameters	4-97
Analog Input Parameter Examples	4-105
Group P04.xx Details – Multi-Step Speed Parameters	4-127
Group P05.xx Details – Motor Parameters.	4-129
Group P06.xx Details – Protection Parameters	4-136
Group P07.xx Details – Special Parameters	4-159
Group P08.xx Details – High-function PID Parameters	4-173
Group P09.xx Details – Communication Parameters	4-188
Group P10.xx Details – Speed Feedback Control Parameters	4-201
Group P11.xx Details – Advanced Parameters.	4-205
Group P12.xx Details – Function Parameters	4-206
Group P13.xx Details – Macro / User Defined Parameters	4-218
Group P14.xx Details – Protection Parameters (2).	4-229
Adjustments and Applications	4-232
PMSVC mode with permanent magnet motor (PM) adjustment procedure	4-232
CHAPTER 5: SERIAL COMMUNICATIONS	5-1
Communications Parameters Summary	5-2
Summary – Serial Communication Parameters	5-2
Serial Modbus Status Addresses	5-4
Status Addresses (Read Only).	5-4
Serial Communications Overview	5-7
Serial Communications Connectivity.	5-7
Minimum AC Drive Parameter Settings For Serial Communication	5-7
Common Third-Party Modbus RTU Masters.	5-8
AutomationDirect PLCs as Modbus Master	5-8
Connecting Communication Cables	5-9
Detailed Serial Modbus Communication Information	5-11
Data Format	5-11
Communication Protocol	5-12
CMD (command code) and DATA (data characters)	5-13
CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING	6-1
Maintenance and Inspections	6-2

Monthly Inspection	6-2
Annual Inspection	6-2
Recharge Capacitors (for drives not in service)	6-3
Recommended Inspection Schedules	6-4
Troubleshooting	6-8
Warning Codes.	6-8
Fault Codes.	6-17
Typical AC Drive Problems and Solutions	6-38
Grease and Dirt Problems.	6-38
Fiber Dust Problem	6-39
Corrosion Problem.	6-40
Industrial Dust Problem.	6-41
Wiring and Installation Problem	6-42
Digital Input/Output Terminal Problems.	6-43
CHAPTER 7: GSOFT2 – GETTING STARTED	7-1
GS10 Drive Configuration Software	7-2
System Requirements	7-2
Installation Guide	7-3
System Requirement Configuration	7-3
GS10 Communication Settings for GSoft2 - Quick Reference	7-4
Software Installation.	7-5
Opening GSoft2 Software Program	7-7
Software Functions	7-8
Icon Functions	7-8
Firmware Upgrade Notes.	7-11
GSoft2 Help File Note.	7-11
APPENDIX A: ACCESSORIES.	A-1
Fuses/Circuit Breakers.	A-2
Recommended Fuse Specifications for the DC-side of Common DC-Bus	A-3
Standard Footprint EMC Filter and Zero Phase Reactor	A-4
Filter Dimensions	A-5
High Performance EMI Input Filters	A-6
Recommended Motor Cable Length.	A-8
Line Reactors / Voltage Time Filters	A-9
Line/Load Reactors Selection Charts.	A-11
Line Reactor Applications and Wiring Connections.	A-12
Recommended Cable Length.	A-14
Dynamic Braking	A-16
Braking Units.	A-16
Choosing and Installing a Braking Resistor	A-17
EMC Shield & Earthing Plates	A-18
GS10 EMC Shield Plates.	A-18
Capacitive Filter (GS20A-CAPF).	A-21
Conduit Box	A-23
Conduit Box Installation.	A-26
Replacement Fan Kit	A-28
DIN Rail Mounting	A-30
GS10 DIN Rail Installation.	A-31

Mounting Adapter Plate	A-32
Mounting Adapter Plate Dimensions	A-33
Mounting Adapter Plate Installation	A-35
Optional Advanced Keypad.	A-37
GS10 Display Screens for GS4-KPD	A-40
Keypad Fault Codes	A-46
Keypad Panel Mounting Kit GS4-BZL	A-47
APPENDIX B: DIGITAL AND ANALOG I/O PARAMETER MAPS	B-1
Introduction	B-2
GS10 Digital Inputs	B-3
GS10 Digital Outputs	B-4
GS10 Analog Common Parameters	B-5
GS10 Analog Input (AI-V) Parameters	B-5
GS10 Analog Input (AI-C) Parameters	B-6
GS10 Analog Output 1 Parameters	B-8
APPENDIX C: USING GS10 AC DRIVES WITH AUTOMATIONDIRECT PLCs	C-1
Appendix C Overview	C-2
Sinking/Sourcing Basics.	C-2
GS10-to-PLC I/O Wiring Examples.	C-4
Drive Wired with DC Sinking Inputs (PLC output card is sourcing)	C-4
Drive Wired with DC Sourcing Inputs (PLC output card is sinking)	C-4
Drive Wired with DC Sinking Outputs (PLC input card is sourcing)	C-5
Drive Wired with DC Sourcing Outputs (PLC input card is sinking)	C-5
Drive Relay Outputs Wired with Sinking PLC Modules	C-6
Drive Relay Outputs Wired with Sourcing PLC Modules	C-6
Drive Analog Inputs	C-7
Analog Input Wired for Voltage and Current	C-7
Drive Analog Outputs	C-8
Analog Output Wired for Voltage and Current	C-8
APPENDIX D: PID CONTROL	D-1
Function of PID Control.	D-2
What Does PID Control Accomplish?	D-2
PID Control Analogy.	D-2
Common Applications for PID Control	D-3
Definition of PID Loop "Directions"	D-3
Forward-Acting PID Loop (Heating Loop) (Negative-Feedback Loop)	D-3
Reverse-Acting PID Loop (Cooling Loop) (Positive-Feedback Loop)	D-3
PID Control Overview	D-4
Concept of GS10 PID Control & Tuning.	D-5
Proportional Gain (P)	D-5
Integral Time (I)	D-5
Derivative Value (D)	D-6
Proportional Integral Control (PI)	D-6
Proportional Derivative Control (PD).	D-6
Proportional Integral Derivative Control (PID)	D-6
Tuning Example for PID Control	D-7

