

# DURAPULSE GS20 & GS20X DRIVE USER MANUAL TABLE OF CONTENTS



## CONTENTS

### GS20 USER MANUAL TOC

WARNINGS AND TRADEMARKS . . . . .	W-1
~ WARNING ~ . . . . .	W-1
Trademarks. . . . .	W-1
~ AVERTISSEMENT ~ . . . . .	W-2
Marques de commerce . . . . .	W-2
Warnings . . . . .	W-3
DURAPULSE GS20 & GS20X USER MANUAL REVISION HISTORY. . . . .	H-1
DURAPULSE GS20 & GS20X DRIVE USER MANUAL TABLE OF CONTENTS . . . . .	TOC-1
CHAPTER 1: GETTING STARTED. . . . .	1-9
User Manual Overview . . . . .	1-10
Overview of this Publication . . . . .	1-10
Who Should Read This Manual. . . . .	1-10
Supplemental Publications . . . . .	1-10
Technical Support . . . . .	1-10
Produced By . . . . .	1-10
Special Symbols . . . . .	1-10
Purpose of AC Drives . . . . .	1-11
Selecting the Proper Drive Rating . . . . .	1-11
Determine Motor Full-Load Amperage (FLA) . . . . .	1-11
Determine Motor Overload Requirements . . . . .	1-11
Determine Application Type; Constant Torque or Variable Torque . . . . .	1-11
Installation Altitude . . . . .	1-12
Determine Maximum Enclosure Internal Temperature . . . . .	1-13
Derate Output Current Based on Carrier Frequency (if necessary) . . . . .	1-15
GS20(X) Variable Torque Carrier Frequency Derating. . . . .	1-15
<b>DURAPULSE</b> GS20 & GS20X AC Drive Environmental Information . . . . .	1-17
Storage and Transportation. . . . .	1-17
GS20 Environmental Conditions . . . . .	1-17
GS20X Environmental Conditions . . . . .	1-17
GS20 & GS20X General Specifications. . . . .	1-18
<b>DURAPULSE</b> GS20 AC Drive Specifications . . . . .	1-19
120V Class – 1-Phase Model-Specific Specifications . . . . .	1-19
230V Class – 1-Phase Model-Specific Specifications . . . . .	1-20
230V Class – 3-Phase Model-Specific Specifications . . . . .	1-21
230V Class – 3-Phase Model-Specific Specifications . . . . .	1-22
460V Class – 3-Phase Model-Specific Specifications . . . . .	1-23
460V Class – 3-Phase Model-Specific Specifications . . . . .	1-24
575V Class – 3-Phase Model-Specific Specifications . . . . .	1-25

<b>DURAPULSE GS20X AC Drive Specifications</b> . . . . .	1-26
230V Class – 1-Phase Model-Specific Specifications . . . . .	1-26
230V Class – 3-Phase Model-Specific Specifications . . . . .	1-27
460V Class – 3-Phase Model-Specific Specifications . . . . .	1-28
Receiving and Inspection . . . . .	1-29
Drive Package Contents. . . . .	1-29
Model Number Explanation . . . . .	1-30
Nameplate Information. . . . .	1-30
<b>CHAPTER 2: INSTALLATION AND WIRING</b> . . . . .	2-1
Drive Models by Frame Size . . . . .	2-2
Installation . . . . .	2-2
Minimum Clearances and Air Flow. . . . .	2-3
GS20 Series Minimum Clearance Distances . . . . .	2-3
GS20 Airflow and Power Dissipation . . . . .	2-4
GS20X Series Minimum Clearance Distances . . . . .	2-5
GS20X Airflow and Power Dissipation . . . . .	2-5
Dimensions . . . . .	2-6
Circuit Connections – RFI Jumper . . . . .	2-16
RFI Jumper Removal. . . . .	2-16
Isolating Main Power from Ground . . . . .	2-17
Floating Ground System (IT Systems) . . . . .	2-18
Asymmetric Ground System (Corner Grounded TN Systems) . . . . .	2-18
Circuit Connections – Warnings and Notes . . . . .	2-19
Danger!. . . . .	2-19
Wiring Terminal Access . . . . .	2-23
Control Terminal Access. . . . .	2-23
Main Circuit Wiring Terminals . . . . .	2-24
Main Terminal Specifications . . . . .	2-24
Wiring Terminal Connector Dimensions – Main-Circuit Terminals. . . . .	2-26
Main Terminal Diagrams . . . . .	2-28
Main Circuit Wiring Diagrams . . . . .	2-31
Control Circuit Wiring Terminals . . . . .	2-31
GS20 & GS20X Control Terminal Specifications. . . . .	2-31
GS20 & GS20X Control Terminal Block Diagram & Wiring Specifications . . . . .	2-34
Control Terminal Wiring Instructions. . . . .	2-35
Control Circuit Wiring Diagrams . . . . .	2-36
Digital Inputs. . . . .	2-36
System Wiring Diagram . . . . .	2-37
Full I/O Wiring Diagram. . . . .	2-38
<b>CHAPTER 3: KEYPAD OPERATION AND QUICKSTART</b> . . . . .	3-1
The DURApulse GS20 & GS20X Digital Keypad. . . . .	3-2
Keypad Indicator LEDs. . . . .	3-3
GS20(X) Keypad Operation . . . . .	3-4
GS20(X) Keypad Function Examples . . . . .	3-4
Main Page . . . . .	3-5
Frequency Command Settings . . . . .	3-5
Parameter Settings . . . . .	3-6
PLC Settings . . . . .	3-6

Setting Direction . . . . .	3–7
Application Settings . . . . .	3–7
Reference Table for Digital LED Character Display . . . . .	3–9
<b>CHAPTER 4: AC DRIVE PARAMETERS . . . . .</b>	<b>4–1</b>
<b>Introduction . . . . .</b>	<b>4–3</b>
Video Tutorials . . . . .	4–3
<b>DURAPULSE GS20(X) Parameter Summary . . . . .</b>	<b>4–3</b>
Drive Parameters Summary (P00.xx) . . . . .	4–3
Basic Parameters Summary (P01.xx) . . . . .	4–10
Digital Input/Output Parameters Summary (P02.xx) . . . . .	4–14
Analog Input/Output Parameters Summary (P03.xx) . . . . .	4–20
Multi-Step Speed Parameters Summary (P04.xx) . . . . .	4–23
Motor Parameters Summary (P05.xx) . . . . .	4–24
Protection Parameters Summary (P06.xx) . . . . .	4–27
Special Parameters Summary (P07.xx) . . . . .	4–34
High-Function PID Parameters Summary (P08.xx) . . . . .	4–37
Communication Parameters Summary (P09.xx) . . . . .	4–39
Speed Feedback Control Parameters Summary (P10.xx) . . . . .	4–42
Advanced Parameters Summary (P11.xx) . . . . .	4–44
Macro / User Defined Macro Parameters Summary (P13.xx) . . . . .	4–46
Protection Parameters (2) Summary (P14.xx) . . . . .	4–48
<b>DURAPULSE GS20(X) Parameter Details . . . . .</b>	<b>4–50</b>
Explanation of Parameter Details format . . . . .	4–50
Group P00.xx Details – Drive Parameters . . . . .	4–51
Group P01.xx Details – Basic Parameters . . . . .	4–72
Group P02.xx Details – Digital Input/Output Parameters . . . . .	4–83
Group P03.xx Details – Analog Input/Output Parameters . . . . .	4–104
Analog Input Parameter Examples . . . . .	4–116
Group P04.xx Details – Multi-Step Speed Parameters . . . . .	4–139
Group P05.xx Details – Motor Parameters . . . . .	4–141
Group P06.xx Details – Protection Parameters . . . . .	4–150
Group P07.xx Details – Special Parameters . . . . .	4–175
Group P08.xx Details – High-function PID Parameters . . . . .	4–188
Group P09.xx Details – Communication Parameters . . . . .	4–203
Group P10.xx Details – Speed Feedback Control Parameters . . . . .	4–220
Group P11.xx Details – Advanced Parameters . . . . .	4–229
Group P13.xx Details – Macro / User Defined Parameters . . . . .	4–238
Group P14.xx Details – Protection Parameters (2) . . . . .	4–251
Adjustments and Applications . . . . .	4–257
FOC sensorless vector mode with standard induction motor (IM) adjustment procedure . . . . .	4–257
TQC sensorless vector mode standard induction motor (IM) adjustment procedure . . . . .	4–261
PMSVC mode with permanent magnet motor (PM) adjustment procedure . . . . .	4–263
Torque Calculation and Torque Parameter Setup Reference . . . . .	4–267
Drive Motor Torque Calculation . . . . .	4–267
GS20 Drive - Torque Limit in Speed Mode Detailed Explanation . . . . .	4–268
Speed Mode with Torque Limits via Analog Input . . . . .	4–269
GS20 Drive Quick Reference- Alternating between Torque and Speed Mode . . . . .	4–270
<b>CHAPTER 5: SERIAL COMMUNICATIONS . . . . .</b>	<b>5–1</b>
Communications Parameters Summary . . . . .	5–2

<i>Summary – Serial Communication Parameters</i> . . . . .	5-2
<i>Serial Modbus Status Addresses</i> . . . . .	5-6
<i>Status Addresses (Read Only)</i> . . . . .	5-6
<i>Serial Communications Overview</i> . . . . .	5-9
<i>Serial Communications Connectivity</i> . . . . .	5-9
<i>Minimum AC Drive Parameter Settings For Serial Communication</i> . . . . .	5-9
<i>Common Third-Party Modbus RTU Masters</i> . . . . .	5-10
<i>AutomationDirect PLCs as Modbus Master</i> . . . . .	5-10
<i>Connecting Communication Cables</i> . . . . .	5-11
<i>Detailed Serial Modbus Communication Information</i> . . . . .	5-13
<i>Data Format</i> . . . . .	5-13
<i>Communication Protocol</i> . . . . .	5-14
<i>CMD (command code) and DATA (data characters)</i> . . . . .	5-15
<b>CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING</b> . . . . .	6-1
<i>Maintenance and Inspections</i> . . . . .	6-2
<i>Monthly Inspection</i> . . . . .	6-2
<i>Annual Inspection</i> . . . . .	6-2
<i>Recharge Capacitors (for drives not in service)</i> . . . . .	6-3
<i>Recommended Inspection Schedules</i> . . . . .	6-4
<i>Troubleshooting</i> . . . . .	6-8
<i>Warning Codes</i> . . . . .	6-8
<i>Fault Codes</i> . . . . .	6-25
<i>Typical AC Drive Problems and Solutions</i> . . . . .	6-51
<i>Grease and Dirt Problems</i> . . . . .	6-51
<i>Fiber Dust Problem</i> . . . . .	6-52
<i>Corrosion Problem</i> . . . . .	6-53
<i>Industrial Dust Problem</i> . . . . .	6-54
<i>Wiring and Installation Problem</i> . . . . .	6-55
<i>Digital Input/Output Terminal Problems</i> . . . . .	6-56
<b>CHAPTER 7: GSOFT2 – GETTING STARTED</b> . . . . .	7-1
<i>GS20(X) Drive Configuration Software</i> . . . . .	7-2
<i>System Requirements</i> . . . . .	7-2
<i>Installation Guide</i> . . . . .	7-3
<i>System Requirement Configuration</i> . . . . .	7-3
<i>Software Installation</i> . . . . .	7-4
<i>Opening GSoft2 Software Program</i> . . . . .	7-6
<i>Software Functions</i> . . . . .	7-7
<i>Firmware Upgrade Notes</i> . . . . .	7-11
<i>GSoft2 Help File Note</i> . . . . .	7-11
<b>CHAPTER 8: GSLOGIC INTRODUCTION</b> . . . . .	8-1
<i>Purpose of This Chapter</i> . . . . .	8-2
<i>For More Detailed Information</i> . . . . .	8-2
<i>GSLogic Introduction</i> . . . . .	8-2
<i>GS20(X) PLC Summary</i> . . . . .	8-3
<i>Introduction</i> . . . . .	8-3
<i>Notes on Using GSLogic, the GS20(X) PLC, and the GS20(X) Drive</i> . . . . .	8-4
<i>Getting Started</i> . . . . .	8-7
<i>Connect to PLC</i> . . . . .	8-7

Controlling Drive IO with the PLC . . . . .	8–9
Installation of GSLogic Programming Software. . . . .	8–11
System Requirements . . . . .	8–11
About Getting Started. . . . .	8–11
Software and Online Help Files. . . . .	8–11
Technical Support . . . . .	8–11
Installing GSLogic Programming Software . . . . .	8–12
Program Writing. . . . .	8–14
Connecting GSLogic PC to GS20(X) PLC . . . . .	8–14
Basic Ladder Program Example. . . . .	8–19
Program Download . . . . .	8–21
Program Monitoring. . . . .	8–22
GS20(X) GSLogic Program Examples. . . . .	8–23
APPENDIX A: ACCESSORIES. . . . .	A–1
Fuses/Circuit Breakers. . . . .	A–2
Recommended Fuse Specifications for the DC-side of Common DC-Bus . . . . .	A–4
Standard Footprint EMC Filter and Zero Phase Reactor . . . . .	A–6
Filter Dimensions . . . . .	A–8
High Performance EMI Input Filters . . . . .	A–9
EMI Filter Installation . . . . .	A–10
Recommended Motor Cable Length. . . . .	A–11
Line Reactors / Voltage Time Filters . . . . .	A–12
Line/Load Reactors Selection Charts. . . . .	A–14
Line Reactor Applications and Wiring Connections. . . . .	A–15
Recommended Cable Length. . . . .	A–17
Dynamic Braking . . . . .	A–19
Braking Units. . . . .	A–19
Choosing and Installing a Braking Resistor . . . . .	A–20
EMC Shield & Earthing Plates . . . . .	A–21
GS20 EMC Shield Plates. . . . .	A–21
GS20X Earthing Plates. . . . .	A–25
Capacitive Filter (GS20A-CAPF). . . . .	A–28
Conduit Box . . . . .	A–30
Conduit Box Installation. . . . .	A–32
Disconnect Switch. . . . .	A–34
Disconnect Switch Compatibility. . . . .	A–34
DSC Series Dimensions . . . . .	A–34
Installing the Disconnect Switch . . . . .	A–35
Replacement Fan Kit . . . . .	A–38
Remote Keypad Mounting . . . . .	A–41
DIN Rail Mounting . . . . .	A–42
GS20 DIN Rail Installation. . . . .	A–43
Mounting Adapter Plate . . . . .	A–44
Mounting Adapter Plate Dimensions . . . . .	A–45
Mounting Adapter Plate Installation. . . . .	A–47
Optional Advanced Keypad. . . . .	A–49
GS20(X) Display Screens for GS4-KPD . . . . .	A–52
Keypad Fault Codes . . . . .	A–60
Keypad Panel Mounting Kit GS4-BZL . . . . .	A–61

<b>APPENDIX B: OPTIONAL I/O AND COMMUNICATION CARDS . . . . .</b>	<b>B-1</b>
<b>Introduction . . . . .</b>	<b>B-2</b>
Option Card Installation. . . . .	B-2
Removing the Card Slot Cover . . . . .	B-2
Option Card Wiring . . . . .	B-3
GS20A-BPS. . . . .	B-8
GS20A-CM-ENETIP and GS20A-CM-EIP2 . . . . .	B-9
GS20A-CM-ENETIP/EIP2 LED Indicators and Troubleshooting. . . . .	B-11
GS20A-CM-ENETIP/EIP2 IP Address and Network Configuration . . . . .	B-13
GS20A-CM-ENETIP/EIP2 Common Parameters . . . . .	B-14
Modbus TCP or EtherNet/IP Protocol Selection. . . . .	B-15
Modbus TCP Protocol Configuration . . . . .	B-16
GS20A-CM-ENETIP/EIP2 Control Words - Modbus Addressing. . . . .	B-16
GS20A-CM-ENETIP/EIP2 Status Words - Modbus Addressing. . . . .	B-17
EtherNet/IP Protocol . . . . .	B-20
GS20A-CM-ENETIP/EIP2 EtherNet/IP I/O Messaging (Implicit Messaging). . . . .	B-20
GS20A-CM-ENETIP/EIP2 Explicit Messaging . . . . .	B-26
GS20A-CM-ENETIP/EIP2 EtherNet/IP Basic Registers. . . . .	B-30
GS20A-CM-ENETIP/EIP2 EtherNet/IP Alarm Register. . . . .	B-31
EtherNet/IP Communication Card Register Settings . . . . .	B-32
Using Speed Mode as a Control Method . . . . .	B-32
<b>APPENDIX C: DIGITAL AND ANALOG I/O PARAMETER MAPS . . . . .</b>	<b>C-1</b>
<b>Introduction . . . . .</b>	<b>C-2</b>
GS20(X) Digital Inputs. . . . .	C-3
GS20(X) Digital Outputs . . . . .	C-4
GS20(X) Analog Common Parameters. . . . .	C-5
GS20(X) Analog Input 1 Parameters . . . . .	C-5
GS20(X) Analog Input 2 Parameters . . . . .	C-6
GS20(X) Analog Output 1 Parameters . . . . .	C-8
GS20(X) Frequency Output Parameters . . . . .	C-8
<b>APPENDIX D: USING GS20(X) AC DRIVES WITH AUTOMATIONDIRECT PLCs. . . . .</b>	<b>D-1</b>
Appendix D Overview. . . . .	D-2
Sinking/Sourcing Basics. . . . .	D-2
GS20(X)-to-PLC I/O Wiring Examples . . . . .	D-4
Drive Wired with DC Sinking Inputs (PLC output card is sourcing) . . . . .	D-4
Drive Wired with DC Sourcing Inputs (PLC output card is sinking) . . . . .	D-4
Drive Wired with DC Sinking Outputs (PLC input card is sourcing) . . . . .	D-5
Drive Wired with DC Sourcing Outputs (PLC input card is sinking) . . . . .	D-5
Drive Relay Outputs Wired with Sinking PLC Modules . . . . .	D-6
Drive Relay Outputs Wired with Sourcing PLC Modules . . . . .	D-6
Drive Analog Inputs . . . . .	D-7
Analog Input Wired for Voltage and Current . . . . .	D-7
Drive Analog Outputs . . . . .	D-8
Analog Output Wired for Voltage and Current . . . . .	D-8
Drive Frequency Output (High-speed pulse output) . . . . .	D-9
Communication with GS20(X) Drives . . . . .	D-10
Getting Started. . . . .	D-10
Serial Modbus Monitoring and Control . . . . .	D-12
Ethernet/IP and Modbus TCP Monitor and Control . . . . .	D-17

GS20A-CM-ENETIP/EIP2 EtherNet/IP I/O Messaging (Implicit Messaging) . . . . .	D-18
Program Examples Using AutomationDirect PLCs . . . . .	D-19
Modbus RTU CLICK Program Example . . . . .	D-19
EtherNet/IP Productivity PLC Example . . . . .	D-26
<b>APPENDIX E: SAFE TORQUE OFF FUNCTION . . . . .</b>	<b>E-1</b>
<b>Introduction . . . . .</b>	<b>E-2</b>
Safe Function Failure Rate . . . . .	E-2
Safe Torque Off Terminal Function Description . . . . .	E-2
Internal STO Circuit Wiring Diagrams . . . . .	E-3
Control Loop Wiring . . . . .	E-4
STO Parameters . . . . .	E-5
Timing Diagram Description . . . . .	E-6
Error Code and Troubleshooting Instructions . . . . .	E-9
Test and Fault Confirmation . . . . .	E-11
<b>APPENDIX F: PID CONTROL . . . . .</b>	<b>F-1</b>
Function of PID Control . . . . .	F-2
What Does PID Control Accomplish? . . . . .	F-2
PID Control Analogy . . . . .	F-2
Common Applications for PID Control . . . . .	F-3
Definition of PID Loop "Directions" . . . . .	F-3
Forward-Acting PID Loop (Heating Loop) (Negative-Feedback Loop) . . . . .	F-3
Reverse-Acting PID Loop (Cooling Loop) (Positive-Feedback Loop) . . . . .	F-3
PID Control Overview . . . . .	F-4
Concept of GS20(X) PID Control & Tuning . . . . .	F-5
Proportional Gain (P) . . . . .	F-5
Integral Time (I) . . . . .	F-5
Derivative Value (D) . . . . .	F-6
Proportional Integral Control (PI) . . . . .	F-6
Proportional Derivative Control (PD) . . . . .	F-6
Proportional Integral Derivative Control (PID) . . . . .	F-6
Tuning Example for PID Control . . . . .	F-7
<b>DURApulse GS20/GS20-GS2mode Parameters Involved in PID Control . . . . .</b>	<b>F-9</b>
<b>APPENDIX G: GS2 TO GS20 CONVERSION . . . . .</b>	<b>G-1</b>
Replacement of GS2 Drives with GS20 . . . . .	G-2
Step 1: Choosing a Compatible GS20 Model . . . . .	G-3
Step 2: Reviewing the Mounting Dimension Differences . . . . .	G-4
Step 3: Reviewing the Fusing Guidelines . . . . .	G-6
Step 4: Reviewing the Main Power Wiring Specifications . . . . .	G-7
Step 5: Reviewing the Control Wiring Specifications . . . . .	G-9
Step 6: Review GS2 Accessories . . . . .	G-12
Step 7: Converting Parameter Structure and GS2 Mode (Optional) . . . . .	G-13
Step 8: Converting Your GS2 GSoft Parameter File to a GS20 GSoft2 File . . . . .	G-30

