

DURApulse GS30 DRIVE USER MANUAL TABLE OF CONTENTS



CONTENTS

GS30 USER MANUAL TOC

WARNINGS AND TRADEMARKS	W-1
~ WARNING ~	W-1
Trademarks.	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
Warnings	W-3
DURAPULSE GS30 USER MANUAL REVISION HISTORY	H-1
DURAPULSE GS30 DRIVE USER MANUAL TABLE OF CONTENTS	TOC-1
CHAPTER 1: GETTING STARTED.	1-1
User Manual Overview	1-2
Overview of This Publication	1-2
Supplemental Publications	1-2
Technical Support	1-2
Produced By	1-2
Special Symbols	1-2
Purpose of AC Drives	1-3
Selecting the Proper Drive Rating	1-3
Determine Motor Full-Load Amperage (FLA)	1-3
Determine Motor Overload Requirements	1-3
Determine Application Type; Constant Torque or Variable Torque	1-3
Installation Altitude	1-4
Determine Maximum Enclosure Internal Temperature	1-5
Derate Output Current Based on Carrier Frequency (if necessary)	1-7
GS30 Variable Torque Carrier Frequency Derating	1-7
DURAPULSE GS30 AC Drive Environmental Information.	1-11
Storage and Transportation.	1-11
GS30 Environmental Conditions	1-11
GS30 General Specifications	1-12
DURAPULSE GS30 AC Drive Specifications	1-14
230V Class – 1-Phase Model-Specific Specifications	1-14
230V Class – 3-Phase Model-Specific Specifications	1-15
460V Class – 3-Phase Model-Specific Specifications	1-18
Receiving and Inspection	1-21
Drive Package Contents.	1-21
Model Number Explanation	1-22
Nameplate Information.	1-22
CHAPTER 2: INSTALLATION AND WIRING.	2-1
Drive Models by Frame Size	2-2

Installation	2-2
Minimum Clearances and Air Flow.	2-3
GS30 Series Minimum Clearance Distances	2-3
GS30 Airflow and Power Dissipation	2-4
Dimensions	2-5
Circuit Connections – RFI Jumper	2-15
RFI Jumper Removal.	2-15
Isolating Main Power from Ground	2-16
Floating Ground System (IT Systems)	2-17
Asymmetric Ground System (Corner Grounded TN Systems)	2-17
Circuit Connections – Warnings and Notes	2-18
Danger!.	2-18
Wiring Terminal Access	2-22
Control Terminal Access.	2-22
Main Circuit Wiring Terminals	2-23
Main Terminal Specifications	2-23
Wiring Terminal Connector Dimensions – Main-Circuit Terminals.	2-25
Main Terminal Diagrams	2-26
Main Circuit Wiring Diagrams	2-29
Control Circuit Wiring Terminals	2-30
GS30 Control Terminal Specifications	2-30
GS30 Control Terminal Block Diagram & Wiring Specifications	2-33
Control Terminal Wiring Instructions.	2-34
Control Circuit Wiring Diagrams	2-35
Digital Inputs.	2-35
System Wiring Diagram.	2-36
Full I/O Wiring Diagram (Frame A-G)	2-37
Full I/O Wiring Diagram (Frame H-I)	2-38
CHAPTER 3: KEYPAD OPERATION AND QUICKSTART	3-1
The DURApulse GS30 Digital Keypad	3-2
Keypad Indicator LEDs.	3-3
GS30 Keypad Operation	3-4
GS30 Keypad Function Examples.	3-4
Main Page	3-5
Frequency Command Settings	3-5
Parameter Settings	3-6
PLC Settings	3-6
Setting Direction.	3-6
Application Settings.	3-7
Reference Table for Digital LED Character Display	3-8
CHAPTER 4: AC DRIVE PARAMETERS	4-1
Introduction	4-3
Video Tutorials.	4-3
DURAPULSE GS30 Parameter Summary.	4-3
Drive Parameters Summary (P00.xx)	4-3
Basic Parameters Summary (P01.xx)	4-11
Digital Input/Output Parameters Summary (P02.xx)	4-14
Analog Input/Output Parameters Summary (P03.xx)	4-21
Multi-Step Speed Parameters Summary (P04.xx)	4-24

Motor Parameters Summary (P05.xx)	4-26
Protection Parameters Summary (P06.xx)	4-29
Special Parameters Summary (P07.xx)	4-36
High-Function PID Parameters Summary (P08.xx)	4-39
Communication Parameters Summary (P09.xx)	4-42
Speed Feedback Control Parameters Summary (P10.xx)	4-45
Advanced Parameters Summary (P11.xx)	4-48
Tension Control Parameters Summary (P12.xx)	4-50
Macro / User Defined Macro Parameters Summary (P13.xx)	4-54
Protection Parameters (2) Summary (P14.xx)	4-56
DURAPULSE GS30 Parameter Details	4-60
Explanation of Parameter Details Format	4-60
Group P00.xx Details – Drive Parameters	4-61
Group P01.xx Details – Basic Parameters	4-89
Group P02.xx Details – Digital Input/Output Parameters	4-100
Group P03.xx Details – Analog Input/Output Parameters	4-120
Analog Input Parameter Examples	4-131
Group P04.xx Details – Multi-Step Speed Parameters	4-154
Group P05.xx Details – Motor Parameters	4-156
Group P06.xx Details – Protection Parameters	4-166
Group P07.xx Details – Special Parameters	4-189
Group P08.xx Details – High-function PID Parameters	4-202
Group P09.xx Details – Communication Parameters	4-218
Group P10.xx Details – Speed Feedback Control Parameters	4-234
Group P11.xx Details – Advanced Parameters	4-247
Group 12.xx Details – Tension Control Parameters	4-258
Group P13.xx Details – Macro / User Defined Parameters	4-280
Group P14.xx Details – Protection Parameters (2)	4-293
Adjustments and Applications	4-306
IMFOC Field oriented control Mode with Induction Motor (IM) Adjustment Procedure	4-306
IMTQC Sensorless Torque Mode with Induction Motor (IM) Adjustment Procedure	4-310
PMSVC Sensorless Vector mode with permanent magnet motor adjustment procedure	4-312
PMFOCPG - Field-Oriented Control with PMAC motor with encoder	4-316
IPM SVC Sensorless Field-Oriented Control with interior PMAC motor	4-325
Torque Calculation and Torque Parameter Setup Reference	4-332
Drive Motor Torque Calculation	4-332
GS30 Drive - Torque Limit in Speed Mode Detailed Explanation	4-333
Speed Mode with Torque Limits via Analog Input	4-334
GS30 Drive Quick Reference- Alternating between Torque and Speed Mode	4-335
CHAPTER 5: SERIAL COMMUNICATIONS	5-1
Communications Parameters Summary	5-2
Summary – Serial Communication Parameters	5-2
Serial Modbus Status Addresses	5-6
Status Addresses (Read Only)	5-6
Serial Communications Overview	5-9
Serial Communications Connectivity	5-9
Minimum AC Drive Parameter Settings For Serial Communication	5-9
Common Third-Party Modbus RTU Masters	5-10
AutomationDirect PLCs as Modbus Master	5-10

Connecting Communication Cables	5-11
Detailed Serial Modbus Communication Information	5-13
Data Format	5-13
Communication Protocol	5-14
CMD (Command Code) and DATA (Data Characters).	5-15
CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING	6-1
Maintenance and Inspections	6-2
Monthly Inspection	6-2
Annual Inspection	6-2
Recharge Capacitors (for drives not in service)	6-3
Recommended Inspection Schedules	6-4
Troubleshooting	6-8
Warning Codes.	6-8
Fault Codes.	6-26
Typical AC Drive Problems and Solutions	6-53
Grease and Dirt Problems.	6-53
Fiber Dust Problem	6-54
Corrosion Problem.	6-55
Industrial Dust Problem.	6-56
Wiring and Installation Problem	6-57
Digital Input/Output Terminal Problems.	6-58
CHAPTER 7: GSOFT2 – GETTING STARTED	7-1
GS30 Drive Configuration Software	7-2
System Requirements	7-2
Installation Guide	7-3
System Requirement Configuration	7-3
Software Installation.	7-4
Opening GSoft2 Software Program	7-6
Software Functions	7-7
Firmware Upgrade Notes.	7-12
GSoft2 Help File Note.	7-12
CHAPTER 8: GSLOGIC INTRODUCTION	8-1
Purpose of This Chapter	8-2
For More Detailed Information.	8-2
GSLogic Introduction	8-2
GS30 PLC Summary	8-3
Introduction	8-3
Notes on Using GSLogic, the GS30 PLC, and the GS30 Drive	8-4
Getting Started	8-7
Connect to PLC.	8-7
Controlling Drive IO with the PLC	8-9
Installation of GSLogic Programming Software.	8-11
System Requirements	8-11
About Getting Started.	8-11
Technical Support	8-11
Installing GSLogic Programming Software	8-12
Program Writing.	8-14
Connecting GSLogic PC to GS30 PLC	8-14

Basic Ladder Program Example	8-19
Program Download	8-21
Program Monitoring.	8-22
GS30 GSLogic Program Examples	8-23
APPENDIX A: ACCESSORIES.	A-1
Fuses/Circuit Breakers.	A-2
Recommended Fuse Specifications for the DC Side of Common DC Bus.	A-3
Standard Footprint EMC Filter and Zero Phase Reactor	A-5
High Performance EMI Input Filters	A-7
EMI Filter Installation	A-8
Recommended Motor Cable Length.	A-9
Line Reactors / Voltage Time Filters	A-10
Line/Load Reactors Selection Charts.	A-12
Line Reactor Applications and Wiring Connections.	A-13
Recommended Cable Length.	A-15
Dynamic Braking	A-17
Braking Units.	A-17
Choosing and Installing a Braking Resistor	A-19
EMC Shield & Earthing Plates	A-20
GS30 EMC Shield Plates.	A-20
Capacitive Filter (GS20A-CAPF).	A-26
Conduit Box	A-28
Conduit Box Installation.	A-31
Replacement Fan Kit	A-33
Remote Keypad Mounting	A-37
DIN Rail Mounting	A-38
GS30 DIN Rail Installation.	A-39
Mounting Adapter Plate	A-40
Mounting Adapter Plate Dimensions	A-41
Mounting Adapter Plate Installation.	A-43
Optional Advanced Keypad.	A-45
GS30 Display Screens for GS4-KPD	A-48
Keypad Fault Codes	A-56
Keypad Panel Mounting Kit GS4-BZL	A-57
APPENDIX B: OPTIONAL I/O AND COMMUNICATION CARDS.	B-1
Introduction	B-3
Option Card Installation.	B-3
Removing the Card Slot Cover	B-5
Option Card Wiring	B-5
GS30A-BPS.	B-17
GS30A-CM-EIP1 and GS30A-CM-EIP2.	B-18
Connecting Comm Card to PC	B-19
GS30A-CM-EIPx LED Indicators and Troubleshooting	B-20
GS30A-CM-EIPx IP Address and Network Configuration.	B-22
GS30A-CM-EIPx Common Parameters.	B-23
Modbus TCP or EtherNet/IP Protocol Selection.	B-24
Modbus TCP Protocol Configuration	B-25
GS30A-CM-EIPx Control Words – Modbus Addressing	B-25

GS30A-CM-EIPx Status Words – Modbus Addressing	B-26
EtherNet/IP Protocol	B-29
GS30A-CM-EIPx EtherNet/IP I/O Messaging (Implicit Messaging)	B-29
GS30A-CM-EIPx Explicit Messaging	B-35
GS30A-CM-EIPx EtherNet/IP Basic Registers	B-39
GS30A-CM-EIPx EtherNet/IP Alarm Register	B-40
EtherNet/IP Communication Card Register Settings	B-41
Using Speed Mode as a Control Method	B-41
GS30A-CM-ECAT	B-42
Common Parameters	B-43
LED Indicators and Troubleshooting	B-43
EtherCAT Connection Setup	B-44
Introduction to EtherCAT	B-44
System Setup.	B-46
CiA402 Equipment Regulation	B-48
Communication Warning / Fault Table.	B-51
Description of Object Specification	B-52
Object Dictionary	B-52
Detailed Information about Objects	B-54
EtherCAT Firmware Update	B-65
GS30A-06CDD	B-68
GS30A-2AD2DA	B-69
GS30A-02TRC	B-70
GS30A-03TRA	B-71
GS30A-FB-LD	B-72
Wiring Diagrams.	B-73
GS30A-FB-OC	B-75
Wiring Diagrams.	B-76
APPENDIX C: DIGITAL AND ANALOG I/O PARAMETER MAPS	C-1
Introduction	C-2
GS30 Digital Inputs	C-3
GS30 Digital Outputs	C-4
GS30 Analog Common Parameters	C-5
GS30 Analog Input 1 Parameters	C-5
GS30 Analog Input 2 Parameters	C-6
GS30 Analog Output 1 Parameters	C-8
GS30 Frequency Output Parameters.	C-8
APPENDIX D: USING GS30 AC DRIVES WITH AUTOMATIONDIRECT PLCs	D-1
Appendix D Overview.	D-2
Sinking/Sourcing Basics.	D-2
GS30-to-PLC I/O Wiring Examples.	D-4
Drive Wired with DC Sinking Inputs (PLC output card is sourcing)	D-4
Drive Wired with DC Sourcing Inputs (PLC output card is sinking)	D-4
Drive Wired with DC Sinking Outputs (PLC input card is sourcing)	D-5
Drive Wired with DC Sourcing Outputs (PLC input card is sinking)	D-5
Drive Relay Outputs Wired with Sinking PLC Modules	D-6
Drive Relay Outputs Wired with Sourcing PLC Modules	D-6
Drive Analog Inputs	D-7

Analog Input Wired for Voltage and Current	D-7
Drive Analog Outputs	D-8
Analog Output Wired for Voltage and Current	D-8
Drive Frequency Output (High-speed Pulse Output)	D-9
Communication with GS30 Drives	D-10
Getting Started.	D-10
Serial Modbus Monitoring and Control	D-12
Ethernet/IP and Modbus TCP Monitor and Control	D-17
GS30A-CM-EIPx EtherNet/IP I/O Messaging (Implicit Messaging)	D-18
Modbus Remote I/O Control Applications (use MODRW).	D-19
Program Examples Using AutomationDirect PLCs	D-20
APPENDIX E: SAFE TORQUE OFF FUNCTION	E-1
Introduction	E-2
Safe Function Failure Rate	E-2
Safe Torque Off Terminal Function Description	E-2
Internal STO Circuit Wiring Diagrams	E-3
Control Loop Wiring.	E-4
STO Parameters	E-5
Timing Diagram Description	E-6
Error Code and Troubleshooting Instructions.	E-9
Test and Fault Confirmation.	E-11
APPENDIX F: PID CONTROL	F-1
Function of PID Control.	F-2
What Does PID Control Accomplish?	F-2
PID Control Analogy.	F-2
Common Applications for PID Control	F-3
Definition of PID Loop "Directions"	F-3
Forward-Acting PID Loop (Heating Loop) (Negative-Feedback Loop)	F-3
Reverse-Acting PID Loop (Cooling Loop) (Positive-Feedback Loop)	F-3
PID Control Overview	F-4
Concept of GS30 PID Control & Tuning.	F-5
Proportional Gain (P)	F-5
Integral Time (I)	F-5
Derivative Value (D)	F-6
Proportional Integral Control (PI)	F-6
Proportional Derivative Control (PD).	F-6
Proportional Integral Derivative Control (PID)	F-6
Tuning Example for PID Control	F-7
DURApulse GS30 Parameters Involved in PID Control	F-9
DURApulse GS30 Parameters Involved in Tension Control	F-11

BLANK PAGE