



ERRATA SHEET

THIS ERRATA SHEET CONTAINS CORRECTIONS OR CHANGES MADE AFTER THE PUBLICATION OF THIS USER MANUAL.

AutomationDirect.com

1-800-633-0405

PRODUCT FAMILY: *DURAPULSE GS4 AC Drives*

USER MANUAL NUMBER: *GS4_UMW*

ERRATA SHEET NUMBER: *Errata #01*

USER MANUAL REV & DATE: *1st Ed, Rev G; 07/18/2019*

ERRATA SHEET DATE: *09/18/2019*

*For the complete GS4 DURApulse user manual, please refer to the AutomationDirect website:
<https://cdn.automationdirect.com/static/manuals/gs4m/gs4m.html>*

APPENDIX B, PG B-21:

Revise address “2” of “Communication Protocol Parameter Address Definition” “Commands to GS4” as shown:

Communication Protocol Parameter Address Definitions			
<i>Parameter Content Parameters Set in GS4</i>	<i>Address</i>	<i>Definition</i>	
	
Commands to GS4	2	bit 0	1: E.F. = ON (trigger an External Fault)
		bit 1	1: Reset command
		bit 2	1: External interruption (B,B) = ON
		bit 3~15	reserved
Monitor GS4 status	