

GS Series AC Drive ETHERNET INTERFACE USER MANUAL

Please include the Manual Number and the Manual Issue, both shown below, when communicating with Technical Support regarding this publication.

Manual Number: GS-EDRV-M-WO

Issue: Third Edition, Revision B

Issue Date: 11/2017

Publication History		
Issue	Date	Description of Changes
First Edition	8/02/02	Original
1st Ed, Rev A	3/14/03	Added Input WORD functions
1st Ed, Rev B	8/12/05	Website publication only; Corrected Output Word Map & Warnings
Second Edition	02/2010	Revised "Reading/Writing From/To the Drive" & "Input/Output Word Map" sections
Third Edition	05/2011	Added GS-EDRV100 product information and specifications.
3rd Ed, Rev A	12/2011	User manual name change to "GS-EDRV-M-WO" (added "-WO") GS series AC drive connection parameter settings
3rd Ed, Rev B	11/2017	Updated GS-EDRV100 general information to include Do-more CPU. Added additional info about GS-EDRV100 operation.

BLANK PAGE