

# TABLE OF CONTENTS

---



## Table of Contents

### Chapter 1: Introduction to the CTRIO Module

|   |     |
|---|-----|
| <b>General Information about the CTRIO Module</b> ..... | 1-2 |
| CTRIO Workbench .....                                   | 1-2 |
| Supported CPUs .....                                    | 1-2 |
| Typical Counter Applications: .....                     | 1-2 |
| <b>Specifications</b> .....                             | 1-3 |

### Chapter 2: Installation and Field Wiring

|  |     |
|--|-----|
| <b>How to Install the CTRIO Module</b> .....     | 2-2 |
| CPU and CTRIO Compatibility Chart .....          | 2-2 |
| <b>Jumpers</b> .....                             | 2-3 |
| <b>Wiring the CTRIO Module</b> .....             | 2-4 |
| PNP Field Device .....                           | 2-5 |
| NPN Field Device .....                           | 2-5 |
| <b>Solid State Input Device Wiring</b> .....     | 2-5 |
| <b>Output Schematic</b> .....                    | 2-6 |
| <b>Quadrature Encoder Wiring Example</b> .....   | 2-7 |
| <b>Stepper Drive Wiring Example</b> .....        | 2-7 |
| <b>TTL Quadrature Encoder Field Wiring</b> ..... | 2-8 |
| <b>TTL Input Wiring</b> .....                    | 2-9 |

## Chapter 3: CTRIO Workbench

|   |      |
|---|------|
| <b>What is CTRIO Workbench?</b> .....                             | 3-2  |
| Installing CTRIO Workbench .....                                  | 3-2  |
| <b>Getting Started with CTRIO Workbench</b> .....                 | 3-2  |
| Linking to CTRIO Module in DirectSOFT32 .....                     | 3-3  |
| Successful Connection .....                                       | 3-3  |
| Choose “Program Mode” to Configure the CTRIO Module .....         | 3-4  |
| Choose “Run Mode” to Start Processing Pulses with the CTRIO ..... | 3-4  |
| Using the Configure IO Dialog .....                               | 3-5  |
| Supported Functions .....   | 3-6  |
| <b>Input Function Selections</b> .....                            | 3-7  |
| Counter Function .....  | 3-7  |
| Quad Counter .....  | 3-9  |
| Pulse Catch .....   | 3-10 |
| Edge Timer .....  | 3-11 |
| Dual Edge Timer .....   | 3-12 |
| Reset 1 and Reset 2 .....   | 3-14 |
| A Word About Soft Resets .....                                    | 3-14 |
| <b>Introduction to the Scaling Wizard</b> .....                   | 3-16 |
| Scaling Wizard Examples for Counter Functions .....               | 3-16 |
| Position Scaling (Counter) .....                                  | 3-17 |
| Important Note About Rate Measurement Applications .....          | 3-18 |
| Rate Scaling (Counter) .....                                      | 3-18 |
| Using the Scaling Wizard with Timer Functions .....               | 3-19 |
| Interval Scaling (Timer) .....                                    | 3-19 |
| <b>Using the Monitor I/O Dialog</b> .....                         | 3-20 |
| <b>Discrete Outputs</b> .....                                     | 3-21 |
| <b>Creating and Using the Output Preset Tables</b> .....          | 3-22 |
| <b>I/O Map Dialog</b> .....                                       | 3-23 |

---

## Chapter 4: Program Control

|  |      |
|--|------|
| Memory Map for Inputs from CTRIO to CPU .....                  | 4-2  |
| Memory Map for Outputs from CPU to CTRIO .....                 | 4-3  |
| CTRIO Input Parameter Definitions .....                        | 4-4  |
| Function Status and Control Bit Definitions .....              | 4-5  |
| Runtime Changes to the Preset Tables .....                     | 4-6  |
| Runtime Changes Cont'd .....                                   | 4-7  |
| Entry Number and Entry Type for Edit Table Entry Command ..... | 4-7  |
| Edit Level Response Command .....                              | 4-8  |
| Addressing Conventions .....                                   | 4-9  |
| (with V-memory Examples for DirectLOGIC PLCs)                  |      |
| Example for Bit-accessed Data in PLC CPUs .....                | 4-9  |
| Addressing High and Low Byte of Word Parameters .....          | 4-9  |
| Addressing High and Low Word of DWord Parameters .....         | 4-9  |
| Pulse Output Commands .....                                    | 4-10 |
| Status Registers (status bit from CTRIO) .....                 | 4-12 |
| Pulse Output Profiles .....                                    | 4-12 |
| Control Registers (control DWords, Words, and bits .....       | 4-13 |
| Running a Trapezoid or S-Curve Profile on CTRIO Y0 & Y1 .....  | 4-14 |
| Trapezoid or S-Curve .....                                     | 4-14 |
| Dynamic Positioning .....                                      | 4-15 |
| Dynamic Positioning using the CTRIO Y0 and Y1 .....            | 4-16 |
| Pulse Output at Velocity .....                                 | 4-17 |
| Run Velocity control on CTRIO Y0 & Y1 .....                    | 4-17 |
| Pulse Output to Input Limit .....                              | 4-18 |
| Run Velocity on CTRIO Y0 & Y1 until Discrete Input Limit ..... | 4-18 |
| Pulse Output to Input Limit Examples .....                     | 4-19 |
| Pulse Output to Position Examples .....                        | 4-20 |
| Run Velocity on CTRIO until Function Input Value .....         | 4-20 |
| Run Velocity on CTRIO until Function Value Example .....       | 4-21 |