

# Table of Contents

---

## Chapter 1: Introduction

<b>Manual Overview</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
Other Reference Materials .....	1-2
Who Should Read this Manual .....	1-2
Quality Technical Manuals and Technical Support .....	1-2
Chapters .....	1-3
Appendices .....	1-3
Other Resources .....	1-3
<b>ECOM Module Introduction</b> .....	<b>1-4</b>
ECOM Communication Possibilities .....	1-4
Your Network PC .....	1-5
<b>Frequently Asked Questions</b> .....	<b>1-6</b>

## Chapter 2: Setup and Installation

<b>ECOM Network Identifiers</b> .....	<b>2-2</b>
Module ID .....	2-3
Name .....	2-3
IP Address .....	2-4
Ethernet Address .....	2-4
Using Multiple Network Identifiers .....	2-4
<b>Setting the Module ID with the DIP Switch</b> .....	<b>2-5</b>
The H2-ECOM (-F) DIP Switch .....	2-5
The H4-ECOM (-F) DIP Switch .....	2-6
<b>Running NetEdit Software</b> .....	<b>2-7</b>
Operating System Requirements .....	2-7
The NetEdit Screen .....	2-7
<b>Features of the NetEdit Screen</b> .....	<b>2-8</b>
Protocol .....	2-8
Adding Network Protocol Support to Your PC .....	2-9
Module .....	2-9
Module Information .....	2-10
Ethernet Stats .....	2-10
Configuration .....	2-10
RX/WX Settings .....	2-11
Using <i>DirectSOFT32</i> for ECOM Setup .....	2-12
<b>Inserting the ECOM Module in the PLC Base</b> .....	<b>2-13</b>
DL205 Slot Choices .....	2-13
H2-ECOM (-F) Module Installation .....	2-13
DL405 Slot Choices .....	2-14
H4-ECOM (-F) Module Installation .....	2-15

---

<b>ECOM Network Layouts</b> .....	<b>2-15</b>
<b>Network Cabling</b> .....	<b>2-17</b>
ECOM Supports Two Standards .....	2-17
10BaseT Networks .....	2-17
10BaseT Connections .....	2-18
UTP Cable .....	2-18
10BaseFL Connections .....	2-18
Fiber Optic Cable .....	2-18
Fiber Optic Module ST Connector .....	2-18
<b>Maximum Cable Length</b> .....	<b>2-19</b>
<b>Maximum Number of ECOM Modules on the Network</b> .....	<b>2-20</b>

## Chapter 3: RLL Programming for Communications

<b>PLC-to-PLC Communications</b> .....	<b>3-2</b>
<b>How RLL is Used for Communications</b> .....	<b>3-2</b>
<b>Network Instructions</b> .....	<b>3-3</b>
Read (RX) and Write (WX) Instructions .....	3-3
Building the Read (RX) or Write (WX) Routine .....	3-3
The First LD Instruction .....	3-3
The Second LD Instruction .....	3-4
The LDA Instruction .....	3-4
Write (WX) Instruction .....	3-5
<b>Addressing the Different Memory Types</b> .....	<b>3-6</b>
Bit Memory .....	3-6
Word Memory and Aliases .....	3-6
<i>Direct</i> SOFT is Flexible .....	3-7
D2-240 CPU .....	3-7
D2-250-1 CPU .....	3-7
D2-260 CPU .....	3-8
D4-430 CPU .....	3-9
D4-440 CPU .....	3-9
D4-450 CPU .....	3-10
<b>Special Relays for Communications</b> .....	<b>3-11</b>
<b>Example Program with One Read Instruction</b> .....	<b>3-13</b>
Program for the Initiating PLC .....	3-13
Program for the Responding PLC .....	3-13
Rung 1 .....	3-14
Rung 2 .....	3-14
Rung 3 .....	3-14
Rung 4 .....	3-14
Program for the Responding PLC .....	3-14
<b>Example Program with One Write Instruction</b> .....	<b>3-15</b>
Program for the Initiating PLC .....	3-15
Program for the Responding PLC .....	3-15
Rung 1 .....	3-16
Rung 2 .....	3-16
Rung 3 .....	3-16

Rung 4 .....	3-16
Program for the Responding PLC .....	3-16
<b>Integrating Multiple Read and Write Instructions .....</b>	<b>3-17</b>
Interlocking Relays .....	3-17
First RX/WX Instruction .....	3-18
Second RX/WX Instruction .....	3-19
Third RX/WX Instruction .....	3-19
Returning to the First RX/WX Instruction .....	3-19
Shift Register .....	3-20
Store If Equal .....	3-20
First RX/WX Instruction .....	3-21
Second RX/WX Instruction .....	3-21
Third RX/WX Instruction .....	3-21
<b>Chapter 4: Maintenance and Troubleshooting</b>	
<b>Isolating a Communication Problem .....</b>	<b>4-2</b>
Diagnostic "Tools" .....	4-2
<b>Troubleshooting Chart .....</b>	<b>4-2</b>
<b>ECOM Module Diagnostic LEDs .....</b>	<b>4-4</b>
ECOM LEDs .....	4-4
Link Good Indicator .....	4-4
ACT Indicator .....	4-4
Error Indicator .....	4-4
<b>Using NetEdit for Troubleshooting .....</b>	<b>4-5</b>
Select a Module .....	4-5
Module Information .....	4-5
Change Protocol .....	4-6
Ethernet Stats .....	4-6
RX/WX Settings .....	4-6
Record the Module Settings .....	4-7
<b>Replacing the ECOM Module .....</b>	<b>4-7</b>
<b>Diagnosing Network Cable Problems .....</b>	<b>4-8</b>
<b>Appendix A: General Specifications</b>	
<b>General Specifications .....</b>	<b>A-2</b>
ECOM Specifications .....	A-2
<b>Ethernet Standards .....</b>	<b>A-3</b>
<b>Index</b>	