

# **ERM AND ERM WORKBENCH DEFAULT SETTINGS**

---



## **In This Appendix...**

ERM and ERM Workbench Factory Default Settings.....	C-2
---	-----

## ERM and ERM Workbench Factory Default Settings

The following factory default settings or values can be changed by using the tools within the ERM Workbench utility.

Item	Default
Protocol	IPX
Address Mode	Ethernet Address
ERM Timeout to Slave	25ms
ERM Retries	1
Slave Watchdog	250ms
ERM Pet Slave Watchdog	0 (disabled)
ERM Consecutive Comm Failures to Slave Before Placing Slave in Standby Mode	5
Slave Padding	0
Bit Input Address	<i>Direct</i> .LOGIC: V40414 (X300); Do-more!: (DLX300)
Bit Output Address	<i>Direct</i> .LOGIC: V50514 (Y300) Do-more!: (DLY300)
Word Input Address	<i>Direct</i> .LOGIC: V2000 Do-more!: DLV2000
Word Output Address	<i>Direct</i> .LOGIC: V2100 Do-more!: DLV2100
Standby Cycle Time	500ms
Unsupported Slave Cycle Time	1000ms
PLCSan Timeout	100ms