

TABLE OF CONTENTS



Chapter 1 - Getting Started

Introduction.....	1-2
Purpose of this Manual.....	1-2
Purpose of this Chapter.....	1-2
Online Help Files and Other Documentation.....	1-2
Technical Support.....	1-2
Conventions Used.....	1-3
Key Topics for Each Chapter.....	1-3
Before You Begin	1-4
Do-more! PLC System Components	1-5
Do-more! Designer Software System Requirements.....	1-5
Step 1: Install Do-more Designer Software	1-6
Step 2: Launch Do-more! Designer Software	1-9
Step 3: Install Hardware	1-11
Step 4: Apply Power to the Do-more! PLC	1-12
Step 5: Establish Communication	1-13
Step 6: Verify Hardware Configuration	1-19
Step 7: Create a Ladder Logic Program.....	1-23
Rung #1	1-23
Rung #2	1-26
Step 8: Save a Project.....	1-28
Step 9: Write Project to the Do-more PLC	1-28
Step 10: Testing Project Using Data View	1-29
Accessing the Help File.....	1-31

Table of Contents

Chapter 2 - Do-more! H2 Series PLC Overview

Do-more H2 Series PLC Overview.....	2-2
Do-more/DL205 System Compatibility	2-3
Communications	2-4

Chapter 3 - Specifications: CPU Modules

CPU Specifications	3-2
CPU General Specifications	3-2
Communications Ports Specifications	3-4
Port 1 Specifications (USB)	3-4
Port 2 Specifications (Serial)	3-4
Port 3 Specifications (Ethernet)	3-5
Ethernet Expansion I/O	3-6
Status Indicators	3-8
Mode Switch Functions	3-8
DIP Switch Specifications	3-9
Battery Replacement	3-12

Chapter 4 - Specifications: Base Units

Base Unit Overview	4-2
Choosing a Base Type	4-2
AC Powered Base Units	4-3
24VDC Powered Base Units.....	4-4
125VDC Powered Base Units.....	4-5
Power Budget	4-6
Power Budget Example	4-6
Power Requirements.....	4-7

Chapter 5 - Specifications: Discrete I/O Modules

Discrete I/O Modules Overview	5-3
Discrete Input Modules	5-3
Discrete Output Modules	5-4
Discrete Input/Output Module	5-4

D2-08ND3, DC Input	5-5
D2-16ND3-2, DC Input	5-6
D2-32ND3, DC Input.....	5-7
D2-32ND3-2, DC Input.....	5-8
D2-08NA-1, AC Input	5-9
D2-08NA-2, AC Input.....	5-10
D2-16NA, AC Input.....	5-11
D2-04TD1, DC Output.....	5-12
D2-08TD1, DC Output	5-13
D2-08TD2, DC Output	5-14
D2-16TD1-2, DC Output.....	5-15
D2-16TD2-2, DC Output.....	5-16
F2-16TD1P, DC Output With Fault Protection	5-17
F2-16TD2P, DC Output with Fault Protection	5-19
D2-32TD1, DC Output	5-21
D2-32TD2, DC Output	5-22
F2-08TA, AC Output	5-23
D2-08TA, AC Output	5-24
D2-12TA, AC Output	5-25
D2-04TRS, Relay Output	5-26
D2-08TR, Relay Output	5-27
F2-08TR, Relay Output	5-28
F2-08TRS, Relay Output	5-29
D2-12TR, Relay Output	5-30
D2-08CDR, 4 pt. DC Input / 4pt. Relay Output	5-31

Chapter 6 - Specifications: Analog I/O Modules

Analog I/O Modules Overview.....	6-3
Analog Input Modules.....	6-3
Analog Output Modules.....	6-4

Table of Contents

Analog Input/Output Module.....	6-4
How to Access the Analog I/O Modules	6-5
F2-04AD-1(L) Analog Input	6-7
Setting the Module Jumpers.....	6-8
F2-04AD-1(L) Addressing	6-9
F2-04AD-2(L), Analog Input	6-10
Setting the Module Jumpers.....	6-11
F2-04AD-2(L) Addressing	6-12
F2-08AD-1, Analog Input.....	6-13
Setting the Module Jumpers.....	6-14
F2-08AD-1 Addressing.....	6-15
F2-08AD-2, Analog Input.....	6-16
Setting the Module Jumpers.....	6-17
F2-08AD-2 Addressing.....	6-18
F2-04RTD.....	6-19
Setting the Module Jumpers.....	6-20
F2-04RTD Addressing	6-22
F2-04THM	6-23
Setting the Module Jumpers.....	6-25
F2-02DA-1(L), Analog Output	6-29
F2-02DA-2(L), Analog Output	6-31
Unipolar Ranges	6-34
Bipolar Ranges.....	6-34
F2-02DAS-1, Analog Output.....	6-35
F2-02DAS-2, Analog Output.....	6-37
Setting the Module Jumpers.....	6-38
F2-08DA-1, Analog Output.....	6-40
F2-08DA-2, Analog Output.....	6-42
Setting the Module Jumpers.....	6-43
F2-4AD2DA, Analog Input/Output	6-45
Input.....	6-47
Output.....	6-47

F2-8AD4DA-1 Analog Input/Output	6-48
Input	6-51
Output	6-51
Input Configuration Using Do-more Designer Version 1.1 or Newer	6-52
Input Resolution Selection (WYn+4)	6-53
Input Track and Hold Selection (WYn+6).....	6-54
F2-8AD4DA-2 Analog Input/Output	6-55
Input	6-58
Output	6-58
Input Configuration Using Do-more Designer Version 1.1 or Newer	6-59
Input Resolution Selection (WYn+4)	6-60
Input and Output Range Selection (WYn+5)	6-61
Input Track and Hold Selection (WYn+6).....	6-62

Chapter 7 - Specifications: Specialty Modules

Specialty Modules Overview	7-3
Specialty Modules	7-3
H2-CTRIO(2)	7-5
H2-CTRIO(2) Overview.....	7-5
H2-CTRIO(2) Specifications	7-7
H2-CTRIO(2) LED Indicators	7-8
H2-CTRIO(2) Jumper Setup	7-9
H2-CTRIO.....	7-9
H2-CTRIO2.....	7-9
Wiring Information.....	7-10
PNP Field Device (source).....	7-10
NPN Field Device (sink).....	7-10
H2-CTRIO(2) Input Wiring Examples	7-11
TTL Quadrature Encoder Field Wiring.....	7-11
TTL Input Wiring Example	7-11
Quadrature Encoder Wiring Example	7-12
NPN Open Collector Device.....	7-12
PNP Open Collector Device.....	7-12
H2-CTRIO(2) Output Wiring Examples	7-13

Table of Contents

H2-ECOM100	7-14
H2-ECOM100 Overview	7-14
H2-ECOM100 Specifications.....	7-14
H2-ECOM100 LED Indicators	7-15
H2-ECOM100 Network Identifiers	7-15
H2-ECOM100 Network Layouts	7-18
H2-ECOM100 Network Cabling	7-19
H2-ERM(100)/ H2-EBC100*	7-22
H2-ERM(100) Overview.....	7-22
H2-ERM(100) Specifications	7-22
H2-ERM(100) LED Indicators	7-23
H2-EBC100 Overview	7-23
H2-EBC100 Specifications.....	7-23
H2-EBC100 LED Indicators	7-24
H2-ERM(100)/H2-EBC100 Network Identifiers.....	7-24
H2-ERM(100)/H2-EBC100 Network Layouts	7-27
H2-ERM(100)/H2-EBC100 Network Cabling.....	7-28
H2-SERIO(-4)	7-30
H2-SERIO(-4) Overview	7-30
H2-SERIO(-4) Specifications	7-32
H2-SERIO(-4) Wiring: RS-232.....	7-32
H2-SERIO-4 Wiring: RS-422/485.....	7-33
F2-08SIM, Input Simulator	7-34
F2-08SIM Specifications	7-34

Chapter 8 - Installation and Wiring

Safety Guidelines	8-3
Plan for Safety	8-3
Three Levels of Protection	8-4
Emergency Stops.....	8-4
Emergency Power Disconnect	8-5
Orderly System Shutdown.....	8-5
Class 1, Division 2, Approval	8-5

Mounting Guidelines.....	8-6
Base Dimensions	8-6
Panel Mounting and Layout	8-7
Enclosures	8-8
Environmental Specifications	8-9
Marine Use.....	8-9
Agency Approvals	8-9
24VDC Power Bases	8-9
Installing Bases for Do-more.....	8-10
Mounting the Base.....	8-10
Using Mounting Rails	8-10
Installing Components in the Base	8-11
Base Wiring Guidelines.....	8-12
Base Wiring	8-12
I/O Modules Position and Wiring	8-13
Slot Numbering.....	8-13
Module Placement Restrictions.....	8-13
Wiring the Different Module Connectors.....	8-14
I/O Wiring Checklist	8-15
ZIPLink Wiring System.....	8-16
I/O Wiring Strategies	8-18
PLC Isolation Boundaries	8-18
Powering I/O Circuits with the Auxiliary Supply	8-19
Powering I/O Circuits Using Separate Supplies	8-20
Sinking / Sourcing Concepts	8-21
I/O "Common" Terminal Concepts	8-22
Connecting DC I/O to "Solid State" Field Devices.....	8-23
Solid State Input Sensors.....	8-23
Solid State Output Loads.....	8-23
Relay Output Guidelines.....	8-25
Relay Outputs – Transient Suppression for Inductive Loads in a Control System.....	8-26

Table of Contents

Appendix A - Do-more Product Weight Table

Do-more Product Weight Table	A-2
------------------------------------	-----

Appendix B - European Union Directives (CE)

European Union (EU) Directives	B-2
Member Countries	B-2
Applicable Directives	B-2
Compliance.....	B-2
General Safety	B-3
Other Sources of Information	B-4
Basic EMC Installation Guidelines	B-5
Enclosures	B-5
Electrostatic Discharge (ESD).....	B-5
AC Mains Filters	B-6
Suppression and Fusing.....	B-6
Internal Enclosure Grounding.....	B-6
Equipotential Grounding	B-7
Communications and Shielded Cables	B-7
Analog and RS232 Cables	B-8
Multi-drop Cables	B-8
Shielded Cables within Enclosures.....	B-8
Analog Modules and RF Interference.....	B-9
Network Isolation.....	B-9
DC Powered Versions	B-9
Items Specific to the Do-more H2 Series PLC	B-10