

TABLE OF CONTENTS



Chapter 1: Getting Started	1-1
Manual Overview	1-2
Overview of this Publication	1-2
Other Reference Materials	1-2
Who Should Read This Manual	1-2
Technical Support	1-2
Special Symbols	1-2
WinPLC Overview	1-3
Features Depend on Software Implementation	1-3
The WinPLC LEDs	1-4
Inserting the H2-WPLCx into the DL205 Base	1-4
DL205 Power Wiring and Grounding	1-5
10BaseT Network Cabling	1-6
10BaseT Connections	1-6
10BaseT	1-6
Maximum Ethernet Cable Length	1-7
H2-WPLC-xx Serial Port Pinouts	1-7
Power Budget for the DL205 with H2-WPLC1-xx	1-8
Managing your Power Resource	1-8
WinPLC Power Specifications	1-8
DL205 Module Power Requirements	1-9
Power Budget Calculation Example	1-10
Power Budget Calculation Worksheet	1-11
Locating the Ethernet Address Label	1-12
Ethernet Address	1-12

Table of Contents

Setting Up the WinPLC	1-12
Diagnosing Network Cable Problems	1-13
Chapter 2: Workbench Utility Operation	2-1
WinPLC Workbench Overview	2-2
Configuring Your WinPLC	2-2
PC Setup	2-2
Catching the WinPLC: Using Workbench To Find Your WinPLC Using its Ethernet (MAC) Address	2-3
Setting the TCP/IP Communications	2-4
Monitoring the I/O	2-7
Discrete Input Modules	2-8
Discrete Output Modules	2-8
Analog Input Modules	2-9
Analog Output Modules	2-9
Test Applications Utility	2-10
Update OS Utility	2-10
Chapter 3: Serial I/O Module Installation and Operation (Using T & D Ver. 6.0 or Later)	3-1
H2-SERIO(-4) Overview	3-2
The Scope Of This Chapter	3-2
Add Serial Ports To Your WinPLC or EBC(100)	3-2
Setting Communication Parameters Using Think & Do	3-3
Specifications	3-3
H2-SERIO(-4) Wiring: RS-232	3-4
H2-SERIO-4 Wiring: RS-422/485	3-4
Using Think & Do to Set Serial Port Parameters	3-5
Installing The H2-SERIO(-4)	3-5
Setting the WinPLC As the Runtime Target	3-5
Using Think & Do ConnectivityCenter to Set Up the Serial I/O Module	3-6
Adding The Serial I/O Module Driver	3-6
Connecting To The WinPLC	3-7

Setting The Serial Port Parameters	3-8
Expand The Window Pane	3-8
Appendix A: Using the ESP Utility to Set Up the WinPLC When Using Think & Do Ver. 5.2 or 5.3	A-1
Using the Think & Do ESP Utility to Set Up the WinPLC	A-2
Check Think & Do Version First	A-2
TargetPicker	A-3
Ethernet or MAC Address	A-3
WinPLC Name is Required	A-4
IP Address is Required	A-4
Cycle Power After Assigning IP Address	A-5
Select, Exit, You're Connected	A-5
Appendix B: Serial I/O Module Installation / Operation When Using T & D Ver. 5.2 or 5.3	B-1
H2-SERIO(-4) Overview	B-2
The Scope Of This Appendix	B-2
Add Serial Ports To Your WinPLC or EBC(100)	B-2
Setting Communication Parameters Using Think & Do	B-3
Specifications	B-3
H2-SERIO(-4) Wiring: RS-232	B-4
H2-SERIO-4 Wiring: RS-422/485	B-4
Using Think & Do to Set Serial Port Parameters	B-5
Check Think & Do Version First	B-5
New Project Using H2-SERIO Module	B-5
Connecting to the WinPLC	B-6
Setting Serial Port Parameters	B-8
Expand the Window Pane	B-8

Notes