



TABLE OF CONTENTS

Chapter 1: Getting Started	1-1
Manual Overview	1-2
Overview of this Publication	1-2
Other Reference Materials	1-2
Who Should Read This Manual	1-2
Technical Support	1-2
Special Symbols	1-2
WinPLC Overview	1-3
Features Depend on Software Implementation	1-3
The WinPLC LEDs	1-4
Inserting the H2-WPLCx into the DL205 Base	1-4
DL205 Power Wiring and Grounding	1-5
10BaseT Network Cabling	1-6
10BaseT Connections	1-6
10BaseT	1-6
Maximum Ethernet Cable Length	1-7
H2-WPLC-xx Serial Port Pinouts	1-7
Power Budget for the DL205 with H2-WPLC1-xx	1-8
Managing your Power Resource	1-8
WinPLC Power Specifications	1-8
DL205 Module Power Requirements	1-9
Power Budget Calculation Example	1-10
Power Budget Calculation Worksheet	1-11
Locating the Ethernet Address Label	1-12
Ethernet Address	1-12

Setting Up the WinPLC	1-12
Diagnosing Network Cable Problems	1-13
Chapter 2: Workbench Utility Operation	2-1
WinPLC Workbench Overview	2-2
Configuring Your WinPLC	2-2
PC Setup	2-2
Catching the WinPLC: Using Workbench To Find Your WinPLC	
Using its Ethernet (MAC) Address	2-3
Setting the TCP/IP Communications	2-4
Monitoring the I/O	2-7
Discrete Input Modules	2-8
Discrete Output Modules	2-8
Analog Input Modules	2-9
Analog Output Modules	2-9
Test Applications Utility	2-10
Update OS Utility	2-10
Chapter 3: Serial I/O Module Installation and Operation	
(Using T & D Ver. 6.0 or Later)	3-1
H2-SERIO Overview	3-2
The Scope Of This Manual	3-2
Add Serial Ports To Your WinPLC	3-2
As Many As Ten Serial Ports	3-2
Setting Communication Parameters Using Think & Do	3-2
RS-232 Wiring	3-2
Using Think & Do to Set Serial Port Parameters	3-3
Installing The H2-SERIO	3-3
Setting the WinPLC As Ahe Runtime Target	3-4
Using Think & Do ConnectivityCenter to Set	
Up the Serial I/O Module	3-5
Adding The Serial I/O Module Driver	3-5
Connecting To The WinPLC	3-6

Setting The Serial Port Parameters	.3-7
Expand The Window Pane	.3-7

Appendix A: Using the ESP Utility to Set Up the WinPLC When Using Think & Do Ver. 5.2 or 5.3A-1

Using the Think & Do ESP Utility to Set Up the WinPLC	.A-2
Check Think & Do Version First	.A-2
TargetPicker	.A-3
Ethernet or MAC Address	.A-3
WinPLC Name is Required	.A-4
IP Address is Required	.A-4
Cycle Power After Assigning IP Address	.A-5
Select, Exit, You're Connected	.A-5

Appendix B: Serial I/O Module Installation / Operation When Using T & D Ver. 5.2 or 5.3B-1

H2-SERIO Overview	.B-2
Add Serial Ports to Your WinPLC	.B-2
As Many as Ten Serial Ports	.B-2
Setting Communication Parameters Using Think & Do	.B-2
RS-232 Wiring	.B-2
Using Think & Do to Set Serial Port Parameters	.B-3
Check Think & Do Version First	.B-3
New Project Using H2-SERIO Module	.B-3
Connecting to the WinPLC	.B-4
Setting Serial Port Parameters	.B-6
Expand the Window Pane	.B-6