
DNRR

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

BUL86928 REV. **A**

PAGE 1 OF 1

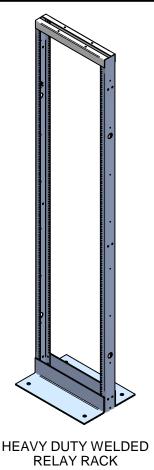



LOADING RACK SYSTEM

NOTE: When loading equipment into the enclosure or rack system ensure weight is distributed so that heavier loads are placed towards the bottom of the rack to avoid unstable conditions.

HEAVY DUTY RELAY RACK

Maximum Weight Capacity: 1500 lb

NOTE: Optional Rack Bolt-Down Kit includes hardware to secure the rack to the floor for stability and safety.

NOTE: PROTECTIVE EARTH TERMINALS (PET) ARE LABELLED WITH THE PROPER SYMBOL SHOWN IN FIGURE 1 AND ARE THE ONLY TERMINALS TO WHICH THE PROTECTIVE EARTH GROUND CONNECTION SHALL BE ATTACHED TO.





IMPORTANT SAFETY CAUTIONS

NOTE: Read all instructions before installing and using the product.



Installation and assembly must be performed by qualified personnel.



Always fully mount and secure enclosure or rack system before loading equipment.



Ensure that the floor/wall structure is able to withstand the weight of the cabinet while fully loaded.



Evenly distribute all mounted loads and equipment to ensure stability within the system.



Route all chords and cables away from moving parts and all possible pinch points.



To reduce risk of personal injury and product damage always ensure a a sufficient amount of personnel are present when loading, unloading, and moving the enclosure or rack system.



Ensure unit is plumb and level for proper operation.



Suitable for mounting on concrete or other noncombustible surface only.



visit our website:
visitez notre site Web:



HAMMOND MANUFACTURING®