


LOADING RACK SYSTEM

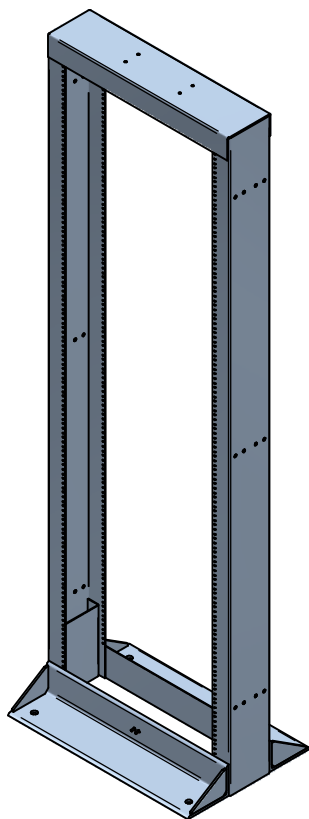

DRZ42377 SEISMIC RELAY RACK

NOTE: When loading equipment into the enclosure or rack system ensure weight is distributed so that heavier loads are placed towards the bottom of the rack to avoid unstable conditions.

Maximum Weight Capacity: 2000 lb

SEISMIC RELAY RACK WEIGHT LOAD

Maximum Weight Capacity: 800 lb

NOTE: Seismic weight load rating is only applicable when the rack has been secured using the seismic bolt down kit: C4K-Z4

NOTE: PROTECTIVE EARTH TERMINALS (PET) ARE LABELLED WITH THE PROPER SYMBOL SHOWN IN FIGURE 1 AND ARE THE ONLY TERMINALS TO WHICH THE PROTECTIVE EARTH GROUND CONNECTION SHALL BE ATTACHED TO.









NOTE: ALL PROTECTIVE EARTH AND BONDING CONNECTIONS SHALL BE IN ACCORDANCE WITH ARTICLE 250 OF THE NATIONAL ELECTRIC CODE.



FIGURE 1

IMPORTANT SAFETY CAUTIONS

NOTE: Read all instructions before installing and using the product.

-  Installation and assembly must be performed by qualified personnel.
-  Always fully mount and secure enclosure or rack system before loading equipment.
-  Ensure that the floor/wall structure is able to withstand the weight of the cabinet while fully loaded.
-  Evenly distribute all mounted loads and equipment to ensure stability within the system.
-  Route all chords and cables away from moving parts and all possible pinch points.
-  To reduce risk of personal injury and product damage always ensure a sufficient amount of personnel are present when loading, unloading, and moving the enclosure or rack system.
-  Ensure unit is plumb and level for proper operation.
-  Suitable for mounting on concrete or other noncombustible surface only.

TOOL BOX



BOÎTE À OUTILS

NO TOOLS REQUIRED



visit our website: www.hammondmfg.com
visitez notre site Web: